

Version 1.0

---

November 24 , 2023



## ***Instructions Before Using the Vehicle***

---

<i>Introduction</i>	<i>4</i>
<i>Vehicle Identification Information</i>	<i>7</i>
<i>Instructions for Use of Hybrid Vehicle*</i>	<i>9</i>

# INSTRUCTIONS BEFORE USING THE VEHICLE

---

## Introduction

### The Owner's Handbook

This Handbook describes all of the vehicles and standard equipment specification within the model range. Some information may be inapplicable to your individual model.

If you have any questions about the operation and parameters of the vehicle, please contact an MG Authorised Repairer will be glad to advise you.

The illustrations in the Owner's Handbook are for reference only.

The information contained in this Handbook may vary slightly depending on the vehicle configuration, software version and sales regions.

### Status at Time of Printing

MG operates a policy of constant product improvement and therefore reserves the right to change specifications without notice at any time.

Whilst every effort is made to ensure complete accuracy of the information in this publication, no liabilities for inaccuracies or the consequences thereof, including loss or

damage to property, or injury to persons, can be accepted by the manufacturer or the MG Authorised Repairer who supplied the publication, except in respect of personal injury caused by the negligence of the manufacturer or the MG Authorised Repairer .

### Warranty and Service

Please consult the owners section at MG website for the warranty terms and conditions, warranty statement, exemptions and service item renewal schedule.

# INSTRUCTIONS BEFORE USING THE VEHICLE

## Symbols Used

The following symbols used within the handbook call your attention to specific types of information.

### Warning



*This warning symbol identifies procedures that must be followed precisely, or information that must be considered with great care, in order to reduce the risk of personal injury or serious damage to the car.*

### IMPORTANT

#### IMPORTANT

The statements stated here must be followed strictly, otherwise your car could be damaged.

### Note

**Note:** *This describes helpful information.*



This symbol indicates parts described must be disposed of by authorised persons or bodies to protect the environment.

### Asterisk

An asterisk (\*) appearing after the title or the text, identifies features or items of equipment that are only fitted to some models, and may not be fitted on the vehicle your purchased.

### Illustration Information



Identifies components being explained.



Identifies movement of components being explained.

# INSTRUCTIONS BEFORE USING THE VEHICLE

---

## In an Emergency

### IMPORTANT

Remember the breakdown safety code

If a breakdown occurs while travelling:



- Wherever possible, consistent with road safety and traffic conditions, the car should be moved off the main thoroughfare, preferably into a lay-by. If a breakdown occurs on a motorway, pull well over to the inside of the hard shoulder.
- Switch on hazard lights.
- If available, position a warning triangle or a flashing amber light 50 to 150 metres (150 to 500 ft) behind your vehicle to warn approaching traffic. Note it is a legal requirement of some countries that a warning triangle is carried in the vehicle, if in doubt consult the local highways agency for further information.
- Consider evacuating passengers through nearside doors onto the verge to reduce risk of injury in the event of collision.

# INSTRUCTIONS BEFORE USING THE VEHICLE

## Vehicle Identification Information

## Vehicle Identification Markings (HEV)

### Vehicle Identification Markings (Gasoline)

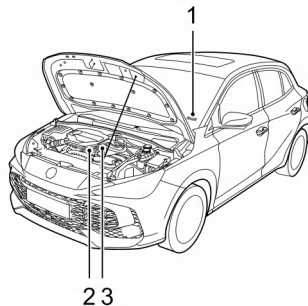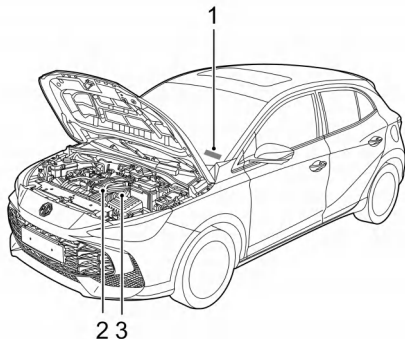

- 1 Vehicle Identification Number (VIN)
- 2 Engine Number
- 3 Transmission Number

When communicating with an MG Authorised Repairer, always quote the Vehicle Identification Number (VIN) . If the engine or transmission is involved, it may be required to provide the identification numbers of these assemblies.

# INSTRUCTIONS BEFORE USING THE VEHICLE

## Location of Vehicle Identification Markings

### **Vehicle Identification Number (VIN) Location**

- On the floor under the front passenger seat;
- Stamped on a plate visible through the bottom left hand corner of the windscreen;
- On the identification plate;
- On the inner side of the tailgate visible by opening the tailgate.

**Note:** *The DLC is located in the driver footwell above the accelerator pedal. The VIN information can be extracted from the vehicle using the approved diagnostic equipment.*

### **Engine Number Location**


Stamped on the front left of the engine (view from the front of the engine).

### **Transmission Number Location**

On the surface of the transmission housing in the engine compartment or on the surface of the transmission valve body cover. The transmission numbers of certain models are only visible by raising the vehicle, please contact a local Authorised Repairer.

## Vehicle Identification Plate

The Vehicle Identification Label is located at the lower side of right side the B pillar, it contains the VIN, engine type, trim and paint codes, along with other important vehicle details.

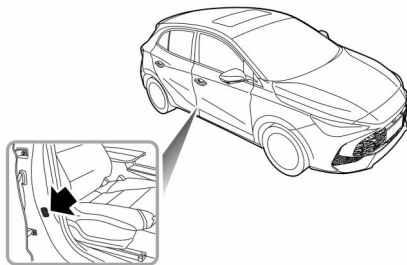



# INSTRUCTIONS BEFORE USING THE VEHICLE

## Instructions for Use of Hybrid Vehicle\*

### Effects of Ambient Temperature

Extremely high or low temperatures will affect the performance of the high-voltage battery pack and the vehicle. It is recommended that where possible the vehicle should be used within the temperature range of -30°C~55°C . This will ensure that the vehicle is in the optimum working state, and help extend the service life of the high-voltage battery pack.

## Instructions for High Voltage Battery Pack Recycling



***If you decide not to use the recommended MG Authorised Repairer to dispose of your high voltage battery, the responsibility of the consequences of environmental pollution or accidents must be borne by the owner.***

The high-voltage battery pack contains several lithium based battery cells. Arbitrary disposal may cause pollution, hazard and damage to the environment. The high-voltage battery pack **MUST** be recycled by an MG Authorised Repairer or a professional approved dismantling agent. Please refer to the following information and requirements.

- **ONLY** qualified personnel should work with the high voltage system - there is danger of DEATH.
- High voltage safety: the high-voltage battery pack contains high voltage components such as lithium battery packs and high voltage wiring harness; **DO NOT** attempt to dismantle any area of this system, suitably trained professional staff must observe insulation safety protection before working on or near the high voltage system.

## INSTRUCTIONS BEFORE USING THE VEHICLE

---

- **Transportation:** The high-voltage battery pack is classed as a Category 9 hazardous material and must be transported by vehicles qualified in transporting Category 9 hazardous materials.
- **Storage:** All HV components (including batteries) should be stored at room temperature and in a dry environment. They must be kept away from dangerous sources, such as flammable objects, heat and water sources.

It is strongly recommended that the used high-voltage battery pack generated from vehicle scrappage or any other reasons should be disposed of by an MG Authorised Repairer. Please consult an MG Authorised Repairer for more details.

### Precautions in the Event of an Accident



***Ensure the vehicle is in P gear and the vehicle power system/ignition is OFF.***



***If any cables on the vehicle are exposed, in order to prevent electric shock or even death DO NOT make any contact with any cable.***



***If the vehicle catches fire, and the fire is small and slow, a carbon dioxide extinguisher can be used to extinguish the fire, and contact the fire services as soon as possible; if the fire is large and spreading quickly, immediately evacuate the vehicle and contact the fire services immediately.***



***If the vehicle is involved in a collision, it cannot be re-started, the negative cable of 12V battery and Manual Service Disconnect (MSD) MUST be disconnected prior to rescue.***

# INSTRUCTIONS BEFORE USING THE VEHICLE



*When the vehicle is completely or partially immersed in water, switch off the vehicle power system and evacuate the car immediately. The negative cable of 12V battery and Manual Service Disconnect (MSD) MUST be disconnected prior to rescue or as soon as the vehicle is refloated/removed from the water. Observe the water/vehicle for any abnormal signs such as excessive bubbles or noises, this may indicate battery short circuit issues. If no signs are evident, there should not be a shock risk from the bodywork and recovery can commence.*



*After the accident is resolved, please contact an MG Authorised Repairer for maintenance.*

## High Voltage System



*All high voltage components have warning labels attached - please observe these warnings and any requirements when operating within or close to these areas.*




*ONLY qualified personnel should work on, or with, the high voltage system - there is danger of DEATH.*

# INSTRUCTIONS BEFORE USING THE VEHICLE

---

The high voltage system component layout is shown below:

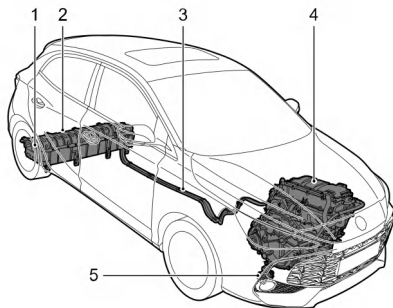

- 1 Manual Service Disconnect (MSD)
- 2 High Voltage Battery (ESS)
- 3 High Voltage Harness
- 4 Electric Drive Transmission
- 5 Electric A/C Compressor

# INSTRUCTIONS BEFORE USING THE VEHICLE

---

## Crash Outage Control

If a serious collision occurs, the vehicle will automatically cut off the high-voltage output to ensure personal safety.



## ***Brief Introduction to Vehicle Functions***

---


<i>Instrument Pack</i>	<i>16</i>
<i>Warning Lights and Indicators</i>	<i>21</i>
<i>Lights and Switches</i>	<i>35</i>
<i>Wipers and Washers</i>	<i>43</i>
<i>Horn</i>	<i>47</i>
<i>Rearview Mirror</i>	<i>48</i>
<i>Windows</i>	<i>51</i>
<i>Sunroof*</i>	<i>54</i>
<i>Sunvisor</i>	<i>57</i>
<i>Interior Lighting</i>	<i>58</i>
<i>Power Socket</i>	<i>60</i>
<i>Storage Devices</i>	<i>63</i>
<i>Cup Holder</i>	<i>66</i>

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Instrument Pack

### Instrument Message Display Operation

The message centre function can be selected when the vehicle is powered on by using the buttons on the right hand side of the multifunction steering wheel as follows :

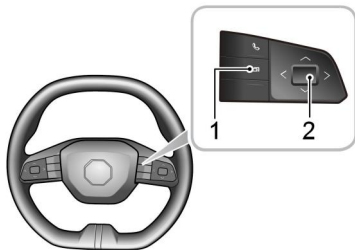

#### 1 Infotainment/Instrumentation Switching Button

The Infotainment/Instrumentation Button is a multi-use key. Pressing this button will switch control

between the infotainment system and instrument pack.


#### 2 Function Adjustment Button (OK button)

- Push the button up, down, left and right to switch the items displayed in the message centre.
- Push the button up and down to make adjustments.
- Short press the button to confirm, or long press to reset.



# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Instrument Pack - Type A (HEV Models)

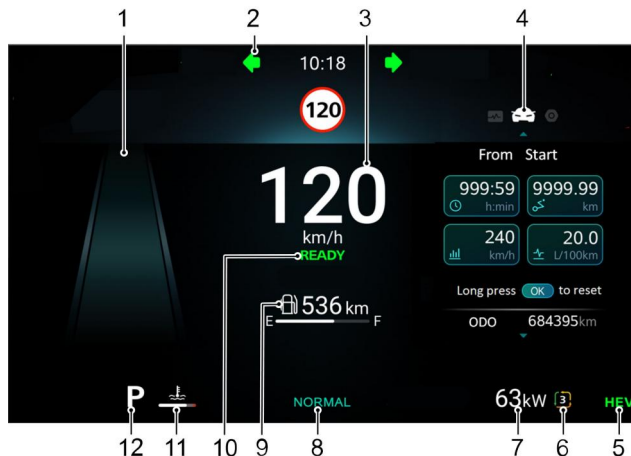

- 1 Active Safety
- 2 Warning Lights and Indicators
- 3 Speedometer
- 4 Message Centre
- 5 HEV mode
- 6 Energy recovery mode
- 7 Power meter
- 8 Driving mode
- 9 Fuel Gauge and Driving Range
- 10 Power system status
- 11 Engine Coolant Temperature
- 12 Gear Display

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Instrument Pack - Type B (Gasoline Models)




- 1 Active Safety
- 2 Warning Lights and Indicators
- 3 Speedometer
- 4 Message Centre
- 5 Tachometer
- 6 Driving mode\*
- 7 Fuel Gauge and Driving Range
- 8 Engine Coolant Temperature
- 9 Gear Display\*

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Message Centre

The message centre provides the followings:

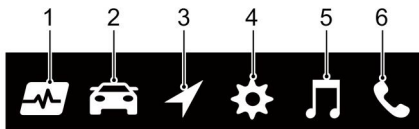

- 1 Health Centre
- 2 Trip Computer
- 3 Navigation\*
- 4 Settings
- 5 Media\*
- 6 Bluetooth phone\*

## Health Centre

- Tyre Pressure Monitoring: displays the current tyre pressure status.
- Low-voltage Battery: displays the 12V battery voltage.
- Warning Message: displays the failure messages or important notes of the current car.

## Trip Computer

The following information will be displayed on the trip computer:

- From Start: displays the driving distance, trip time, average speed and average energy consumption since start. When the vehicle is powered off for a period of time, these values will be reset. It can also be reset by long pressing the OK button.
- Accumulated Total: displays the driving distance, trip time, average speed and average energy consumption since the last reset. It can be reset by long pressing the OK button.
- Odometer : Displays the total distance the car has travelled.
- Power meter\*
- Energy flow\*
- Accelerogram\*: displayed when track mode is on.

## Navigation\*

Display navigation information from the entertainment system.

## Settings

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

---

- **Brightness Level\***: displays and adjusts backlight brightness.
- **OverSpeed Threshold\*** : sets the speed limit value for overspeed warning.
- **Next service**: displays the mileage remaining until the next scheduled service.  
Long press the OK button to reset.
- **Time Setting\*** : sets the time clock, etc.
- **Unit Settings\*** : sets units for distance and tyre pressure display.
- **Language\*** : sets language.

### **Media\***

Displays any multimedia messages from the infotainment system.

### **Bluetooth phone\***

Displays any Bluetooth phone information from the entertainment system.

### **Warning Message**

The message centre in the instrument pack displays any warning messages via a pop-up box. The warning messages are mainly classified into:

- Operation Instructions
- System State Prompts
- System Malfunction Alert

Please follow the text prompts or refer to the relevant control system sections for the failure cause, actions and appropriate solutions.





# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

2






## Warning Lights and Indicators

When the vehicle is starting or traveling, if the warning lights or indicators appear in the instrument display, it indicates that the relevant system is in a certain state or is faulty. Some warning lights illuminate or flash with warning tones or prompt message.

Please carefully read the following instructions to understand the meaning of relevant warning lights and indicators. In case of a failure, please take any necessary actions in an appropriate time and contact an MG Authorised Repairer for service as soon as possible.




Name	Icon	Description
Dipped Beam Indicator		Dipped beam headlamp is turned on.
Main Beam Indicator		Main beam headlamp is on.
Automatic Headlamp Indicator*		The auto headlamp function is enabled.
Side Lamp Indicator		Side lamps are on.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS







Rear Fog Lamp Indicator		The rear fog lamps are turned on.
Direction Indicator Lamp		<p>When the left or right turn signal lamp flashes, the direction indicator lamp on the corresponding side also flashes. If the hazard warning lamps are turned on, both direction indicator lamps will flash simultaneously.</p> <p>If either direction indicator lamp in the instrument pack flashes very rapidly, it indicates the turn signal lamp on the corresponding side has a failure.</p>
Airbag Warning Lamp		If this lamp illuminates or fails to extinguish, it indicates a failure in the SRS or seat belt. Stop the car as soon as safety permits and power off the vehicle. There may be a risk that the SRS system or seat belt is not able to work properly if a crash accident occurs.
Seat Belt Unfastened Warning Lamp		If this lamp illuminates or flashes, it indicates that the seat belt for an occupied front or rear seat remains unfastened.
Anti-theft System Warning Lamp		If this lamp illuminates, it indicates that no valid key is detected, in which case please use the correct key, or put the smart key in the alternative starting position. For details, refer to "Alternative Starting Procedure" in "Starting and Driving" section.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

2

<p>Tyre Pressure Monitoring System (TPMS) Warning Lamp</p>		<p>If this lamp illuminates, it indicates that a tyre pressure is low. Please check the tyre pressure.</p> <p>If this lamp flashes and then remains ON after a period of time, it indicates the system has a failure.</p>
<p>Electric Power Steering System (EPS) Warning Lamp</p>		<p>If this lamp illuminates, it indicates that the electric power steering system has a general failure, and its performance is reduced. If the lamp still illuminates after restarting the vehicle and driving for a short while, please contact an MG Authorised Repairer immediately.</p>
		<p>If this lamp illuminates, it indicates that the electric power steering system has a general failure relevant to steering angle. If the lamp still illuminates after restarting the vehicle and driving for a short while, please contact an MG Authorised Repairer immediately.</p> <p>If this lamp flashes, it indicates that the electric power steering system has a severe failure, making it hard to steer. Stop the car as soon as safety permits, power off the vehicle, and contact an MG Authorised Repairer urgently.</p>





## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

Dynamic Stability Control/ Traction Control System Warning Lamp		<p>If this lamp illuminates, it indicates that the dynamic stability control system/traction control system has failed.</p> <p>If this lamp flashes while driving, it indicates that the system is operating to assist the driver.</p>
Dynamic Stability Control/Traction Control System OFF Warning Lamp		The dynamic stability control/traction control system is turned off.
AUTO HOLD System Status Indicator Lamp		The AUTO HOLD system is operating to assist the driver.
		The AUTO HOLD system has a failure.
		The AUTO HOLD system function is activated in Standby state.
Electronic Parking Brake( EPB ) System Indicator Lamp*		<p>If this lamp illuminates, it indicates that the EPB is enabled.</p> <p>If this lamp flashes, it indicates that the vehicle is parked on a slope with an excessive angle or the electronic parking brake system has failed, in which case please park the vehicle on a suitable safe road.</p>







## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

2








Electronic Parking Brake ( EPB ) System Malfunction Indicator Lamp*		It indicates that the EPB system has a failure.
Brake System Malfunction Indicator Lamp		If this lamp illuminates it indicates that the brake system has a failure, please stop the car as soon as safety permits and switch the vehicle off.
ABS Malfunction Indicator Lamp		Anti-lock brake system fails. If an ABS failure occurs while driving, the ABS function will be disabled while normal braking will still be available.
Low-voltage Battery Charging System Malfunction Indicator Lamp		If this lamp flashes, it indicates low battery voltage, the prompt message will appear in the instrument pack. The system will then restrict operation or switch off some electrical appliances, please start the vehicle to charge the low-voltage battery.  If this lamp flashes, it indicates low battery voltage, the prompt message will appear in the instrument pack. The system will then restrict operation or switch off some electrical appliances, please start the vehicle to charge the low-voltage battery.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS





System Failure Message Indicator		Illumination of this warning lamp indicates that the vehicle has warning information stored within the instrument pack. Please view the failure message or important prompt message in the message centre. Refer to "Instrument Pack" in this section.
Adaptive Cruise Control System Indicator Lamp*		The adaptive cruise control system is activated and not in Standby state.
		The adaptive cruise control system is in Standby state.
		The adaptive cruise control system is activated.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

2



Speed Limit Assistance System Indicator Lamp*		Manual speed limit assistance system is in Standby state.
		If this lamp illuminates, it indicates that the manual speed limit assistance system is activated.  If this lamp flashes, it indicates that current speed is greater than the speed limit value.
		The intelligent speed limit assistance system is in Standby state.
		The intelligent speed limit assistance system is activated.
Constant Speed Cruise Control System Indicator Lamp*		The constant speed cruise control system is in Standby mode.
		The constant speed cruise control system is activated.
Cruise/Speed Limit System Malfunction Indicator Lamp		If this lamp illuminates the constant speed cruise control system, adaptive cruise control system or speed limit assistance system has detected a fault.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS







<p>Engine Coolant Temperature Warning Lamp</p>		<p>When the engine coolant temperature warning lamp illuminates red, it indicates that the coolant temperature is high. High engine coolant temperature could result in severe damage. Please stop the car as soon as safety permits, switch OFF the START/STOP Switch and contact an MG Authorised Repairer immediately.</p> <p>If this lamp flashes, it indicates that the coolant temperature sensor has a failure. Please stop the car as soon as safety permits.</p>
<p>Engine Malfunction Warning Lamp</p>		<p>If this lamp illuminates, it indicates that there are some faults that could seriously affect the engine performance. Please stop the vehicle as soon as safety permits, switch the power OFF and contact an MG Authorised Repairer immediately.</p>
<p>Engine Emissions Malfunction Warning</p>		<p>If an engine fault occurs that will effect engine performance and emissions after starting the vehicle, this lamp will illuminate. Please contact an MG Authorised Repairer as soon as possible.</p>
<p>Particulate Filter Warning Lamp</p>		<p>If this lamp illuminates after the vehicle has been started, or whilst it is being driven, it indicates that the particulate filter needs to be regenerated or is currently being regenerated</p> <p>If this lamp flashes after the vehicle has been started or whilst being driven, it indicates that the particulate filter is full. Seek assistance from an MG Authorised Repairer.</p>

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

2







Low Oil Pressure Warning Lamp		If this lamp illuminates after starting the vehicle, it indicates that the oil pressure is too low, which may result in severe engine damage. Please stop the vehicle as soon as safety permits and switch off the engine.
Speed Limit Sign Speed Indicator Lamp*		<p>“ NNN ” indicates the speed limit sign speed that has currently been identified. When the vehicle speed is greater than the speed limit value, the lamp will flash.</p> <p>“ — ” indicates the speed limit sign has not been recognized.</p>

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS






Speed Limit Sign Ancillary Information Warning Lamp*		The speed limit sign currently identified has ancillary information. Please check.
		The road sign speed limit was not recognized and currently only the sound alarm is turned off. After a period of time, the sound alarm off icon in the lower left corner disappears.
		The road sign speed limit was recognized and currently only the sound alarm is turned off. After a period of time, the sound alarm off icon in the lower left corner disappears.
		Recognize the conditional speed limit and only the sound alarm is currently turned off. After a period of time, the sound alarm off icon in the lower left corner disappears.
		Simultaneous shutdown of overspeed alarm and intelligent speed limit assist system.
		Overspeed alarm fault.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

2

Traffic Jam Assist System Indicator Lamp*		Traffic jam assist system is activated and not in Standby state.
		The traffic Jam assist system is in Standby state.
		The traffic Jam assist system is activated.
		The traffic Jam assist system has a failure.
Lane Keeping Assist System Indicator*		<p>If this lamp illuminates, it indicates that the lane keeping assist system has detected a fault or is switched off.</p> <p>If this lamp flashes, it indicates that the lane keeping function is activated.</p>
Forward Collision Assist System Indicator Lamp*		<p>If this lamp illuminates, it indicates any function of the forward collision assist system is disabled.</p> <p>When the functions of the forward collision assist system are fully enabled, if the lamp stays on, it indicates that forward collision assist system cannot work properly.</p>






## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

Rear Driving Assistance System Indicator*		If the rear driving assistance system is turned off, the radar is obscured, or the system malfunctions, the combination instrument panel will display corresponding prompt messages.
Power battery failure		This lamp will flash if the high voltage battery temperature is too high. Please stop the car as soon as safety permits, power off the vehicle, and leave the vehicle immediately. Contact an MG Authorised Repairer at the earliest opportunity.
Driving Power Limited Indicator		This lamp will illuminate if the vehicle power has been limited.
Motor Fault Warning Lamp		When the light is on, there is a malfunction in the electric drive transmission motor or power electronic box.
Low Fuel Warning Lamp		<p>If this lamp illuminates or flashes, it indicates that the fuel remaining in the fuel tank is low. If possible, please refuel before the low fuel warning lamp illuminates.</p> <p>When the fuel in the tank exceeds the low level alert line, this lamp will extinguish. If not, please contact an MG Authorised Repairer for service as soon as possible.</p>






## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

2

Driver Status Indicator*		When the driver monitoring system has failed or is temporarily unavailable, the status indicator remains illuminated in yellow. If driver fatigue or distraction is detected, the yellow warning status indicator lamp will flash.
ECO(Energy-saving Driving Mode Indicator)*		This light illuminates to indicate that the vehicle is in an energy-saving driving state.
Trailer Warning Lamp		A trailer lamp has failed.
Start Stop System Status Indication*		This light is constantly on to indicate that the start stop system is activated  The flashing light indicates that the start stop system has not met the shutdown conditions.
Start Stop System Fault Warning Lamp*		This light will illuminate constantly to indicate a malfunction has been detected in the start stop function.


## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

eCall SOS Indicator		The system is ready and an emergency service call (eCall) is in progress.
		The eCall system can send out a vehicle message to the call centre, but other eCall capabilities are limited due to a fault in the system.
		If the eCall system has failed and not operational, the indicator illuminates red.

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Lights and Switches

### Master Lighting

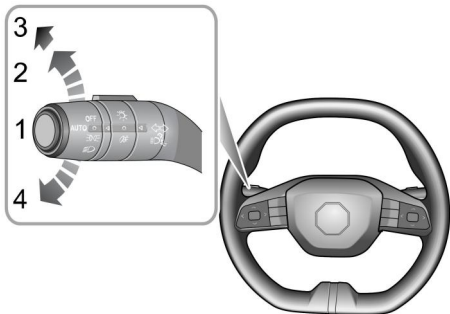

- 1 AUTO Lamp
- 2 Side Lamp/Switch and Backlight Illumination
- 3 Headlamp
- 4 AUTO Lamp Off

### AUTO Lamp

With the vehicle power is in the ACC position, the AUTO lighting system is active by default (position 1 ). The system will automatically switch the side lamps, switch illumination and backlights on and off according to the intensity of current ambient light.

With the vehicle power in the ON/READY/RUNNING position, the AUTO lighting system will automatically switch the dipped beam headlamps, side lamps, switch illumination and backlights and off according to the intensity of current ambient light.

**Note:** This function is realized by a sensor mounted in your vehicle to monitor the exterior light levels in real time. It is installed in the upper part of the dashboard near the windscreen. DO NOT mask or cover this area. Failure to adhere to this may result in the headlamps being turned on unnecessarily.

### Side Lamp/Switch Backlights

When the vehicle power is in the ACC position, rotate the master light switch to position 2 to switch on the side lamps, switch illumination and backlights backlights.

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

---

When the vehicle power is in the ON/READY/RUNNING position, rotate the master light switch to position 2 to switch on the daytime running lamps, rear side lamps, switch illumination and backlights.

With the vehicle power in the OFF position, if the side lamps are on and the driver's door is open, an audible alarm will sound. The message centre will display "Lights On".

## Headlamps

When the vehicle power is in the ON/READY/RUNNING position, rotate the master light switch to position 3 to switch on the dipped beam headlamps, side lamps, switch illumination and backlights.

## Light Off

Turn the master light switch to position 4 to switch off the AUTO lamp function (this is automatically reinstated on the next power up cycle). Release the switch, and it returns to position 1 automatically.

## Daytime Running Lamps

The daytime running lamps operate automatically when the vehicle power is in the ON/READY/RUNNING position. When the dipped beam is switched on, the daytime running lamps extinguish automatically.

## Welcome Light


When the vehicle is unlocked, the system will operate the dipped beams and rear lamps automatically to provide a welcome according to the current intensity of ambient light.

## Follow Me Home

After the vehicle power is turned off, pull the light lever towards the steering wheel, the Follow Me Home function is enabled. The dipped beams and side lamps will illuminate.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

### Headlamp Levelling

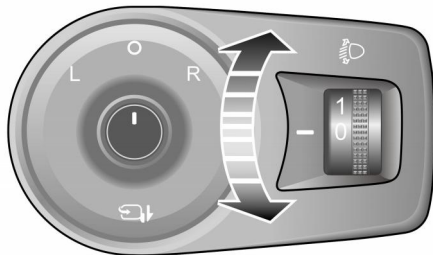

Location	Load
0	Driver, or driver & front passenger
1	All the seats occupied with no load in the trunk.
2	All the seats occupied plus an evenly distributed load in the trunk.
3	Driver only, plus an evenly distributed load in the trunk.



The headlamp levelling should be adjusted as per the following table according to the vehicle load.

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Main Beam Switch



*Take care not to dazzle oncoming vehicles when switching between the main and dipped beams.*

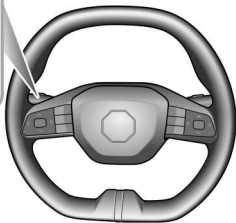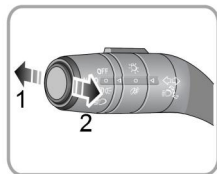

the instrument pack illuminates. Push or pull the lever ( 1 or 2 ) once again to switch to revert back to dipped beams.

## Main Beam Flash

To briefly flash the high beam on and off, pull the lever towards the steering wheel ( 2 ) and then release. 2 ) towards the steering wheel, and the main beams will flash.

## Smart Main Beam System\*



*The Automatic High Beam serves only as an auxiliary function. The driver must check the status of the front lamps, and turn on the front lamps when necessary.*

## Headlamp High/Low Beam Switching

With the vehicle power in the ON/READY/RUNNING position and the dipped beam headlamps illuminated, push the light stalk lever ( 1 ) towards the instrument panel to turn on the main beam, and the main beam indicator on

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS



*The Automatic High Beam may not operate normally (but is not limited to) in the following situations, so the main and dipped beams should be switched manually:*

- The windscreen is dirty, broken or obstructed by other objects blocking the view of the sensor.*
- The lamps of other vehicles are missing, damaged, blocked or cannot be detected due to weather and other reasons.*
- When pedestrians, non-motor vehicles and other objects with no obvious light or reflected light are encountered.*
- When the headlamps and tail lamps of other vehicles cannot be detected due to the sensor view being impaired due to undulating road conditions such as bends, dips or hills.*
- When the car is driving on a winding road or mountainous road.*
- The wiper switch is in the "Fast" position.*

The Smart main beam system is designed to detect the light intensity information of the vehicle in front using the vehicle forward camera and switch the main beam on or off when certain conditions are met. When the smart main beam system is enabled, the smart main beam indicator in the instrument pack illuminates. After the vehicle is started, the smart main beam system enters the ready state. Operation state can be set via the infotainment display.

In the case of automatic control, the system will automatically turn on the main beam when the surrounding environment is dark and there is no light detected from any vehicles ahead, or oncoming vehicles; when the surrounding environment is bright enough or the system detects the headlamps or tail lamps of the vehicle ahead or oncoming vehicles, the system will automatically turn off the main beam.

To enable the smart main beam system, the following conditions should be met:

- I The lighting lever switch is placed in the AUTO position and the dipped beams switched on via automatic control.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

- 2 The vehicle is running with the speed exceeding 25 mph ( 40 km/h).

If the following conditions are met, the vehicle will automatically exit the smart main beam system. If the system is disabled, pushing the main beam ON switch twice quickly towards the instrument panel can enable the smart main beam system again. The function can be disabled for three times only in a starting cycle, otherwise it cannot be enabled again in the current starting cycle:

- When the smart main beam system is enabled and the dipped beam lights are automatically turned on and the lighting system is manually switched to the mainbeam lights.
- When the smart main beam system is enabled and the main beam lights are automatically turned on and the lighting system is manually switched to the dipped beam lights.
- When the smart main beam system is enabled, the main beams are automatically turned on and the main beam flash switch is operated.


### IMPORTANT

The auto high beam function uses data from the front view camera, always keep the windscreen clean and free from residue in this area to maintain optimum performance of this system. Any damage in this area, such as stone chips must be repaired at the earliest convenience.



## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

### Direction Indicator Switch

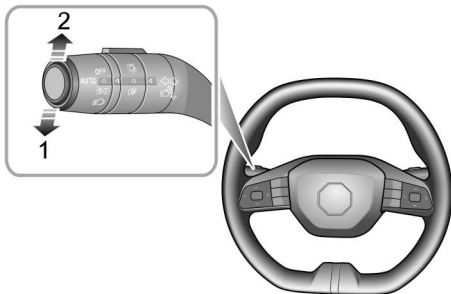


With the vehicle power is in the ON/READY/RUNNING position, move the lever down to indicate a LEFT turn ( 1 ). Move the lever up to indicate a RIGHT turn ( 2 ). The corresponding GREEN indicator lamp in the instrument pack will flash when the turning signal lamps are working.

Rotating the steering wheel will cancel the indicator operation (small movements of the steering wheel maynot operate the self cancelling). To indicate a lane change, move the lever briefly and release, the indicators will flash three times and then cancel.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

### Fog Lamps


In severe conditions (during foggy weather for instance), the fog lamps can provide additional light and improve the visibility of your car. Fog lights should only be used when visibility is below 100 m - other road users could be dazzled in clear conditions.

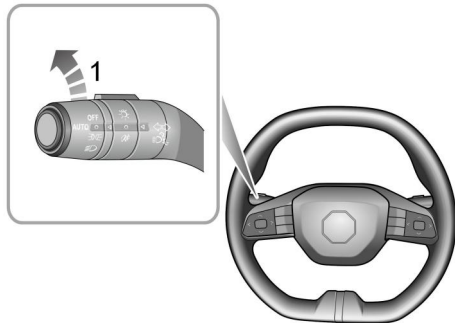

### Rear Fog Lamps

With the vehicle power in the ON/READY/RUNNING position and the headlamps turned on, rotate the switch to position I to turn on the rear fog lamps. The indicator illuminates on the instrument panel when the rear fog lamps are on.

### Hazard Warning Lamps


Press the hazard warning lamp button at the middle of the centre vents  to operate the hazard warning lamps. All turn signal lamps and direction indicator lamps will flash together. Press the button again to switch off the hazard warning lamp. All turn signal lamps and direction indicator lamps will stop flashing.

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

2

## Wipers and Washers

### Windscreen Wiper and Washer Operation

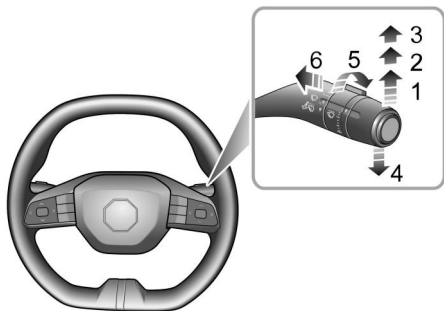

When the vehicle power is in the ACC/ON/READY/RUNNING position, the front wiper and washer will operate. Operate the lever to select different wiping modes:

- Automatic wipe ( 1 )
- Slow speed wipe ( 2 )

- Fast speed wipe ( 3 )
- Single wipe ( 4 )
- Automatic wipe speed adjustment\*/Rain sensor sensitivity adjustment\* ( 5 )
- Wash and wipe ( 6 )

### Intermittent and Automatic Wipe

By pushing the lever up to the intermittent/automatic wipe position ( 1 ), the wipers will operate automatically.

On models without a rain sensor, rotate the switch ( 5 ) to adjust the intermittent wiper delay. This delay will also change with the vehicle speed. As the vehicle speed increases, the wiping interval decreases. As the vehicle speed decreases, the wiping interval increases.

On models that feature a rain sensor, rotate the switch ( 5 ). As the sensitivity increases, the wiping interval decreases. The rain sensor is fitted in the interior rearview mirror base to detect varying amounts of water outside of the windscreen. With automatic wipe, the vehicle will adjust the wiping speed according to the signals provided by rain sensor.

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

**Note:** When increasing the sensitivity of rain sensor, the wiper will operate once immediately; if the rain sensor detects continuous rainwater, the wiper will keep working. When no rain is present, it is recommended to switch off automatic wipe.

## Slow Speed Wipe

By pushing the lever up to the slow speed wipe position ( 2 ), the wipers will operate slowly.

## Fast Speed Wipe

By pushing the lever up to the fast speed wipe position ( 3 ), the wipers will operate at fast speed.

## Single Wipe

Pressing the lever down to the single wipe position ( 4 ) and releasing will operate a single wipe. If the lever is held in single wipe position ( 4 ), the wipers will operate continuously until the lever is released.

**Note:** When the car is stationary, if the bonnet is opened, the front wiper/washer operation will be disabled.

### IMPORTANT

- Avoid operating the wipers on a dry windscreen.
- In freezing or extremely hot conditions, make sure that the wiper blades are not frozen or adhered to the windscreen.
- In winter, remove snow or ice from around the wiper arms and blades, including the wiped area of the screen.

## Wash and Wipe

Pulling the lever toward the steering wheel ( 6 ) will operate the front windscreen washers. After a short delay, the wipers will commence operating in conjunction with the washers.


**Note:** The wipers continue operating for three wipes after the lever switch is released. After several seconds, there will be a further wipe to remove any washer fluid from the windscreen.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

### IMPORTANT

If the washers fail to deliver the screen wash solution (dirt or ice may have blocked the jets), release the lever immediately. This will prevent the wipers from operating and the consequent risk of visibility being impaired by dirt smearing across the unwashed windscreen.

### Rear Window Wiper and Washer Operation\*

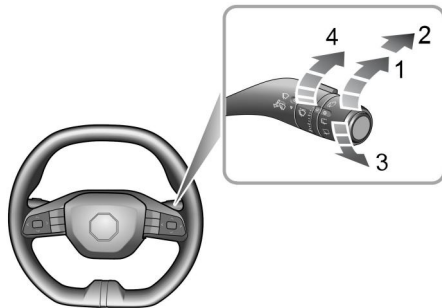

When the vehicle power is in the ACC/ON/READY/RUNNING position, the rear wiper and washer function is enabled. Operate the lever to select different wiping modes:

- Intermittent wipe ( 1 )
- Wash and wipe ( 2 or 3 )
- Wipe interval adjustment ( 4 )

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

---

## **Intermittent Wipe**

If the rear wiper switch is turned to intermittent wipe ( 1 ), the rear wiper will operate. It will complete 3 continuous wipes before changing to intermittent mode. The interval between the wipes can be increased/decreased via the switch ( 4 ).

## **Wash and Wipe**

If the rear wash and wipe ( 2 ) is selected, the rear wiper and washer will operate together, and the rear wiper will operate at a fast speed. If the switch is released to intermittent wipe ( 1 ), the rear washer will stop operating.

If the rear wipe and wash ( 3 ) is selected, the rear wiper and washer will operate together. If the switch is released to the off position, the rear wiper and washer stop operating. After several seconds, there will be a further wipe to remove any fluid draining down the screen.

**Note:** *When the tail gate is opened, rear wiper operations will be disabled.*

**Note:** *If the windscreen wipers are switched on, and Reverse gear is selected,, the rear wiper will operate.*


# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Horn

### IMPORTANT

To avoid accidents, please do not press with excessive force or hit the cover when operating the horn.

2

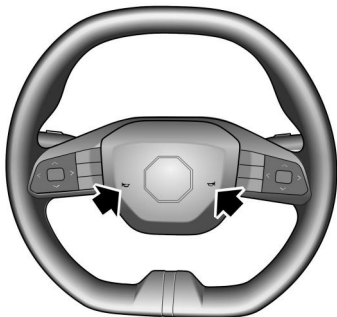

Press the horn button area on the steering wheel (as indicated by the arrow) to operate the horn.


**Note:** The horn switch area on the steering wheel is also the cover plate of the driver's airbag. The illustration shows the position of the horn (indicated by arrow), please ensure that you press in this area to avoid any potential conflict with the operation of the airbag.

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Rearview Mirror

The rearview mirrors consist of exterior rearview mirrors in the front of the vehicle, the left and right sides and interior rearview mirrors in the front of passenger compartment. They are used to reflect the situations behind or on both sides of the vehicle, thus expanding the driver's field of view.

The rearview mirrors are safety-critical parts. Proper use and reasonable mirror angle adjustment can improve driving safety and comfort.

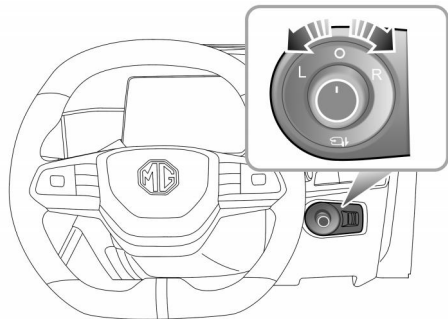

## Exterior Rearview Mirrors

The exterior rearview mirrors, as the widest parts mounted on the vehicle, are especially vulnerable in the event of a collision. The exterior rearview mirrors feature a manual or electric folding function, this helps avoid damage and allows folding when manoeuvring through narrow passages.

**Note:** *The vehicles or objects behind viewed in exterior rearview mirrors may appear further away than they actually are.*

## Electric Adjustment of Door Mirror Glass

The exterior rearview mirror glass adjustment switch is located under the instrument panel on the driver's side and the mirror adjustment function will work when the vehicle is powered on.

- Rotate the round knob in the middle to select left ( L ) or right ( R ).
- Move the knob in the desired direction to adjust the angle of the exterior mirror glass.




## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

2

- Upon completion of the adjustment, rotate the knob back to the central position, this will ensure no accidental adjustment of the mirror.

### Manual Folding \*

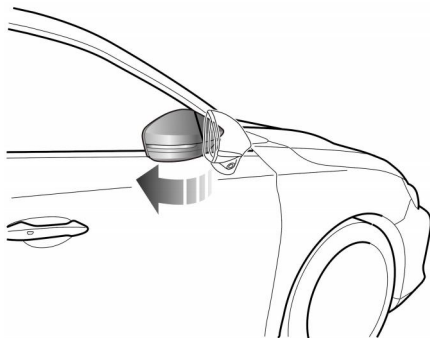

For vehicles fitted with the manual exterior rearview mirror folding option, the exterior mirrors can only be folded backwards manually and return to their original position by being pushed forward.

### Electric Folding of Door Mirror\*


For vehicles fitted with electric door mirror folding, When the vehicle is powered on, rotate the knob to the middle position ( O ) , and push the knob down. The door mirrors will be folded automatically. Pushing the knob downwards again will return the mirrors to their original position.

**Note:** While unlocking/locking the vehicle, the exterior rearview mirrors will be deployed/folded automatically.

**Note:** For vehicles equipped with electrical folding door mirrors, if the mirrors have been moved from their positions by manual or accidental means, they can be reset by operating the knob to complete fold and deployment one time.

### Mirror Glass Heating\*

The exterior rearview mirrors have integral heating elements which disperse ice or mist from the glass.

The heating elements operate while the Heated Rear Window is switched on, that is, only when the vehicle is running/powerd on, and the heated rear window is turned on  .

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

### IMPORTANT

- The electric adjustment and regulation of mirrors are operated using the electric switch, operating them directly by hand may result in the failure of related devices.
- Washing or flushing door mirrors with high pressure water jets or car washes may result in electrical motor failure.

### Interior Rearview Mirror

Before driving, adjust the body of the interior rearview mirror to achieve the best possible view. The anti-dazzle function of the interior rearview mirror helps reduce glare from the headlamps of following vehicles at night.

### Manual Anti-dazzle Interior Rearview Mirror



Move the lever at the base of the interior rearview mirror to change its angle, so as to achieve the anti-dazzle function. Normal visibility is restored by pulling the lever back again.

**Note:** *In some circumstances, the view reflected in a manual anti-dazzle mirror can confuse the driver as to the precise location of following vehicles.*

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Windows



*Please correctly operate the windows to avoid danger. The driver shall instruct passengers on how to use windows and tell them safety precautions.*




*Ensure children are kept clear when raising or lowering a window.*



***DO NOT** operate the power window controls continuously several times in a short time frame, otherwise the power window controls may be disabled to protect the motor. If this occurs, please wait a few seconds until the motor cools down. Do not disconnect negative battery during the time.*

## Power Operated Window Switch

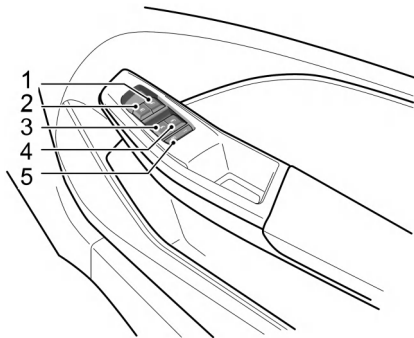


- 1 Front Right Window Switch
- 2 Front Left Window Switch
- 3 Rear Left Window Switch
- 4 Rear Right Window Switch
- 5 Rear Window Isolation Switch

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Window Operation

The electric windows can be operated when the vehicle is powered on (Doors should be closed during operation).

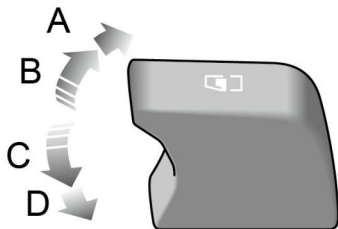

Press the window control switch ( 1 ~ 4 ) down to the 1st position (Position C ) to lower the window, and pull the switch up to the 1st position (Position B ) to raise the window. The window will stop moving as soon as the switch is released.

## One-Touch Down

Press the window control switch ( 1 ~ 4 ) down to the 2nd position (Position D ) and release, the window automatically descends to fully open. Window movement can be stopped at a desired position at any time by operating the corresponding switch during descent.

## One-Touch Up with Anti-pinch\*

Depending on vehicle specification, some windows may have the "One-Touch" Up and "Anti-pinch" function. Lifting the switch ( 1 ~ 4 ) to the 2nd position (Position A ) and releasing will automatically close the window completely. Window movement can be stopped at a desired position at any time by briefly operating the switch again during ascent.

The 'Anti-pinch' function is a safety feature which prevents the window from ascending and allows the window to descend automatically a certain distance if an obstacle is sensed.

**Note:** *The front and rear passenger windows can also be operated by individual window switch mounted on each door. If the rear window isolation switch has been activated, the window switches on rear doors will not work.*

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

---

### Rear Window Isolation Switch

Press the switch ( 5 ) to isolate the rear window controls (an indicator lamp in the switch illuminates), and press again to restore control.

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Sunroof\*

The sunroof assembly consists of the electric sunroof glass and the sunshade.

### Instructions for Use



***DO NOT allow passengers to lean out of an open sunroof whilst the vehicle is in motion. Injuries may occur from objects such as tree branches.***



***Safety of the vehicle occupants must be observed at all times. DO NOT allow limbs to be placed in the moving path of the sunroof at any time, injury may occur.***


- Avoid fully opening the sunroof during rain showers ;
- It is not recommended to open the sunroof at high speed;
- Where possible, please clean any residual water or raindrops off the sunroof prior to opening. Failure to do so may result in water entering the car ;
- DO NOT use abrasive materials to clean the sunroof glass. Use alcohol based solvent ;

- DO NOT hold the operating switch in the open/close position for any length of time after operation is complete, this could damage the electrical components ;
- Clean the sunroof regularly to maintain operation and performance. Visit an MG Authorised Repairer for service as required.

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Sunroof Operation

When the vehicle power is in the ACC or ON/RUNNING/READY position, the sunroof can be operated.

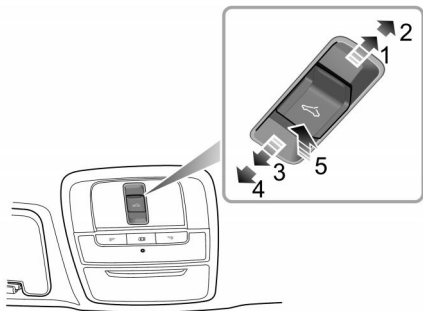

### Opening the sunroof

#### Tilt Open

Press the sunroof switch( 5 ), the rear edge of the sunroof will automatically tilt and open. You can stop

the movement of the sunroof at any time by pressing the sunroof switch again.

#### Slide Open

Push the sunroof switch backwards to the 1st position(1)and hold, the sunroof will manually slide open. You can stop the movement of the sunroof at any time by releasing the switch. Firmly push the sunroof switch backwards to the 2nd position(2)and then release, the sunroof will fully open automatically. You can stop the movement of the sunroof at any time by pushing the switch backwards again.

#### Closing the Sunroof

Push the sunroof switch frontwards to the 1st position(3)and hold, the sunroof will manually close. You can stop the movement of the sunroof at any time by releasing the switch. Firmly push the sunroof switch forwards to the 2nd position(4) , and then release, the sunroof will fully close automatically. You can stop the movement of the sunroof at any time by pushing the switch forwards again.

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

---

## "Anti-trap" Function\*

When the sunroof is being closed by using the one touch function, it will stop closing and open automatically after encountering an obstacle, allowing the obstacle to be removed.

**Note:** *The anti-trap function of sunroof glass only works when it is being closed by sliding.*

## Initialization of Sunroof

If power failure occurs whilst the sunroof glass is motion, or after the sunroof assembly or sunroof glass is replaced, it is required to carry out an initialization operation after power on.

Press the tilt-open switch of the sunroof to make the sunroof open completely, press the switch again for 5 seconds, until the sunroof glass vibrates accompanied with "click" sounds, release the switch to complete the sunroof initialization settings.

**Note:** *Failure to initialize the sunroof may cause the sunroof to operate incorrectly, or failure of anti-trap function, or failure to respond to some switch operations.*

## Thermal Protection

To prevent the sunroof motor from being overheated and damaged, the motor is designed with a thermal protection function.

After the thermal protection function is activated, the sunroof does not respond to any other operation except the closing operation. After the motor has cooled down and exits the thermal protection state, the sunroof can be operated normally until the next thermal protection event.




# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Sunvisor



*For safety, do not use vanity mirror on the driver side whilst driving.*

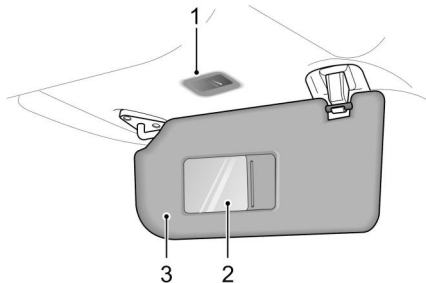


2

Sunvisors are arranged on the roof ahead of both the driver and the front passenger ( 3 ). The sunvisors are provided with vanity mirror ( 2 )<sup>\*</sup> and vanity mirror light ( 1 )<sup>\*</sup>.

Pull the sunvisor downward to use the vanity mirror. If the roof has vanity mirror lights, a vanity mirror light is switched on when the cover is opened, and it is switched off when the cover is closed.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

### Interior Lighting

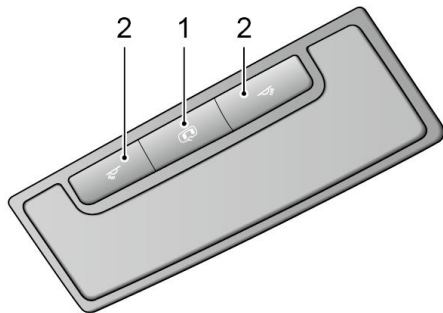

Press either of the switches ( 2 ) to turn the corresponding courtesy light on; press it again to turn off.

#### **AUTO ON Function**

Press the automatic courtesy lamp control switch ( 1 ) to turn on AUTO ON function; press it again to turn off the function.

When the AUTO ON function is enabled, the courtesy light illuminates automatically whenever any of the following occurs.

- The vehicle is unlocked.
- Any door is opened.
- The power supply is switched off when the vehicle equipped with a light sensor detects that the ambient light is in dark or the side lamp illuminates or the side lamp turns off for 30 seconds.

**Note:** *If a door is open for more than a certain period of time, the front interior lamp will be switched off automatically to avoid battery drain. In case of low battery, the courtesy light will extinguish earlier.*

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

### Rear Courtesy Lights\*

2



Press the switch (arrowed) to illuminate the rear courtesylights, press again to switch off.

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Power Socket



*Please ensure the socket lid is inserted when the power socket is not in use. This will ensure no debris or foreign objects enter the socket, preventing its use or causing short circuits.*



*The rated voltage of the 12 V power socket is 12 V, and the power rating is 120 W, please do not use the electrical appliance with its power exceeding the rating.*





*Using the power socket or USB port when the vehicle is not started will cause premature discharging of the vehicle battery, and prolonged use may cause flat battery, thus the vehicle cannot be started.*

## Front Console Power Socket

The 12 V front console power socket is located in the front of the centre console. When the ignition switch is in the ACC/ON/READY/RUNNING position, remove the

blanking plug, the socket can then be used as a power supply.

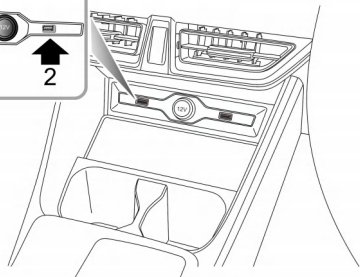
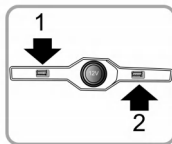


There are one or two USB ports located at the side of the 12 V front console power socket. When the vehicle power is in the ACC/ON/READY/RUNNING, the USB port can supply 5 V as a power interface. Some USB ports can achieve data transmission function.

The maximum operating current of USB port is 2.1 A.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS


### Rear Console Power Socket\*

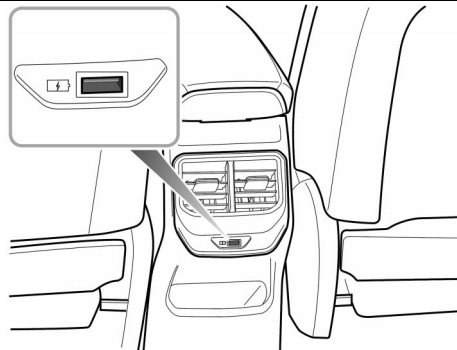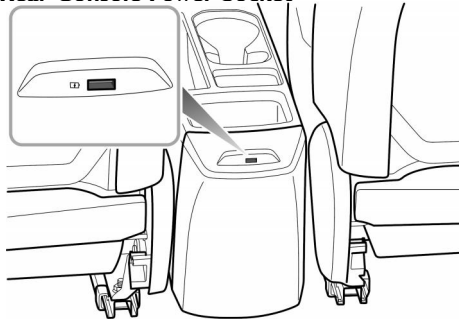

Some models also feature USB port at the rear of the centre console for some models. When the ignition switch is in ACC/ON/READY/RUNNING position, the USB port can supply 5 V as a power interface. Its maximum operating current is 2.4 A.

## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

### Power Socket of Interior Rearview Mirrors\*

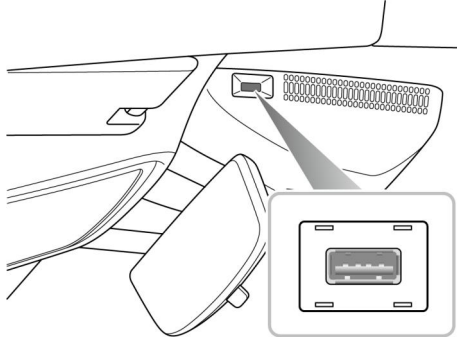

There is also 1 USB port equipped at the interior rearview mirror for some models. When the ignition switch is in the ACC/ON/READY/RUNNING position, the USB port can supply 5 V as a power interface, and its maximum operating current is 2 A.


# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

## Storage Devices

### Instructions for Use

- Please close all storage devices when the vehicle is in motion, to avoid personal injuries in cases of a harsh acceleration, emergency braking and a car accident during driving.
- Do not place liquid or flammable materials such as lighters in any storage devices to avoid heat in hot conditions from igniting flammable materials and leading to a fire.

## Glove Box

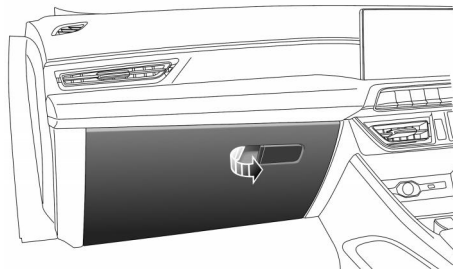


To open the glove box, press the open button (as indicated by the arrow) on it.

Push the lid forward to close the glove box. Make sure the glove box is fully closed when the vehicle is being driven.

# BRIEF INTRODUCTION TO VEHICLE FUNCTIONS


## Storage Box

### Centre Console Armrest Box

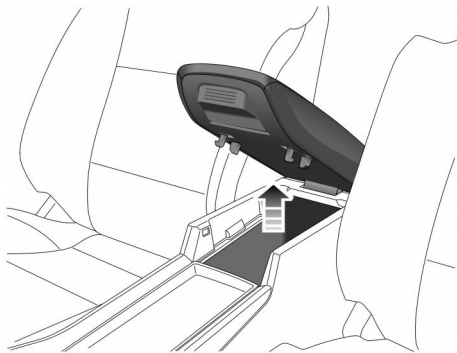

Lift the centre console armrest (as indicated by the arrow) to open the centre console armrest box. Gently press the lid down close the centre console armrest box.

## Centre Console Rear Storage Box

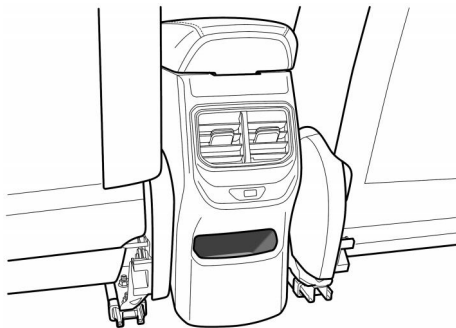

The centre console rear storage box is located behind the centre console.

## Loadspace




**DO NOT** place objects on the luggage cover\* behind the rear seat backrest in order to prevent potential personal injuries in case of a traffic accident.



## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

2

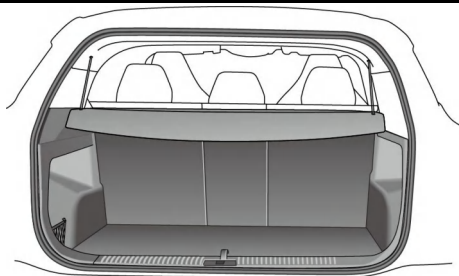


The parcel shelf is connected to the tailgate hooks with cables, when opening the tailgate, the parcel shelf will be lifted.

The toolkit and tyre repair kit are placed under the carpet, lift the loadspace carpet to remove the tools. After the use, lower the loadspace carpet and keep it flat.

### **Glasses Box\***



*The glasses box should only be used when the vehicle is stopped.*

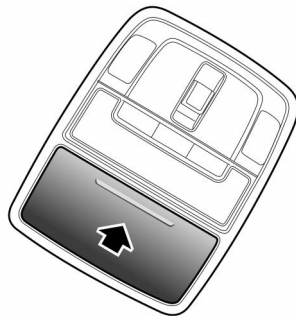

The glasses box is located in the proximity of the front courtesy lights. Press the panel (as indicated by the arrow), and place the glasses into the glasses box after opening it. Close the glasses box when it is not in use.

### **Note:**



*Only glasses that feature a standard frame can be inserted into the glasses box.*


## BRIEF INTRODUCTION TO VEHICLE FUNCTIONS

### Cup Holder

**Note:** Do not place hot drinks in the cup holder while driving. Spillage may result in personal harm or damage.

### Centre Console Cup Holder

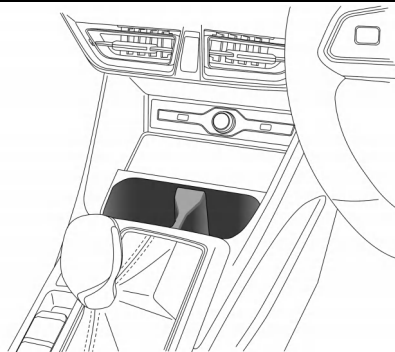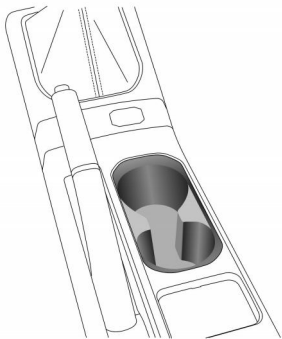

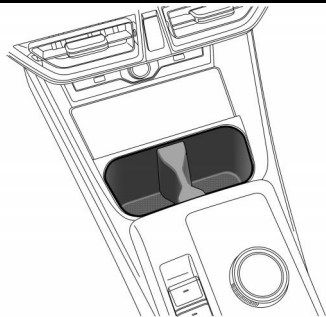

The centre console cup holder is situated at the front end of the centre console armrest assembly, it can be used to hold a cup or beverage bottle.



## ***Preparation for Driving***

---

<i>Keys</i>	<i>70</i>
<i>Alarm System</i>	<i>76</i>
<i>Alcohol Interlocks*</i>	<i>82</i>
<i>Tailgate</i>	<i>83</i>
<i>Load Carrying</i>	<i>86</i>
<i>Fuel System</i>	<i>88</i>
<i>Steering System Adjustment</i>	<i>90</i>

### Keys

#### Overview



*Please keep the spare key in a safe place - not in the car!*



*It is recommended that spare keys are not kept on the same key ring, since this may cause interference and prevent correct key recognition and therefore prevent the correct operation of the vehicle power system.*



*The smart key contains delicate circuits and must be protected from impact, high temperature, humidity, direct sunlight and fluid corrosion.*



#### WARNING

The keys supplied with your vehicle contain coin/button style batteries. These batteries are hazardous and must be kept away from children.



#### WARNING

A lithium coin / button style battery can cause **SEVERE** or **FATAL** injuries within 2 hours or less if it is swallowed or placed inside any part of the body.



#### WARNING

If you think batteries may have been swallowed or placed inside any part of the body, please seek medical attention immediately.

## PREPARATION FOR DRIVING

We provide remote key, it includes a backup mechanical key. The mechanical key can be used to unlock the door in emergency, but cannot be used to start the vehicle.

Two smart keys and common keys are provided for some models.

The keys supplied have been programmed for the security system on your vehicle. Any key that is not programmed to your vehicle can not start the car.

The smart key will only work within a certain range. Its working range is sometimes influenced by the key battery condition, physical and geographical factors. For safety consideration, after you lock your car using the smart key, please recheck that the car is locked.


### Keys - Type A\*



1 Lock Button

2 Tailgate Button

3 Unlock Button

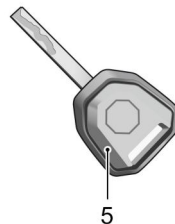


4 Remote Key

5 Mechanical Key

## PREPARATION FOR DRIVING

### Keys - Type B\*

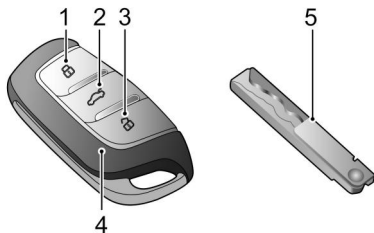

1 Lock Button

4 Smart Key

2 Tailgate Button

5 Mechanical Key

3 Unlock Button

If your key is lost/stolen or broken, a replacement can be obtained from an MG Authorised Repairer. The lost/stolen key can be deactivated. If the lost key is found, an MG Authorised Repairer can reactivate it.

**Note:** Any key made privately may not start the vehicle, and may affect the safety of your car. To obtain a suitable key replacement, it is recommended that you consult an MG Authorised Repairer.

**Note:** The new key cannot be offered to you immediately because it requires programming to the vehicle by the MG Authorised Repairer.

**Note:** If your car is equipped with induction-type wireless charging function, always keep the key more than 20 cm away from the mobile phone which is being charged to prevent the key from the interference of wireless charging device.

**Note:** Avoid operating the smart key close to strong radio interference devices (such as notebook computers and other electronic products), the normal function of the key may be affected.


### Replacing the Smart Key Battery

Please replace the smart key battery if you experience any of the following conditions:

- The smart key operational range is significantly reduced.
- The screen displays "Remote Key Low Battery, Please Replace".



### Replacing the Smart Key Battery - Type A\*

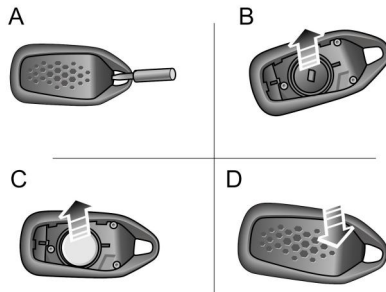

- 1 Gently insert a suitable tool into the key removal hole ( A ).
- 2 Securely hold the key and pry the tool until the cover of the casing is partially separated.
- 3 Carefully separate the cover from the key, remove the waterproof pad ( B ), and take out the used battery from the slot ( C ).


**Note:** Make sure that the polarity of battery is correct when installing a new battery.

**Note:** It is recommended to use a CR2032 battery for the remote control.

- 4 Put the new battery in the slot, make sure it is in full contact with the slot, and refit the waterproof pad.
- 5 Refit the cover and press tightly ( D ), ensure the gap around the cover is even.
- 6 Start the power system to resynchronize the key with the vehicle.

## PREPARATION FOR DRIVING

### Replacing the Smart Key Battery - Type B\*

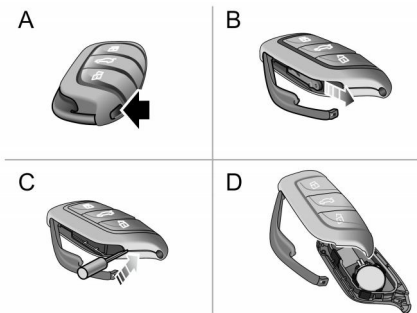

- 1 Press the button ( A ) on the smart key to eject the decorative trim.
- 2 Remove the backup mechanical key ( B ) in the arrowed direction.
- 3 Use a flat-bladed tool to insert into the side of the key ( C ), carefully prise off the battery cover and separate

the upper/bottom cover carefully along the interface ( D ).

**Note:** Make sure that the polarity of battery is correct when installing a new battery.

**Note:** It is recommended to use a CR2032 battery for the remote control.

- 4 Remove the used battery from the slot.
- 5 Put the new battery in the slot, and make sure it is in full contact with the slot.
- 6 Refit the cover and press tightly, ensure the gap around the cover is even.
- 7 Refit the mechanical key, and close the decorative trim.
- 8 Start the power system to resynchronize the key with the vehicle.

### IMPORTANT

- Use of an incorrect or inappropriate battery may damage the smart key. The new replacement's rated voltage, sizes and specifications must be the same as the old one.
- Incorrect fitting of the battery may damage the key.
- Disposal of the used battery must be strictly in accordance with relevant environmental protection acts.

### Alarm System

Your vehicle is fitted with engine immobiliser and body anti-theft system. To ensure maximum safety and operation convenience, we strongly recommend you to read this section carefully to fully understand the activation and deactivation of anti-theft systems.

#### Power Immobiliser

Power Immobiliser is designed to safeguard the vehicle from theft. A vehicle cannot be started until the power immobiliser is deactivated.

Press START/STOP button on the centre console, once a valid key is detected in the vehicle, power immobiliser will be deactivated automatically.

If the message centre displays "Smart Key Not Found" or "Please Put the Key in Alternative Starting Position" or the power immobiliser system warning lamp illuminates, please put the smart key in the alternative starting position (refer to "Alternative Starting Procedure" in "Engine Start/Stop" section), or try to use the spare key. If the car can still not be started, seek an MG Authorised Repairer.

### Body Anti-theft System

#### Locking and Unlocking

When the vehicle is locked, the turn signal lamps illuminate three times; when it is unlocked, the turn signal lamps illuminate once.

#### Operation of Door Lock System (Key)

##### Key Locking

- Using the remote key to lock: press the Lock button on the smart key to lock the vehicle after closing the doors, bonnet and tailgate.
- Using the mechanical key to lock: remove the driver side door lock trim cover, insert the key into the lockhole and turn clockwise to lock the car.

##### Key Unlocking

- Using the remote key to unlock: press the Unlock button on the key to unlock the vehicle.
- Using the mechanical key to unlock: remove the driver door lock trim cover, insert the key into the lockhole and turn counterclockwise to unlock the car.

#### Find My Car


After the vehicle is locked for several minutes, press the Lock button on the smart key for several seconds, the Find My Car function will be enabled, and sound and light indication can be triggered. Press this button on the smart key again to suspend the Find My Car function. At this time, press the Unlock button on the smart key to cancel the Find My Car function and unlock the vehicle. Find My Car can be set in the "Vehicle Settings" interface on the entertainment display.

**Note:** *If the start switch is not placed in ACC/ON/READY/RUNNING position or the remote key unlock is not activated within several seconds (more than 10 seconds) after the vehicle is unlocked with the mechanical key, the immobiliser alarm will be triggered.*

**Note:** *When the complete vehicle is locked, press the UNLOCK button on the remote key\* and perform no other operations for a period of time, the vehicle will automatically lock.*

### Operation of Door Lock System (Keyless)\*

The keyless entry system can lock and unlock the doors or open the tailgate as long as you carry the smart key and approach to the car.

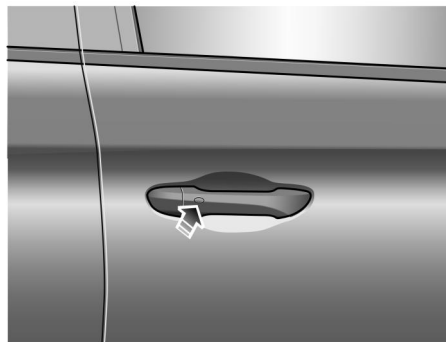

**Note:** *Keep the distance between the smart key and the door handle within 1.5 m range in order to lock and unlock the doors in a keyless way.*

### Keyless Locking

After pressing Start switch to stop the engine, press the button on the front door handle once (no need to press the lock button on the smart key) to lock all doors before leaving the car, then the vehicle will enter anti-theft alarm state.

## PREPARATION FOR DRIVING

### Keyless Unlocking

Press the button at the front door handle once to unlock the door, and pull the door handle to open the door.

**Note:** When the vehicle is locked, if you are within the smart key range and operate the door handle button, but carry out no further action, after 30 seconds the vehicle will automatically re-lock itself to remain secure.

**Note:** If the vehicle battery is flat or there is power loss, please refer to "keys" in "preparations for trip" section.

#### IMPORTANT

After the door is locked by using the key, press the button on the door handle to unlock the vehicle. If the vehicle can not be unlocked or locked normally, please contact a local MG Authorised Repairer.

### Mislock

If locking operation is performed when the driver's door is not fully closed or the Start switch is placed in ACC/ON/READY/RUNNING position, the door will not

be locked, and the horn will sound once to indicate a mislock, with the body anti-theft system inoperative.

If locking operation is performed when the driver's door is closed but the passenger's door or tailgate is not fully closed, the vehicle horn will sound once, indicating a mislock. In this case, the "partial arming" attributes of the body anti-theft system will enable (all fully closed doors or tailgate apertures will be protected, but an open aperture will not!). As soon as the open aperture is closed, the system will automatically revert to an armed state.

### Inadvertent Locking of Keys in Vehicle


When one smart key is left inside the vehicle and the other key is used to lock the vehicle, the function of the locked smart key to activate the vehicle's power system will be disabled, and the locking and unlocking functions of the vehicle will be retained. At this point, the second smart key outside the vehicle can be used to unlock the vehicle, and the starting function of the key inside the vehicle will automatically resume.

### Anti-theft Alarm

If the anti-theft alarm has been activated, before it is turned off, the car horn will sound continuously. The anti-theft alarm can be deactivated by using the following operations:

- Press the Unlock button on the smart key.
- Carry with smart key, and press the button on the door handle.
- Carry with smart key, and move the Start switch to ACC/ON/READY/RUNNING position.

### Interior Lock Switch

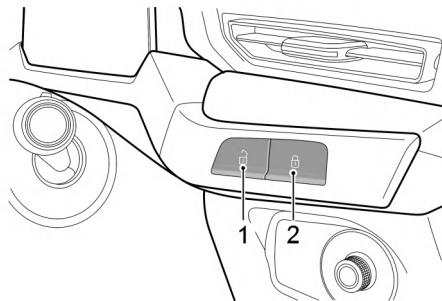

1 Unlock Switch

2 Lock Switch

When the body anti-theft system is disabled, press the interior lock Lock switch ( 2 ) after closing all doors to lock all doors; press the Unlock switch ( 1 ) to unlock all doors.

## PREPARATION FOR DRIVING

**Note:** *If the vehicle anti-theft system is set, pressing the lock/unlock switch of interior locks will not lock/unlock doors but will trigger the alarm system.*

If the doors, bonnet and tailgate are closed, press the interior lock Lock switch, and the yellow indicator on the Lock switch illuminates.

If the non-driver door, bonnet or tailgate is not fully closed, press the interior lock Lock switch, and the yellow indicator on the Lock switch flashes.

### Interior Door Handles

When the vehicle anti-theft alarm system is not set, use the interior door handle to open the door:

- 1 Pull the interior door handle once to unlock the door.
- 2 Release and then pull the interior door handle again to open the door.



*When the anti-theft alarm system is set by locking the vehicle with the remote key, the interior door handles will not be operational due to the anti-theft deadlocking of the doors. Please ensure people or animals do not remain in the vehicle when locking the vehicle with the remote key as they will be unable to exit the vehicle and there is a risk of injury or death.*



*When the anti-theft alarm system is activated by locking the vehicle with the remote key, the interior door handles will not be operational due to the anti-theft deadlocking of the doors. Please ensure people or animals do not remain in the vehicle when locking the vehicle with the remote key as they will be unable to exit the vehicle and there is a risk of injury or death.*



### **Auto Lock When Driving**

All the doors will be locked automatically when the vehicle speed exceeds 10 mph ( 15 km/h).

### **Automatic Unlock**

When the vehicle power is turned off, all the doors will be unlocked automatically.

### Alcohol Interlocks\*



***The alcohol lock is a detection device used to assist in limiting drivers from driving when their blood alcohol concentration exceeds a preset limit. You are responsible for the safety of your passengers and other road users. Drink driving is an offence and is strictly prohibited.***

To operate the alcohol lock device, hold the handheld device and blow into the mouthpiece/orifice. By providing a breath sample the blood alcohol concentration will be analysed. If the levels are below the preset limit you will then be able to start the vehicle.

***Note: The handheld device should be placed in a position that is easy to access and does not affect driving. Please contact an MG Authorised Repairer for device installation and set up.***

#### IMPORTANT

If the alcohol test fails, for safety reasons, do not attempt to forcefully start the vehicle. If you suspect a malfunction with the alcohol lock device, please contact an MG Authorised Repairer for device installation and set up.

### Tailgate




*If the tailgate can not be closed due to the type of cargo loaded, or the weatherstrip seal is damaged, it is recommended you close all windows during driving, select the face distribution mode of the air conditioning, and set the blower to maximum speed, so as to decrease any fumes entering the vehicle.*



*Prior to opening or closing the tailgate always ensure there are no people or objects that may obstruct operation. This may cause physical harm or damage.*

### Tailgate Open/Close Mode

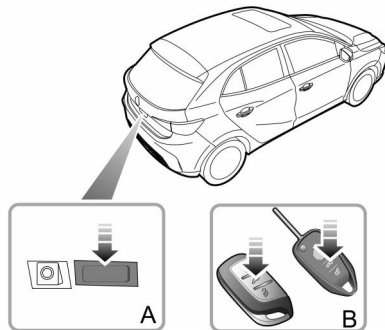

The tailgate can be opened or closed using the following methods:

- **Open the tailgate using the key:** With the Start switch in OFF state, long press the tailgate button ( B ) on the remote key to manually open the tailgate.
- **Open the tailgate from outside the vehicle\*:** When the vehicle is unlocked or the matched key can be detected within 1 m range around the tailgate, directly

## PREPARATION FOR DRIVING

---

press the open switch ( A ) on the tailgate to open the tailgate.




### **Tailgate Emergency Open**

#### **Manual Tailgate**

A tailgate emergency open switch is located in the tailgate catch assembly.

To access the mechanism, lower the rear seat to gain access to the tailgate trim. Identify the emergency release mechanism blanking plug (A).

Remove the plug trim, insert a suitable flat bladed tool into the release slot and rotate counterclockwise to open the tailgate (B).

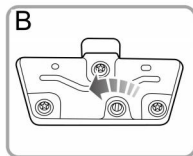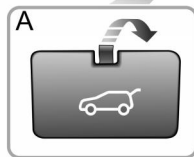

### Load Carrying



***DO NOT exceed the gross vehicle weight or the permitted front and rear axle loads. Failure may result in vehicle damage or serious injury.***

### Loadspace Loading



***Ensure that the rear seat backrests are securely latched in the upright position when loads are carried in the load space behind the seats.***

When luggage is carried in the load space, always ensure heavy items are placed as low and as far forward as possible, so as to avoid cargo shift in the event of an accident or sudden stop.

Drive carefully and avoid emergency braking or hard acceleration when loaded with large or heavy items.

#### IMPORTANT

Traffic regulations must be observed when loading cargo, if the cargo extrudes the loadspace appropriate warning measures must be taken to warn other road users.

### Internal Loading



***DO NOT*** carry unsecured equipment, tools or luggage that could move, causing personal injury in the event of an accident, or emergency braking or hard acceleration.



***DO NOT*** obstruct the driver's or passenger's vision with loads.

Folding the rear seats can increase luggage space, refer to "Seat adjustment" described in the "Comfort Systems" section.

### Fuel System

#### Fuel Requirements




***Use only gasoline which meets the national standards and the OEM specifications. Serious damage to the catalytic converter, a reduction in engine power / torque and increase in fuel consumption will occur if the wrong fuel is used.***

Please carry out refueling according to the information on the refueling label. Refer to "Main Engine Parameters" in the "Technical Data" section for details.

If a lower grade of fuel is used, an engine knocking noise may occur; please use the recommended or above grade gasoline as soon as possible. If the engine knocking noise is still noticeable after using the recommended or above grade fuel, please contact an MG Authorised Repairer immediately. It is permitted that the octane number of the gasoline is higher than that required by the engine, but it is not advantageous for engine output power and fuel consumption.

### Fuel Filler

#### Fuel Filler Flap

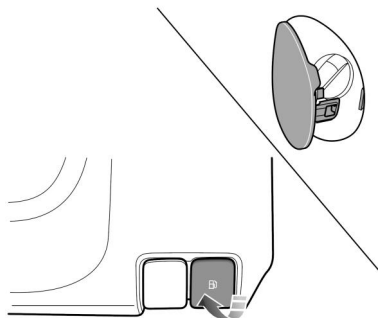

The fuel filler flap is located on the rear left-hand wing.

Pull the fuel filler flap release handle under the driver dashboard panel to open the flap.



### Fuel Filler Cap

Slowly rotate the fuel filler cap counterclockwise to release the pressure inside the tank before opening it.

After refueling, replace the fuel filler cap and tighten it until you hear a "click".

### Refueling



***Vehicle fuel gases are highly flammable and, in confined spaces, are also extremely explosive.***

Always take care when refueling:

- Turn off the power system;
- Do not smoke or use a naked flame;
- Do not use a mobile phone;
- Prevent fuel spillage;
- Do not overfill the tank.

Do not fully refuel the tank if the vehicle is to be parked in direct sunlight or high ambient temperature - expansion of the fuel could cause leakage.

Start the engine after refueling. If the engine does not run smoothly, shut down and do not start it again, contact an MG Authorised Repairer immediately for advice.

### IMPORTANT

During refueling, gasoline should be prevented from splashing on the surface of any painted or adjacent exterior parts. Contamination may cause the surface of the paint or adjacent exterior parts to become damaged.


## PREPARATION FOR DRIVING

### Steering System Adjustment

#### Steering Wheel Position Adjustment



**DO NOT attempt to adjust the position of the steering wheel while the car is in motion. This is extremely dangerous.**

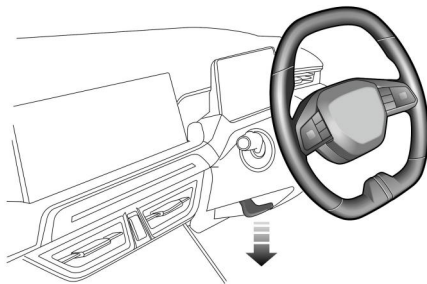

Adjust the position of the steering wheel to suit driving posture:

- 1 Fully release the locking lever (as indicated by the arrow in the figure).
- 2 Hold the steering wheel with both hands and tilt the steering column up or down to move the wheel into the most comfortable position.
- 3 Once a comfortable driving position has been selected, pull the locking lever fully up to lock the steering wheel into its new position.

#### Electric Power Steering



**If the electric power steering fails, the steering may appear very heavy, which will significantly affect driving safety.**

This series of models are equipped with the electric power steering system. This system only works once the vehicle is started.

#### IMPORTANT

When EPS is working, holding the steering wheel on full lock for long periods will result in a reduction in power assistance, causing a heavier feel to the steering.

### **Electric Power Steering Module Angle Initialisation**

When the battery is reconnected after disconnection, the electric power steering ( EPS ) warning lamps may illuminate in yellow. In this case, the electric power steering ( EPS ) requires intialisation, i.e., rotate the steering wheel from lock to lock; after the initialisation is complete, the warning lamps extinguish.

### **Steering Wheel Heating\***

Some models are equipped with a steering wheel heating function. The heating function can improve driving comfort in low temperature environments.



## ***Driving the Vehicle***

---

<i>Power Start/Stop</i>	<i>94</i>
<i>Economical and Environmental Driving</i>	<i>100</i>
<i>Electric Drive Transmission*</i>	<i>103</i>
<i>Continuously Variable Automatic Transmission (CVT)*</i>	<i>106</i>
<i>Manual Transmission*</i>	<i>112</i>
<i>Drive Mode*</i>	<i>114</i>
<i>Parking Brake</i>	<i>115</i>
<i>Service Brake</i>	<i>118</i>
<i>Traction Mode*</i>	<i>119</i>
<i>Energy Regeneration*</i>	<i>120</i>

### Power Start/Stop

#### Starting the Engine (Key Start)\*



*When the vehicle is in motion, do not switching off the START/STOP switch or remove the key, otherwise the steering wheel may be locked, making it impossible to turn the vehicle.*



*Do not touch the key while the vehicle is in motion, otherwise it may cause the power system flameout!*



The START/STOP switch is located on the right side of the steering column. Function of each position is as follows:

#### **Position 0 ( LOCK/OFF )**

- The key can be inserted or removed.
- After the engine is stopped and the key is removed, turn the steering wheel to one side to lock the steering wheel.

#### **Position 1 ( ACC )**

- The engine has not been started and the key cannot be removed.
- Some electrical equipment (such as the power windows, etc.) can work.

### **Position 2 ( ON/RUNNING )**

- When the vehicle is started, the engine runs, and all electrical equipment can work.

### **Position 3 ( START )**

- Start the engine.
- Release the key immediately after the engine starts, and the START/STOP switch will return to position 2 automatically.

**Note:** When the key is in position 0 of the START/STOP switch, if the driver's door is opened, a buzzer will sound to indicate that the key has not been removed.

**Note:** When the steering wheel is locked and the key cannot be turned from position 0 to position 1 , please turn the steering wheel slightly whilst turning the key to unlock the steering wheel.

### **Starting the Engine (Keyless Start)\***



The keyless START/STOP switch is located in the trim panel to the left of the steering wheel. It is a push button Start/Stop switch. To operate the system, the smart key must be in the car.

The display states of the switch are described as follows:

### **Indicator Off ( OFF )**

- The engine is shut off in this position.

### **Yellow Light ( ACC )**

- When the system is in the OFF state and the START/STOP switch is pressed once, the vehicle enters

the ACC state, the yellow light of the START/STOP switch illuminates, and some electrical equipment (such as the power windows, etc.) can be operated.

### **Green Light ( ON/READY/RUNNING )**

- Whilst in the ACC state, pressing the START/STOP Switch without the footbrake being applied will place the system in the ON state, the green indicator will illuminate and some electrical equipment (such as instruments etc) will operate. Whilst in the ACC state, applying the footbrake and pressing the START/STOP Switch will crank and start the vehicle.
- The vehicle enters READY/RUNNING state and all electrical equipment can be operated after the engine is started.

**Note: After switching off the START/STOP switch and opening the door, if the key is still left in the vehicle, the horn will sound continuously when the doors are closed.**

If your car is subject to strong radio signals the keyless entry and start systems may suffer from interference and not function correctly. Please see the 'Alternative Starting Procedure'.

### **Start the power system**



***Do not start and run the engine for a long time in an unventilated room. Exhaust fumes are harmful and contain carbon monoxide, which can cause unconsciousness or even death.***

### **Starting Procedure (Key Start)\***

- 1 Switch off all unnecessary electrical equipment (including the air conditioning);
- 2 For vehicles with automatic transmission, make sure the shift lever is in P or N position and press the brake pedal;


**Note: When the shift lever is in any other position, the engine cannot be started.**

- 3 For manual transmission vehicle, ensure neutral is selected and the clutch pedal is fully pressed; For HEV vehicles, ensure P is selected, the EPB applied and the brake pedal pressed.
- 4 Insert the key, rotate it to position the START position and then release key immediately after the engine has started.




**Note:** After the engine starts, if the key is not released immediately, the starter will continue to work, which will not only discharge the battery, but also damage the starter motor, catalytic converter and particulate filter.


### Alternative Starting Procedure (Manual transmission model)

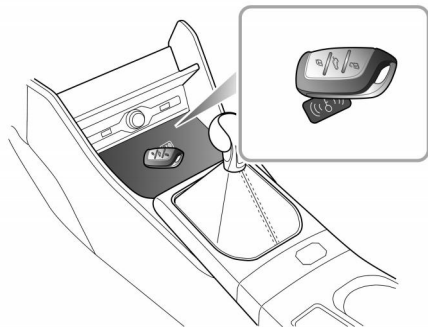

### Alternative Starting Procedure (Automatic transmission model)

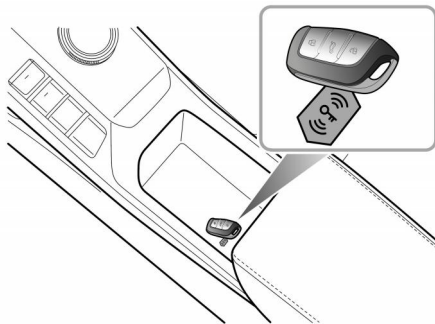

## DRIVING THE VEHICLE

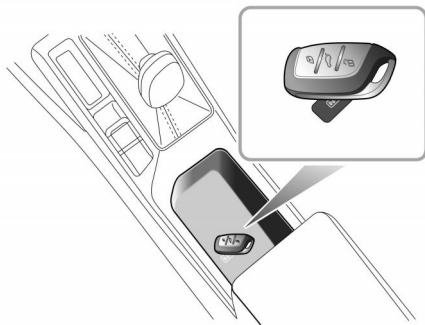

If the car is located in an area where there are strong radio signals causing interference or the smart key battery condition is low, please use the following steps to attempt to start the car:

- 1 Place the smart key in the position and at the angle as illustrated.
- 2 Make sure the gear selection is in P or neutral position, then press the brake pedal and operate the Start switch to start the power system.

- 3 For manual transmission models, please place the gear lever in neutral, press the clutch pedal, operate the start switch, and start the power system.

After the battery of smart key is replaced or the car leaves the interference area, if the keyless start procedure can still not be used normally, seek an MG Authorised Repairer.

### IMPORTANT

- If three consecutive attempts to start are unsuccessful, please seek assistance. Otherwise, multiple consecutive starts may cause damage to the power system and battery.
- This car is equipped with an anti-theft system. Any privately prepared key cannot start the vehicle.
- In environments with temperatures below -10 degrees Celsius, the time for the power system to start will increase. Therefore, when starting, turn off all unnecessary electrical equipment.

### Stopping the Power System

Stop the engine as follows:

- 1 After safely stopping the vehicle, press the brake pedal (automatic) or clutch pedal (manual) ;

- 2 Apply the parking brake;
- 3 For vehicles with automatic transmission, ensure that the shift lever is P position;
- 4 For vehicles with manual transmission, ensure that the shift lever is in neutral position.
- 5 Operate the start switch to turn off the power system.

## Economical and Environmental Driving

### Running-in

The engine, transmission, brakes and tyres need time to "bed-in" and adjust to the demands of everyday motoring. During the first 900 miles( 1500 km), it is essential that you drive with consideration for the running-in process and heed the following advice:

- Do not allow the engine to exceed 3000 rpm in any gear or the vehicle speed to exceed 75 mph( 120 km/h).
- Do not operate at full throttle or allow the engine to labour in any gear.
- Do not drive at a constant speed (either high speed or low speed).
- Avoid heavy braking where possible.

After 900 miles( 1500 km), engine speeds can be gradually increased.

### Environmental Protection

Your vehicle has been designed with the latest technology in order to minimise the environmental impact of exhaust emissions.

## Economical Driving and Maintenance

The following are some suggestions on reducing fuel and energy consumption and extending the service life of the vehicle:

- Maintain the correct tyre pressure. Insufficient air pressure will accelerate tyre wear and waste fuel.
- Do not carry unnecessary weight. Heavy loads will increase the engine load resulting in higher fuel consumption.
- Avoid engine idling for extended periods.
- Maintain slow and smooth acceleration and avoid harsh acceleration; change to a higher gear as soon as possible.
- Avoid labouring the engine or over running. Choose appropriate driving styles according to the road conditions.
- Avoid continuous acceleration or deceleration.
- Avoid unnecessary stopping and braking, maintain steady speed and attempt to anticipate traffic lights.
- Avoid traffic congestion and jam areas as much as possible.
- Anticipating obstructions and slowing down well in advance, avoids the need for unnecessary

acceleration and harsh braking. A smooth driving style not only reduces fuel consumption, but can reduce the emission of noxious gases.

- Do not ride the brake pedal, this can cause premature wear, overheating and increased fuel/power consumption.
- Maintain an appropriate speed on the highway. Appropriate speeds can save fuel.
- Maintain the correct wheel alignment. Avoid collision with the kerb and reduce speed on uneven road surfaces. Out of specification wheel alignment will not only lead to excessive tyre wear, but also increases the engine load and fuel consumption.
- Avoid driving on mud or beaches. This will prevent contaminants adding weight to the vehicle and corrosion of the vehicle underside.
- Maintain the vehicle in accordance with MG recommendations. Dirty air filters, oil etc., will reduce the engine's performance and raise fuel consumption.
- Do not stop the engine straight after high speed or long ascents or towing a trailer. Allow the engine to idle for

20 to 100 seconds depending upon driving loads and conditions. Avoid hard acceleration on a cold engine.

**Note:** *Keep an appropriate distance from other vehicles to avoid emergency braking. This also reduces wear on the brake pad and discs.*

**Note:** *To extend the life of all components and reduce operating costs, regular MG Approved maintenance is needed.*

### Driving in Special Environment

#### *Driving in Rain or Snow*



*Emergency braking, accelerating and steering on slippery roads will reduce the vehicle's handling performance and grip.*

- When raining the windows may fog, reducing visibility (Use the Air-conditioning demist function).
- Grip will be reduced when it rains, so please reducespeed and drive carefully.
- Reduce speed when it rains.
- Avoid aquaplaning (the effect of a film of water between the tyres and the road) affecting steering and braking performance.

#### *Driving through Water*

Avoid driving through floods after heavy rain, this may lead to serious damage to the vehicle.


## Electric Drive Transmission\*

### Instructions for Use

The following information is very important, please read carefully before use:

- The electric drive transmission consists of a high voltage unit. DO NOT touch any drive components unless you have the correct training and qualifications.
- Depress the brake pedal. When the vehicle power system is READY, rotate the control to select to the required gear.
- Maintain brake pedal application until you are ready to manoeuvre. On a flat road, once the brake pedal is released, the vehicle may automatically start moving slowly without applying the accelerator pedal.

### Gear Shift Control

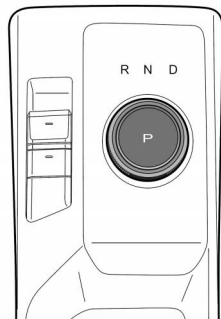

The shift control knob is in the intermediate steady state position, there are two unsteady positions clockwise and counterclockwise, the shift control knob will return to the intermediate steady state position once released.

**Note:** When shifting out of the P/N gear or into the R gear, it is necessary to apply the brake pedal.

- P Park

In this position, the vehicle is locked, and the EPB is applied. Please use this gear when the vehicle is stationary.

Press the P gear button, and the vehicle engages the P gear.

**Note: With the brake pedal released, if the driver seat belt is unfastened and the driver door opened, the vehicle will automatically shift into P gear.**

- R Reverse

Select this gear only when the vehicle is stationary and you wish to drive backwards.

Apply the brake pedal, turn the shift control knob counterclockwise to the end and release. The vehicle will enter Reverse.

- N Neutral

Select this gear when the vehicle is stationary (for example, waiting for traffic lights).

When in Park, apply the brake pedal, turn the shift control knob clockwise or counterclockwise to the first non-steady state position and release. The vehicle will enter Neutral.

In Reverse, turn the shift control knob clockwise to the first non-steady state position and release. The vehicle will enter Neutral.

Whilst D is selected, turn the shift control knob counterclockwise to the first non-steady state position and release. The vehicle will enter Neutral.

- D Drive

This is used for normal driving.

In P , R or N , apply the brake pedal, turn the shift control knob clockwise to the end and release. The spring loaded shift control knob will return to a central position and the vehicle will enter Drive.



### Protection Mode




***When parking, drive the vehicle to a safe area on the premise of ensuring your own safety and complying with traffic regulations.***

### Shift System Malfunction


If serious functional faults are detected in the gear shifting system, the instrument pack will display "EP". At this time, for the sake of driving safety, when the speed is below a certain value, the power system will forcibly cut off the power transmission, and the vehicle will not be able to be driven! Please contact an MG Authorised Repairer immediately.

### Electric Drive Transmission Motor Malfunction

When the system detects a fault with the electric drive transmission motor or controller, the warning indicator light  illuminates red. Please park the vehicle safely and contact an MG Authorised Repairer immediately.

### Power Limitation of Electric Drive Transmission

The electric drive transmission may become very hot in a high-temperature environments with frequent starting, frequent rapid acceleration and deceleration, long-term continuous steep climbing, and thus overload the electric drive transmission.

In some cases, to avoid motor damage, the system will implement power limitation. the warning indicator  illuminates.

In this situation, stop at a safe place or maintain a lower load to continue moving at a constant speed to cool the motor. After the motor temperature drops and the warning indicator light goes out, normal driving can be reinstated.

If the electric drive transmission has cooled down for a long time (about 20 minutes) and the warning indicator has not disappeared, please park the vehicle safely and contact an MG Authorised Repairer immediately, otherwise it may seriously damage the electric drive transmission.


### Continuously Variable Automatic Transmission (CVT)\*


#### Instructions for Use

The following information is very important; please read carefully before use:


- Before starting the vehicle, close the doors, confirm the shift lever is in P position, press the brake pedal and apply the parking brake.
- After the vehicle has started, maintain brake pedal application and ensure the parking brake is applied, then shift the lever to the required gear.
- Release the parking brake, brake whilst maintaining brake pedal application until you are ready to manoeuvre the vehicle. On a flat road, once the brake pedal is released, the vehicle will automatically begin to travel at a slow speed with the accelerator pedal not depressed.
- During driving, do not coast in neutral, otherwise it could cause an accident.
- Do not tow the vehicle with its front wheels on the ground, this could cause severe damage to the CVT transmission.

#### Gear Shift

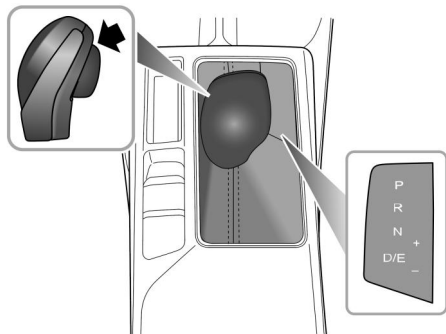

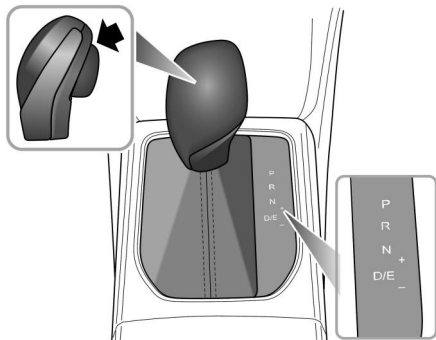

**DO NOT** press the lock button when shifting gears, unless necessary.

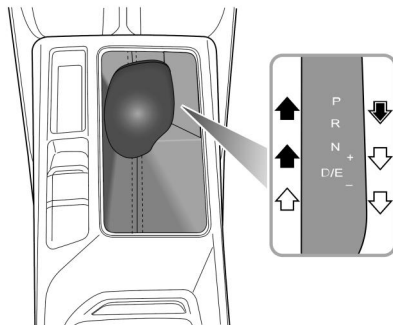


4

The automatic transmission is a CVT transmission.

**Note:** The highlighted letters or numbers on the instrument pack interface indicate the selected gear.

A sprung loaded lock button located in the gear lever is used to prevent mistakingly selecting P (Park) or R (Reverse) whilst the gear selector is in other positions.

### Shift Lever Operation

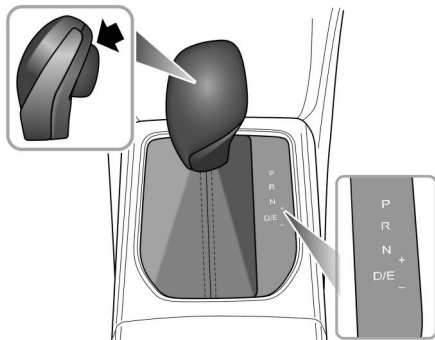

During any gear shift, operate the shift lever according to the instructions indicated by the following arrows:



Free gear shift.



Press and hold the lock button to shift gear.



Press and hold the lock button and apply the brake pedal to shift gear.

### Shift Lever Position



*The shift lever must be placed in P position when parked.*



*DO NOT Switch the shift lever between D and R gears or into the P gear whilst the vehicle is in motion, otherwise, it may cause serious damage to the transmission or an accident.*

- **P Park**

When the shift lever is in this gear, the transmission will be locked. This gear should only be used when the vehicle is stationary and the parking brake is applied.

**Note:** *When the vehicle is parking on a hill, press the brake pedal and apply the parking brake first before selecting P gear.*

- **R Reverse**

Select this gear only when the vehicle is stationary.

- **N Neutral**

Select this gear if the vehicle is stationary and the engine will be running at idle speed for a short time (for example, waiting for traffic lights).

- **D Drive**

This is used for normal driving and will allow automatic selection of gear ratios depending on vehicle speed and accelerator pedal position.

- **E ECO**

Select this gear to prioritise economy over performance. The instrument pack displays ECO and E gear indicator lamps at the same time.

- **Manual Mode**

Select this mode when manual gearshift is required. The instrument pack displays a number (1-8) to indicate the current gear the vehicle is in, the driver is reminded to make a gear shift via an upshift/downshift arrow.

When the shift lever is in E gear, toggle the shift lever towards " + " direction to upshift to next available high gear; or toggle the shift lever towards " - " to downshift to next available low gear.

Whilst in manual mode, if the driver makes an unreasonable gear selection, such as requesting an upshift during low engine speeds, or requesting a downshift during high engine speeds, the transmission will not respond and will remain in the current gear. If the vehicle is driven and the engine speed falls below

a preset threshold in certain gears, the transmission will automatically shift down to the next gear to avoid engine stalling; when the vehicle accelerates, if the engine speed increases continuously and exceeds the allowable maximum speed with no upshift request received, the transmission will automatically shift up to the next gear to protect the engine.

To return to other gear modes, move the shift lever leftwards and select D.

### **Gearshift Speed**

With D or E gear selected, the speed of one gear varies depending on the accelerator pedal position: a smaller throttle opening will result in the gear shift at a lower speed, and a larger throttle opening will cause the transmission to delay the gear shift action, until the gear shift is completed when the vehicle reaches a higher speed.

### **Kick-down**



***The drive wheels may skid when kick-down is activated on road surfaces with low adhesion, this may lead to the vehicle sliding out of control.***

With D or E gear selected, pressing the accelerator pedal all the way down in one motion (also known as Kick-down ) will provide better acceleration performance during overtaking. Under certain conditions, it will allow the transmission to shift to a lower gear immediately, and provide fast acceleration. Once the accelerator pedal is released, it will resume a suitable higher gear (based on the vehicle speed and the position of the accelerator pedal).

### Protection Mode



*When parking, drive the vehicle to a safe area on the premise of ensuring your own safety and complying with traffic regulations.*

### CVT Transmission Failure

If the transmission develops faults or works improperly, the engine emission malfunction indicator lamp in the instrument pack illuminates. In such a case, contact an MG Authorised Repairer for service as soon as possible.

### Limp Mode

When some failures occur, the transmission will enter Limp Mode and will only function in some gears, in some cases it may fail to engage reverse, during this time the instrument pack will display the engine emission malfunction indicator lamp. In such a case, contact an MG Authorised Repairer for service as soon as possible.


### Gear Shift System Failure

If some serious functional failures occur in the gear shift system, the instrument pack will display " EP ". During this

time, for safe driving, if the vehicle speed is below a certain value, the power system will forcibly cut off the power transmission, and the vehicle will not be able to drive! In this case, please contact an MG Authorised Repairer for service as soon as possible.


### Manual Transmission\*

#### Gear Shift Lever

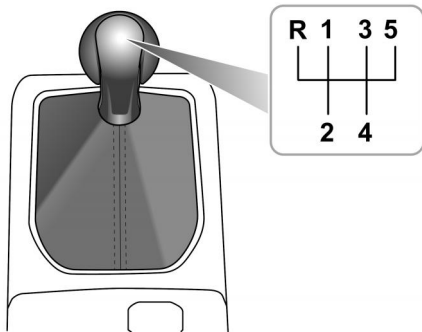

The manual transmission is a 5-speed manual transmission with 6 gears, which are: 1st, 2nd, 3rd, 4th, 5th and R (Reverse) respectively.

#### Precautions while driving:

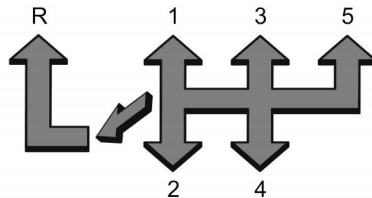

- 1 When selecting R gear, you must ensure that the vehicle is completely in stationary, wait for a moment and then fully press the clutch pedal, ensure the lever is in the N position, press the lever down and push it leftward, then push it forward into the R position, slowly release the clutch to engage drive.  
After fully depressing the clutch pedal, please wait for 2 ~ 3 seconds before attempting to select R gear, failure to observe this could cause transmission damage.
- 2 Do not rest your hand on the gear shift lever while driving - pressure from your hand may cause premature wear to the gear shift mechanism.



- 3 Do not rest your foot on the clutch pedal when driving  
- this will cause premature and excessive clutch wear.
- 4 Do not hold the car stationary on a hill by slipping the clutch. This will cause premature clutch wear.

***Note: In order to guarantee the smooth driving and good fuel economy of the vehicle, please shift at an appropriate time, and never allow the engine to run at a high speed for prolonged periods, this may cause engine damage.***

### Drive Mode\*



*It is not recommended to shift driving modes whilst driving, this diverts the attention of the driver away from the road ahead. If it is completely necessary then proceed with caution and always ensure you drive safely.*

The vehicle features multiple drive modes. Switching between modes allows different power responses, steering feel as well as other functions.

By using the center console mode switch, you can switch between the following driving modes:

#### 1 **Normal Mode**

The vehicle is balanced for daily driving.

#### 2 **Sport Mode**

Sport Mode concentrates on providing more power to enhance the performance. Constant use of Sport Mode will increase energy.

#### 3 **ECO Mode**

The vehicle is in the state of low energy consumption, which is used for energy-saving driving.

After the vehicle is powered on, when the driving mode is set to economy, standard, or sport mode, or when the power response is set to economy, standard, or sport in custom mode, the gear information on the instrument panel will be displayed as 'Eco', 'Comfort', 'Sport'.



**Note:** When switching the driving mode in manual mode, the power system will maintain the shift logic of manual mode.

### Parking Brake

#### Parking Brake System - Electronic Parking Brake ( EPB )\*



*In the event of EPB malfunction where EPB release is not possible, please consult an MG Authorised Repairer in order to carry out an emergency manual release of the parking brake.*

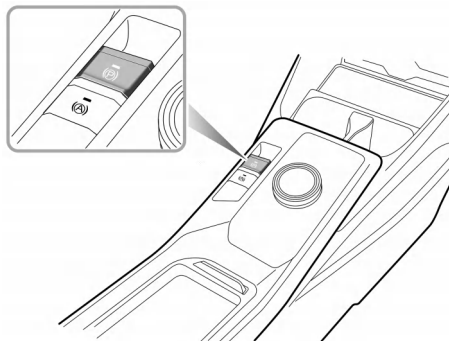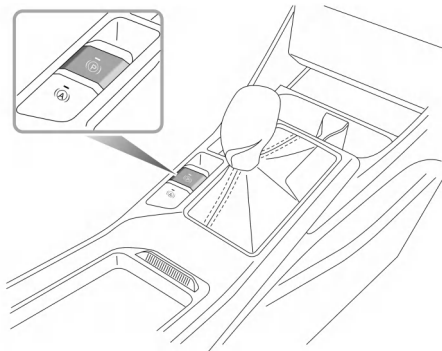

The EPB system can operated using the following methods:

Pull the EPB switch upwards to apply the EPB system after the vehicle is parked safely. Place the Start switch in ON/READY/RUNNING position, press the brake pedal, and remove the gear shifter from P to release the EPB system.

If the indicators (P) in the EPB switch and in the instrument pack illuminate, it indicates that the EPB system has been applied. If the indicators (P) in the EPB switch

and in the instrument pack extinguish, it indicates that the EPB system has been released.

**Note:** *When leaving the vehicle, the EPB must be applied.*

**Note:** *An audible motor noise may be heard when applying or releasing the EPB.*

*The electronic parking system cannot be activated or deactivated when the vehicle battery is discharged. If this is the case, apply the emergency starting power system with a jumper cable, please refer to the "Jump Start" section in the "Emergency" section.*

### Start Assist

If the driver's seat belt is fastened, the engine is running, D or R gear is selected and the accelerator pedal is pressed to pull away, the EPB system will automatically release.

### Emergency Braking Function



*Inappropriate use of EPB can lead to accidents and injuries. DO NOT apply the EPB for vehicle braking whilst moving, unless in an emergency.*




*During emergency braking using the EPB, DO NOT switch off the ignition/power system, this could result in serious injury.*

In the event of normal brake failure during driving, emergency braking can be initiated by pulling and holding the EPB switch upward. An audible warning will sound during emergency braking. The braking process will be canceled by releasing the EPB switch.

### Parking Brake System - Manual Parking Brake\*



***Do not drive with the parking brake applied, or apply the parking brake whilst the vehicle is in motion. This could result in loss of control, prevent the ABS from functioning correctly, and may even cause damage to the rear brakes.***

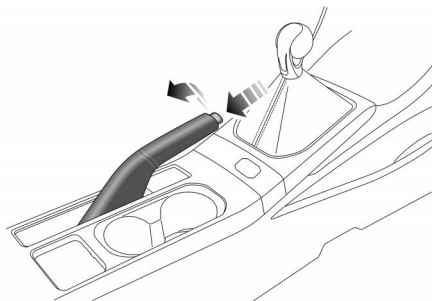

The parking brake operates on the rear wheels only. To apply the parking brake, pull the lever upward. Whilst parked, ensure the parking brake lever stays in applied state.

To release, pull the lever up slightly, then press the button at the end of parking brake lever and fully lower the lever.

When parking on a steep slope, do not rely on the parking brake alone to hold the vehicle.

### Service Brake

Some models are equipped with an integrated braking system (IBS), which has the advantages of high integration, faster braking response, and higher stability without relying on vacuum environment. Please note the following points when using IBS:

- IBS only works when the power system is in READY mode, please do not coast with the power system turned off.
- If the power system is turned off during driving, you should firmly press the brake pedal and stop as soon as traffic safety permits.
- If the IBS operation is impaired for any reason, it is necessary to apply more force than usual to the brake pedal to obtain effective braking.

### Multi-Collision Brake System(MCB)\*

The MCB function will automatically apply the brake to reduce the vehicle speed and improve the vehicle stability after a collision. It is designed to reduce the risk of a secondary collision caused by the uncontrolled movement of the vehicle after a collision.

The MCB will be activated when the following conditions are all met at the same time:

- A vehicle collision where airbags are deployed;
- The vehicle speed is less than 60 km/h;
- The steering wheel has not been turned in excess of 180° ;
- SCS is fault free.

If the driver firmly presses the accelerator pedal after the MCB function is triggered, the system will exit the braking state.

***Note: The MCB function cannot decelerate the vehicle in all cases of collision, because the collision process may cause some parts to malfunction or fail and affect the normal operation of the function.***

### **Traction Mode\***

The vehicle is equipped with a gasoline engine, a hybrid drive unit, a fuel tank and a high voltage pack.

Different drive combinations are based upon the different driving conditions.

If the vehicle is being driven using pure EV via the hybrid drive unit, the EV indicator in the instrument pack illuminates green.

If the engine has cause to start, the HEV indicator in the instrument pack will illuminate green.

### Energy Regeneration\*



***Deceleration caused by energy regeneration is NOT a substitute for braking safely. The driver must ALWAYS be prepared to make braking manoeuvres to maintain safe driving.***

When the vehicle is braking, in an overrun or coasting state, the energy regeneration function is activated, and the motor converts part of the kinetic energy of the vehicle into electric energy, which is then stored in the high-voltage battery pack.

Energy cannot be regenerated or is limited under some conditions, such as:

- N gear is selected (During driving do not coast in N gear) ;
- During torque intervention (SCS or traction control operation) ;
- High voltage battery pack is fully charged;
- High voltage battery pack temperature is too high or too low.

Energy Regeneration Level :

#### High

High Level: Maximum energy is regenerated, the vehicle exhibits shorter coasting distances and a strong sensation of over-run drag or motor braking.

#### Medium

Medium Level: Moderate energy regenerated.

#### Low

Low Level: Minimum energy is regenerated, the vehicle exhibits longer coasting distances and no significant sensation of over-run drag or motor braking.

The energy regeneration level can be selected in the entertainment display screen.

***Note: It is recommended to choose Low or Medium levels on surfaces that have low adhesion levels (e.g. icy roads).***



## Safety

---

Seat Belt	122	Tyre Pressure Monitoring System (TPMS)*	169
Airbag	133		
Child Restraints	145		
Child Proof Locks	157		
Body Stability Control System	158		
Anti-lock Brake System (ABS)	160		
Auxiliary Brake System	161		
Auto Hold*	162		
Hill Hold Control (HHC)	165		
Active Rollover Protection (ARP)	166		
Emergency Braking Hazard Warning Lights Control (HAZ)*	167		
Pedestrian Alert System*	168		

## Seat Belt



*It is important that all seat belts are worn correctly. Always check that all passengers are wearing seat belts. DO NOT carry passengers that are unable to wear correctly positioned seat belts. Wearing seat belts incorrectly may cause serious injury or even death in the event of a collision.*



*Airbags can not replace seat belts. Airbags can only provide extra support when triggered, and not all traffic accident will trigger airbags. Whether airbags are triggered or not, seat belts can reduce the risks of serious injury or death in accidents. Therefore, seat belts must be worn properly.*



*NEVER unfasten a seat belt whilst driving, serious injury or death may occur in the event of an accident or emergency braking.*



*Never fasten the driver seat belt or use a buckle replacement when the driver seat is vacant or when exiting the vehicle.*



This vehicle is equipped with a seat belt warning lamp to remind you to fasten your seat belt.

During driving, seat belts must be fastened , this is because:

- You can never predict if you will be involved in a collision accident and how serious it may be.
- In many cases of collision accidents, passengers with seat belts properly fastened are well-protected, while passengers with seat belts not fastened suffer from serious injury or even death. Therefore, all passengers must wear seat belts correctly,even during short-distance journeys.

### Protection Provided by Seat Belts

*Note: It is of equal importance for passengers in the rear seat to fasten their seat belts correctly. Otherwise, passengers with seat belts not correctly fastened will be thrown forward in accidents, and will endanger themselves as well as the driver and other passengers.*

When the vehicle is in motion, the travelling speed of the occupants is identical to that of the vehicle.

In the event of a 'head on collision' or emergency braking, the vehicle may stop, but the occupants will carry on travelling until they come into contact with a stationary object. This object may be the steering wheel, dashboard, windscreen or front seats.

A correctly fastened seat belt will eliminate this risk of injury. When the seat belt is worn correctly, it will lock automatically in collision accidents or emergency braking to reduce your speed together with the vehicle, so as to prevent the out-of-control movement which may cause serious injury to driver and passengers.



### Wearing Seat Belts



*Incorrectly worn seat belts could cause injury or death in the event of an accident. Seat belts are designed for one person, DO NOT share seat belts.*



*DO NOT wrap a seat belt around when holding a baby or child in your arms.*



*Remove any heavy coats or clothing when wearing a seat belt, failure to do so can affect protection provided by the seat belt.*



*Seat belts should not be wrapped around hard or sharp objects such as pens, spectacles or keys.*



*Seat belts can not function correctly when the seats are reclined excessively. DO NOT drive when the seats are excessively reclined.*

In order to maintain effective protection, the passengers must sit in the correct orientation, feet placed on the floor in front of them, with an upright body (no excessive recline) and the seat belt correctly fastened.

The seat belts fitted to your vehicle are designed for use by normal sized adults. This part of the literature refers to adult use. All seat belts are 3 point lap-diagonal belts.


## Fastening Seat Belts

Please follow the instructions below to fasten the seat belts correctly.

- 1 Adjust the seat correctly.



- 2 Hold the metal tab, pull the seat belt out steadily over the shoulder and across your chest. Ensure there are no twists on the belt.

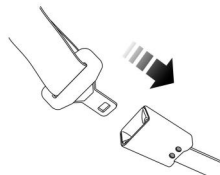


- 3 Insert the metal tab into the buckle until you hear a 'click', this indicates the seat belt is securely locked.
- 4 Remove any slackness in the belt by pulling up on the diagonal section of the belt.
- 5 To release the seat belt, press the red button on the buckle. The seat belt will retract automatically to its original place.

### Correct Routing of the Seat Belts



**Ensure the seat belt is correctly positioned on the body, NEVER cross the neck or abdomen, NEVER pass the seat belt behind the back or under the arms.**

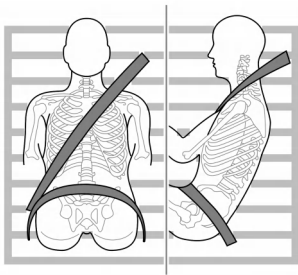

When wearing seat belts, the lap belt section should be positioned as low as possible across your hips, never across the abdomen. In the event of a collision, the lap belt can apply a force on the hips and reduce the possibility of you slipping under the lap belt. If you slip under the lap belt, the belt will apply force on your abdomen, which may cause serious or fatal injuries. The diagonal section of the belt should cross the middle of the shoulder and the chest. In the event of emergency braking or collision, the diagonal section of the belt will be locked.

To ensure that the seat belts always provide maximum protection, ensure the belt is flat, not loose and contacts the body.

### Seat Belts Use during Pregnancy

Wearing correctly positioned seat belts will provide protection for both mother and unborn child in the event of a collision or emergency braking. The diagonal section of the seat belt should pass across the chest as normal, the lap section of the belt should pass below the belly, low and snug on the hip bones. **NEVER** position the belt on or above the belly. Please consult your physician for further details.



### Seat Belts and Disabilities

It is a legal requirement that all occupants wear seat belts, this include people with disabilities.

Depending upon the disability, consult your physician for further details.

### Children and Seat Belts



***Only recommended child restraints suitable for the age, height and weight of the child should be used.***

For safety reasons, children must travel in a child restraint device fixed to the rear seat.

## Infants



*Only recommended child restraints suitable for the age, height and weight of the child should be used.*



*NEVER carry a child or infant with your arms during driving. When collision accidents occur, the weight of the child will produce so great of a force that you will not be able to hold on to the child. The child will be thrown forward and suffer serious injury or even death.*

The seat belts fitted to your vehicle are designed for adults, they are not suitable for children. In the event of an accident or collision the children are not secure, it could cause death or serious injury.

Infants **MUST** use a suitable child restraint device. Please consult the child seat manufacturer's guidelines when selecting the correct seat. Follow the manufacturer's instructions on installation. Please refer to "Child Restraints" in this chapter for more details.

## Older Children



*NEVER share a seat belt amongst children. In the event of an accident or collision, the children are not secure. It could cause death or serious injury.*



As children grow and become older/larger it will get to the stage when they no longer require child seat restraints, at this point they will require use of the vehicle standard seat belt. Please ensure the seat belt is correctly positioned on the body of the child.

When fastening a seat belt for a child always check it for correct positioning. Adjust the height of seat belt to ensure



the shoulder belt is kept away from the child's face and neck. Position the lap belt across the hips as low as possible, and tighten adequately. Correct positioning means that the seat belts can pass the applied force to the strongest part of child's body in accidents.

If the shoulder belt is too close to child's face or neck, it may be necessary to use a child booster cushion (always ensure that it meets any relevant laws or standards).

### Seat Belt Pre-tensioners



*The seat belt pre-tensioners will only be activated once and then **MUST BE REPLACED**. Failure to replace the pre-tensioners will reduce the efficiency of the vehicle's restraint system.*



*If the pre-tensioners have been activated, the seat belts will still function as restraints, and must be worn in the event that the vehicle remains in a drivable condition. The seatbelt pre-tensioners should be replaced at the earliest opportunity by an MG Authorised Repairer.*

The vehicle is fitted with seat belt pre-tensioners. These are designed to retract the seat belts and work in conjunction with the airbags in the event of a severe collision. They are designed to retract the seat belt and 'secure' the occupant in the seat.

The airbag warning light on the instrument pack will alert the driver to any malfunction of the seat belt pre-tensioners. (see 'Warning Lights and Indicators' in the 'Instruments and Controls' chapter).

The seat belt pre-tensioners can only be activated once. After activation they must be replaced. This may also involve replacement of other SRS components. Please refer to 'Replacing Airbag System Parts'.

## IMPORTANT

- Seat belt pre-tensioners will not be activated by minor impacts.
- The removal or replacement of a pre-tensioner must be carried out by the technicians trained by the manufacturer.
- 10 years from the initial date of registration (or installation date of a replacement seat belt pre-tensioner), some components will need to be replaced. The appropriate page of the Service Records must be signed and stamped once the work has been completed.

## Seat Belt Checks, Maintenance and Replacement

### Seat Belt Checks



***Split, worn or frayed seat belts may not function correctly in the event of a collision, if there are any signs of damage, replace the belt immediately.***



***Always ensure the red release button on the seat belt buckle is pointing upwards ensure easy release in the event of an emergency.***

Please follow the instructions below to check the seat belt warning light, seat belt, metal tab, buckle, retractor and fixing device regularly:

- Insert the seat belt metal tab into the corresponding buckle and pull seat belt webbing close to the buckle quickly to check that the belt clasp locks.
- Hold the metal tab and pull the seat belt forward quickly to check that the seat belt reel locks automatically, preventing the webbing from extending.
- Fully extract the seat belt and visibly examine for twists, fraying, splits or worn areas.

- Fully extract the seat belt and allow to return slowly to ensure continual and complete smooth operation.
- Visibly examine the seat belt for missing or broken components or components that may affect the normal operation.
- Ensure the seat belt warning system is fully functional.

If the seat belt fails any of the above tests or inspections, contact an MG Authorised Repairer immediately for repairs.

## Seat Belt Maintenance



***DO NOT attempt to remove, install, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by an MG Authorised Repairer. Inappropriate handling may lead to incorrect operation.***



***Ensure no foreign or sharp objects become lodged in the seat belt mechanisms. DO NOT allow liquids to contaminate the seat belt buckle, this could affect the buckle engagement.***

Seat belts should only be cleaned with warm soapy water. Never use any solvent to clean the seat belt. Never attempt to bleach or dye the seat belt, otherwise the strength of the seat belt will be severely weakened. After cleaning, wipe with a cloth and allow to dry. Never allow the seat belt to fully retract before it is completely dry. Keep seat belts clean and dry.

If there are contaminants accumulated in the retractor, the retraction of seat belt will be slow. Please use a clean and dry cloth to remove any contaminants.

## Seat Belt Replacement



*Collision accidents may damage the seat belt system. The seat belt system may not be able to protect users after damage, which may result in serious injury or even death. After an accident, seat belts should be checked and replaced as needed immediately.*

Seat belts should not require change after minor collisions, however, some other parts of the seat belt system may require attention. Please consult an MG Authorised Repairer for advice.

## Airbag

### Overview



*The airbag SRS provides **ADDITIONAL** protection in a severe frontal impact only. It does not replace the need, or requirement to wear a seat belt.*




*The airbags together with the seat belts provide optimum protection for adults, but it is not the case for infants. The seat belt and airbag systems in the vehicle are not designed for protecting infants. The protection required by infants should be provided by child restraints.*

In the corresponding position where airbags are fitted, there is a warning sign stating “AIRBAG”. Generally, SRS contains the following components (the components are not completely the same according to different model and configuration):

- Frontal airbags (fitted in the centre part of the steering wheel and the instrument panel above the glove box respectively)

- Side airbags (fitted in the outer seatback cushion of the two front seats)\*
- Side curtain airbags (fitted in the roof interior trim)\*

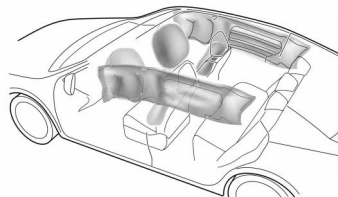

### Airbag Warning Lamp



The airbag warning light is located in the instrument pack. If this lamp does not extinguish or illuminates during driving, it indicates that there is a failure in the SRS or seat belt. Please seek an MG Authorised Repairer at the earliest opportunity. An SRS or seat belt

fault may mean the components may not be deployed in the event of an accident.

### Airbag Deployment



*Front seat passengers should not place feet, knees or any other part of the body in contact with, or in close proximity to a front airbag.*



*To minimise the risk of accidental injury from inflating airbags, seat belts should be worn correctly at all times. In addition, both driver and front passenger should adjust their seat to provide sufficient distance from the frontal airbags, so as to avoid severe or even fatal injury when the airbag is deployed. If side airbags and side head impact protection airbags are fitted, both driver and front seat passenger should be seated to maintain sufficient distance from the upper part of the body to the sides of the vehicle, this will ensure maximum protection when the side airbags/side head impact protection airbags are deployed.*



***An inflating airbag can cause facial abrasions and other injuries if the occupant is too close to the airbag at the time of its deployment.***



***When airbags are deployed, children without proper protection may suffer from serious injury or even death. DO NOT carry children in the arms or on the knees during traveling. Children should wear seat belts suitable to age. DO NOT lean out of windows.***



***After deployment, the relative airbag components will become very hot, such as the steering wheel, instrument panel and both sides of the roof rails. DO NOT touch any airbag related components after airbag deployment, it may cause burns or serious injury.***



***DO NOT knock or strike the position where any airbag related parts are located, so as to avoid accidental airbag deployment which may cause serious injury or even death.***



***DO NOT affix or place any objects on, or adjacent to the airbags. This may affect the airbag passage or create projectiles that may cause injury or serious harm in the event of airbag deployment***

In the event of a collision, the airbag control unit monitors the rate of deceleration or acceleration induced by the collision, to determine whether the airbags should be deployed. Airbag deployment is virtually instantaneous and occurs with considerable force, accompanied by a loud noise.

In the event of a severe frontal collision, a completely deployed airbag, along with a correctly worn seat belt, can limit the movement of the driver and front passenger, reducing the risk of head and chest injuries. For vehicles fitted with side airbags and side curtain airbags, when the vehicle encounters a serious side collision, the completely

deployed airbag will form a cushion of air between the occupant and the vehicle side to reduce the risk of body side injuries.

Provided the front seat occupants are correctly seated and with seat belts properly worn, the airbags will provide additional protection to the chest and facial areas in the event of the car receiving a severe frontal impact.

### IMPORTANT

- Airbags cannot protect lower body parts of passengers.
- Airbags are not designed for rear collision, minor frontal collision or if the vehicle rolls over, nor will it operate as a result of heavy braking.
- Deployment and deflation of the airbags takes place very quickly and will not protect against the effects of a secondary impact if it occurs.
- When an airbag inflates, a fine powder is released. This is not an indication of a malfunction. However, the powder may cause irritation to the skin and should be thoroughly flushed from the eyes and any cuts or abrasions of the skin. If your skin, eyes, nose or throat etc feels uncomfortable, please consult a doctor.
- After inflation, front and side airbags deflate immediately. This provides a gradual cushioning effect for the occupant and also ensures that the driver's forward vision is not obscured.



## Frontal Airbags



***NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. Refer to 'Disabling the Passenger Airbag'.***



***Front seat passengers should not place feet, knees or any other part of the body in contact with, or in close proximity to a front airbag.***




***In extreme cases driving on very uneven surfaces may cause airbag deployment. Please take extra care when driving on uneven roads.***


For some models, the passenger side airbag can be turned off through the switch on the entertainment display screen.

Airbags are designed to deploy during serious impacts, the following conditions may cause airbag deployment.

- A frontal collision with unmovable or non deformable solid objects at a high speed.

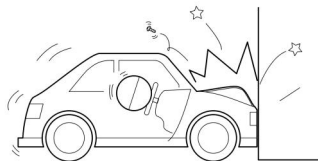

- Conditions that can cause serious chassis damage, such as a collision with kerbstones, road edges, deep ravines or holes.

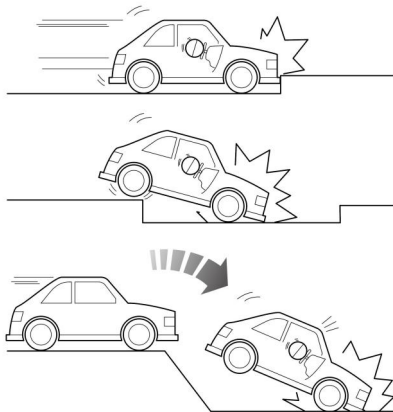


### Side Airbags and Side Curtain Airbags\*



*The structure and material of the seat is critical to the correct operation of side airbags. Therefore, please DO NOT fit seat covers which may affect side airbag deployment.*

In the event of a serious side impact, the relevant side airbag will deploy from the seat cover, and the side curtain airbags will deploy from the roof interior trim (only the affected side). The other side will not deploy. The conditions described below (or similar) may cause side airbag and side curtain airbag deployment.

- One side of the vehicle collides with high-speed ordinary passenger car.

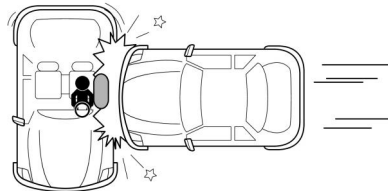


## Conditions in Which Airbags Will Not Deploy

The deployment of airbags does not depend on the vehicle speed, but on the object that the vehicle hits, angle of impact and the rate at which the car changes speed as a result of a collision. When the impact force of collision is absorbed or dispersed to vehicle body, airbags may not deploy; however, airbags may sometimes deploy according to impact condition. Therefore, the deployment of airbags shall not be judged based on the severity of vehicle damage.



### Frontal Airbags

Under certain conditions the front airbags may not be deployed. Some examples are listed:



- The impact point is not central to the front of the vehicle.
- The impact is with a solid utility pole or traffic sign post.

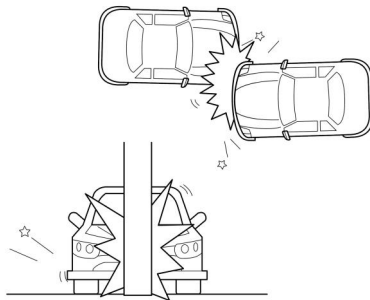

- The impact area is high (collision with the tailgate of a truck).
- Frontal collision at an angle with guardrails.

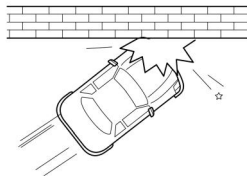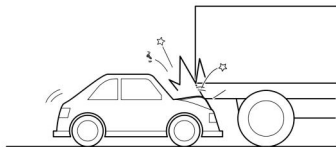


- Impacts to the rear or side of the vehicle.
- The vehicle rolling over.

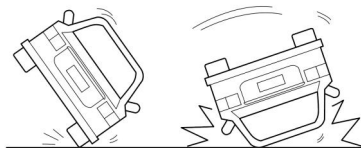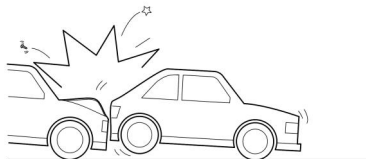


### Side Airbags and Side Curtain Airbags\*

Under certain conditions the seat side and side head airbags may not be deployed. Some examples are listed:


- Side impacts at certain angles.
- Light side impacts such as with a motorcycle.

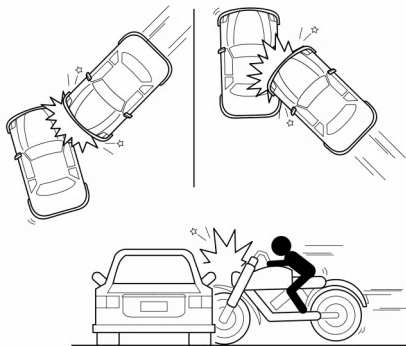



- Impacts that are not central to the side of the vehicle, either too far toward the front compartment or the loadspace.
- Side impact on loadspace area.
- The vehicle rolling over.

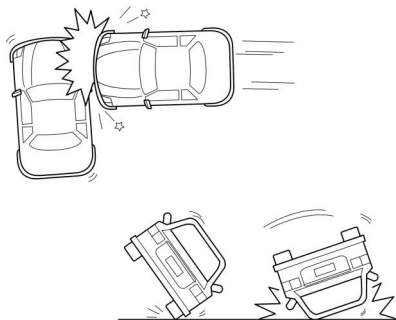

- Frontal collision at an angle with guardrails.
- The angled impact is not of sufficient force (the impact is with an object that is not solid, such as a lamp post or central barriers)

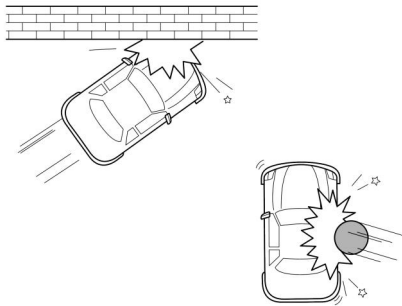

- The impact is not of sufficient force (with another vehicle, stationary or moving).
- The impact is from the rear of the vehicle.

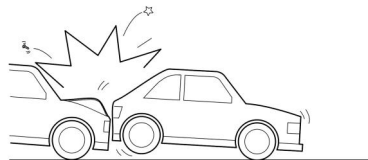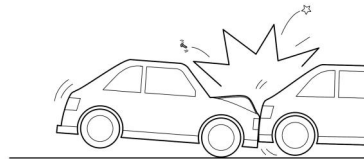

## Service and Replacement of Airbags

### Service of SRS components



***DO NOT install or modify the airbag. Any changes to the vehicle structure or airbag system wiring harness are strictly prohibited.***



***Changes to vehicle structure is prohibited. This may affect the normal operation of the SRS.***



***DO NOT allow these areas to be flooded with liquid and DO NOT use petrol, detergent, furniture cream or polishes.***



***If water contaminates or enters the airbag system, it may cause damage and affect deployment. In this case, even if the collision does not occur, the airbag may accidentally deploy. Immediately shut down the power system and disconnect the battery cable; do not try to start the power system. In this case contact an MG Authorised Repairer immediately.***

If the airbag warning lamp fails to illuminate or remains on, or there is any damage in the front or side of the vehicle and the cover of airbag module has any sign of damage, contact an MG Authorised Repairer immediately.

#### IMPORTANT

- The removal or replacement of an airbag module should be carried out by an MG Authorised Repairer.
- After 10 years from the initial date of registration (or installation date of a replacement airbag), some components will need to be replaced by an MG Authorised Repairer. The appropriate page of the Service Portfolio must be signed and stamped once the work has been completed.

### Replacing Airbag System Parts



*Even if the airbag does not deploy, collisions may cause damage to SRS in the vehicle. Airbags may not function properly after damage, and can not protect you and other passengers when a second collision occurs, which may cause serious injury or even death. To ensure that SRS can function properly after collision, please go to an MG Authorised Repairer to check airbags and repair as necessary.*

Airbags are designed for using once only. Once the airbags deployed, you must replace SRS parts. Please go to an MG Authorised Repairer for replacement.

### Disposal of Airbags

When your vehicle is sold, ensure that the new owner knows the vehicle is equipped with airbags, and is aware of the replacement date of SRS.

If the vehicle is scrapped, the undeployed airbags may have potential risks, therefore, before the disposal, they must be

deployed safely in a certain environment by a professional agency or an MG Authorised Repairer.



## Child Restraints

### Important Safety Instructions about Using Child Restraints

Children under the age of 12 years are recommended to be seated in the rear seats. Compared with adults, children's muscles and bones do not fully develop, so it is necessary to use dedicated child restraints to protect children. Use child restraints in rear seats to protect children based on the child's age, height and weight.

Only child restraints that comply with relevant regulations or standards (such as EU regulations ECE-R44 and ECE-R129 ) are permitted to be used in this vehicle. When choosing a child restraint, check relevant marks or instructions about the weight range applicable for the child restraint and the usage message on it.

When installing and using a child restraint, it is necessary to comply with relevant laws and regulations, the instructions supplied by the child restraint manufacturer, and the instructions on children's safety in this Handbook.

The correct use of child restraints will greatly reduce children's injury risk in accidents or reduce their injury

severity, please pay attention to the following when using child restraints:

- All children must use an appropriate child restraint.
- It is recommended that children shorter than 1.5 metres (or under 12 years of age) should use the appropriate child restraint, they cannot use a regular seat belt, it may cause the abdomen neck injuries.
- Never let children travel in an unsecured state. Care should not be neglected because of children sitting on the child restraint.
- Only one child may be carried in any one restraint.
- DO NOT put a child on the lap or in the arms of a passenger when sitting in any seat.
- Proper child restraints provide protection for your children.
- The backrest angle of the 2nd-row seat is adjustable, where there is a child restraint fitted the 2nd-row seat, adjust the backrest angle to the appropriate position and lock it in position.
- The relevant front seat may need to be adjusted forwards or the rear seat may need to be adjusted backward for correct installation of the rear facing child restraint to the rear seats.

- The position of seat head restraints may need to be adjusted for installing the forward facing child restraint to the rear seats.
- Never let your child stand or kneel on the seat during driving, otherwise, your child may be tossed and thus injury to their own and other people or even death may be caused when an accident occurs.
- If a child's body leans forward or the posture is not correct during driving, then the accident will increase the risk of injury.
- The method of using seat belts has a great influence on the maximum protection offered by the seat belt, and you must comply with the child restraint manufacturer's instructions on proper use of seat belts. If seat belts are not properly fastened, even a minor traffic accident may lead to injury.
- Child restraints that are not fitted correctly may move and injure other occupants in the event of an accident or emergency braking. Therefore, even if there is no infant or child in the child restraint, it should be fitted properly and securely in the vehicle.

## Warnings and Instructions on Use of Child Restraint on Front Passenger Seat



**NEVER** use a rearward facing child restraint on the front passenger seat with the front passenger airbag activated, otherwise **DEATH** or **SERIOUS INJURY** to the **CHILD** may occur.



**Use one child restraint per child.**

Please pay particular attention to the safe driving warning label on the sun visor. Always install the child restraint

in the rear seat for safety reasons. If, for any special reasons a child restraint must be installed in the front seat, please observe the warnings published in this manual and described on the warning label.

## Important Instructions on Children's Safety and Side Airbags



**Children should not be allowed in areas where side airbags may be deployed, there is a risk of serious injury.**



**Only recommended child restraints suitable for the age, height and weight of the child should be used and firmly fixed in the vehicle.**



**DO NOT place any items in areas where side airbags may be deployed, there is a risk of serious injury.**

In the event of a side collision, the side airbags can provide better protection for the passenger. However, when the airbag is triggered, a very strong expansion force is generated, if the passenger's seating position is not

correct, the airbags or items in the side airbag deployment area may cause injury.


Therefore, the correct child restraint must be used to secure the child correctly in the rear seat whilst ensuring the child's seating position is correct and there is enough space between the child and the side airbag deployment area for the airbag to deploy without any hindrance in a traffic accident, this will provide the best protection.

### Fixing Child Restraints

#### Secured Using Lap and Shoulder Belts



***Please DO NOT put the rearward facing child restraint on the front passenger seat with the front passenger airbag activated, this may cause serious injury or even death.***

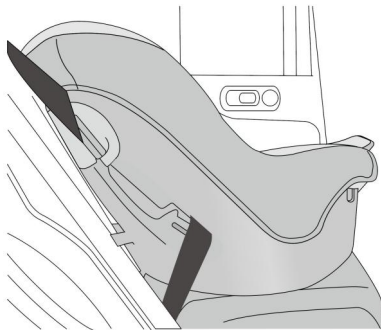

The child restraint can be secured to the rear seat by the lap and shoulder belts.

### Secured with ISOFIX Device



*The ISOFIX anchorages in the rear seat are designed for use with ISOFIX systems only.*




*Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.*

The 2nd-row seats of this vehicle on both sides are provided with ISOFIX interface (as indicated by the arrow in the figure below) connected to the ISOFIX child restraint. When installing and removing any child restraint system, always follow the manufacturer's instructions.



- Insert the tapered plastic sleeve into ISOFIX anchor between the seat cushion and backrest.
- Push the ISOFIX attachment of the child restraint into the tapered plastic sleeve already fitted, secure it in the ISOFIX anchor.

- After the installation, push or shake the child restraint with moderate force to confirm it is properly secured.

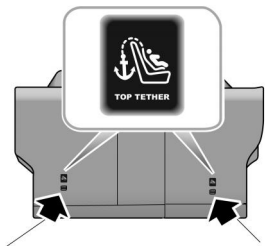

- The Top-tether (as arrowed in the figure above) for auxiliary fixation of the child restraint is provided at the back of the rear seat backrest. The single top-tether of the child restraint must pass through the space between the rods of the rear seat headrest, dual tether fixings must pass on the outside of each of the rods of the rear seat headrest.

**Note:** *When using seat mounted, universally approved child restraint systems, the top tether must be used.*

## Child Restraint Groups and Installation Position

Only approved child restraints suitable for children are allowed. Children taller than 1.5 metres may use the original seat belts in the vehicle. Child restraints must comply with relevant regulations or standards, such as EU regulations ECE-R44 and ECE-R129.

Mass Group	Seating Position		
	Front Passenger	2nd-row Outboard	2nd-row Centre
Group 0 (up to 10 kg)	X	U	U
Group 0+ (up to 13 kg)	X	U	U
Group I ( 9 to 18 kg)	X	U <sup>1</sup>	U <sup>1</sup>
Group II ( 15 to 25 kg)	X	U <sup>1</sup>	U <sup>1</sup>
Group III ( 22 to 36 kg)	X	U <sup>1</sup>	U <sup>1</sup>
Note: Description of letters in the table: U = Suitable for universal child restraint systems approved for this mass group; X = Seat position not suitable for child restraint systems in this mass group.			

<sup>1</sup> If the child restraint interferes with the headrest during the installation, please adjust the headrest to the highest position. If the interference persists, please remove and store the headrest properly.

## Approved Child Restraint Positions (for ISOFIX Child Restraints)

Fixing Position		Mass Group				
		Group 0	Group 0+	Group I <sup>1</sup>	Group II <sup>1</sup>	Group III <sup>1</sup>
		Rear-facing		Forward-facing	Rear-facing	Forward-facing
		Up to 13 kg		9~18 kg	15~25 kg	22~36 kg
Front Passenger	Size Class	No ISOFIX Equipped				
	Type of Child Restraint					
ISOFIX on both sides of the 2nd row	Size Class	C , D , E <sup>2</sup>	A , B , BI <sup>2</sup>	C , D <sup>2</sup>	-	-
	Type of Child Restraint	IL	IL , IU <sup>F</sup>	IL	IL	IL
2nd-row Centre	Size Class	No ISOFIX Equipped				
	Type of Child Restraint					

Note: IL = suitable for particular ISOFIX child restraints of the semi-universal category in the list. Please refer to the vehicle list recommended by child restraints manufacturer;



IUF = suitable for forward-facing ISOFIX child restraints of universal category approved for use in this mass group and ISOFIX size class;

<sup>1</sup> If the child restraint interferes with the headrest during the installation, please adjust the headrest to the highest position. If the interference persists, please remove and store the headrest properly;

<sup>2</sup> The ISOFIX size class for both universal and semi-universal child restraints is defined by the capital letters A to G . These identification letters are displayed on the ISOFIX child restraints.

**I-Size Child Restraint Table**

This table provides recommendations for the installation position of I-Size child restraint and the suitability of the corresponding child's size.

Type of Child Restraint	Front Passenger Seat	Rear Outboard	Rear Centre
I-Size Child Restraint	X	I-U	X
Booster Child Restraint	X	I-B	X

Note: I-U means it is suitable for forward-facing or rear-facing I-Size child restraint;


I-B means it is suitable for the following: forward-facing Group II/III ISOFIX Booster child restraint, and forward-facing I-Size child restraint for the child with height of 100-150 cm (about 39-59 inches);

X means it is not suitable for I-Size child restraint.

*Note: It is recommended that children at the age of 18 months should use Britax Baby Safe child restraint, children at the age of 3 use Duo Plus child restraint, and children at the age of 6 use Kidfix III S child restraint. The seat belt guide (safety protective device) and side connector extension piece shall be used. The side connector extension piece shall be extended to the outermost side when in use. Children at the age of 10 are recommended to use Nania Dream child restraint.*

**Group 0/0+ Child Restraint**

*Never place a rearward facing child restraint on the front passenger seat with the front passenger airbag activated.*

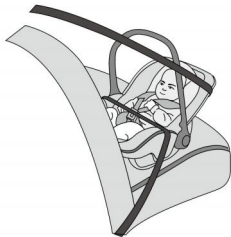

Child restraint that can be adjusted to lying position are the optimum selection for infants with a weight below 10 kg (usually corresponding to the infants younger than 9 months) or the infants with a weight below 13 kg (usually corresponding to the infants younger than 24 months).

**Group I Child Restraint**

*Never place a rearward facing child restraint on the front passenger seat with the front passenger airbag activated.*



Rear-facing child restraints are most suitable for infants whose weight is 9 ~ 18 kg (normally for those older than 9 months and younger than 4 years old). Forward-facing child restraints may also be used.

## Group II Child Restraint



*The diagonal section of the seat belt should pass across the shoulder and upper body, away from the neck. The lap section of the belt should pass across the hips, away from the abdomen.*



The combination of child restraint and lap-shoulder belt is most suitable for children whose weight is 15 ~ 25 kg (normally for those older than 3 years old and younger than 7 years old).

## Group III Child Restraint



*The diagonal section of the seat belt should pass across the shoulder and upper body, away from the neck. The lap section of the belt should pass across the hips, away from the abdomen.*




The combination of child booster seat and lap-shoulder seat belt is most suitable for children whose weight is 22 - 36 kg and whose height is below 1.5 m (normally for those about 7 years old or those older than 7 years old).

## Child Proof Locks



**NEVER leave children unsupervised in the car.**

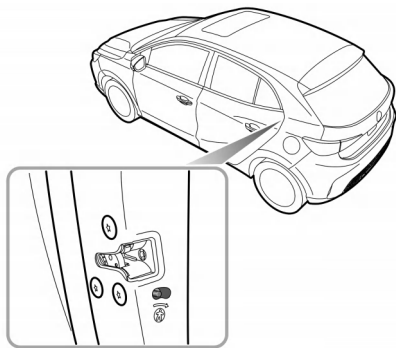

**Steps for enabling or disabling the child proof locks are as follows:**

- Open the relevant rear door, move the lever in the direction of the arrow to engage the childproof lock.

- Move the lever to the unlock position in the reverse direction of the arrow to disable the child proof lock.
- With the child proof lock engaged, the rear door on the corresponding side cannot be opened from inside the car, but can be opened from outside the car.

## Body Stability Control System

### Body Stability Control System


The body stability control system includes Dynamic Stability Control System ( SCS ) and Traction Control System ( TCS )

SCS is designed to assist the driver in control of driving direction. When SCS detects that the vehicle is not moving in the intended direction, it will intervene by applying brake force to selected wheels or through the drive system to prevent sliding and stabilise the driving direction by correcting the under-steering or over-steering.

TCS contributes to maintaining the control to the vehicle by improving the vehicle's traction trafficability and driving stability. TCS monitors the driving speed of each wheel individually. If spin is detected on one wheel, the system will automatically brake that wheel, transferring torque to the opposite, non-spinning wheel. If both wheels are spinning, the output torque of the drive system will be reduced in order to regulate wheel rotation until traction is regained.

SCS and TCS are automatically switched on when the Start switch is placed in ON/READY/RUNNING position. They can be switched off by using the switch located on the entertainment display or central armrest box.

On models where the switch is fitted into the centre console the position is indicated below:

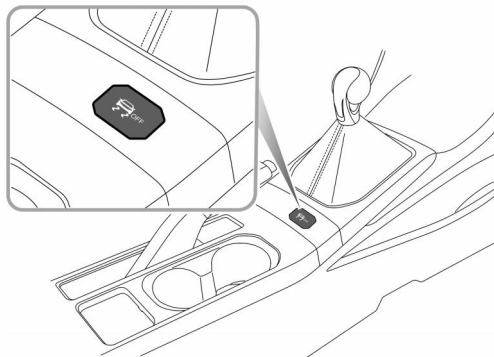

**Note:** *Disabling SCS and TCS will not affect the operation of ABS . Always disable SCS and TCS when driving with snow chains fitted.*

### **Reinstating the body stability control system**

After a battery disconnection/reconnection, the body stability control warning lamps will illuminate, and the dynamic stability control/traction control system will not work correctly.

In this case, the electric power steering (EPS) will require initialisation, i.e., move the steering wheel from lock to lock. The electric power steering (EPS) warning lamps and the body stability control warning extinguish, and the dynamic stability control/traction control system will be reinstated.

## Anti-lock Brake System (ABS)



*When travelling at high speed or there is a danger of aquaplaning, i.e. where a layer of water prevents adequate contact between the tyres and the road surface, ABS cannot overcome the physical limitations of stopping the car in a short distance. In these cases, it is the responsibility of the driver to maintain a safe distance from other vehicles.*



*DO NOT pump the brake pedal at any time, this will interrupt the operation of ABS and may increase the braking distance.*

The ABS is mainly used to automatically adjust the braking force of each brake when braking to prevent the wheels from being locked, thus avoiding dangerous situations such as loss of direction or side slip during emergency braking.

This system enables the driver to maintain control over the steering in case of emergency braking, keeping the vehicle stable, and improving safety.

Under normal braking conditions, ABS will not be activated. However, if the braking force exceeds the

adhesion between the tyres and the road surface, causing the wheels to lock, the ABS will automatically come into operation. This will be recognisable by a rapid pulsation felt through the brake pedal.

If an emergency situation occurs, the driver should apply full braking effort to trigger the ABS even when the road surface is slippery.

**Note:** *On soft surfaces such as powdery snow, sand or gravel, vehicles equipped with ABS may have a braking distance greater than those without ABS. This is because the natural action of locked wheels on soft surfaces is to build up a wedge of material in front of (or to the side of, if steering) the tyre contact patch. This effect assists the car to stop when braking or to change direction when steering.*

### IMPORTANT

- Although ABS can greatly improve driving safety, the real safety still depends on the driver's own standard driving behavior.
- The normal braking system remains fully operational and is not affected by partial or full loss of anti-lock braking system ( ABS ).



---

## **Auxiliary Brake System**

The auxiliary brake system consists of Electronic Brake Force Distribution System ( EBD )<sup>\*</sup>and Electronic Brake Assistance System ( EBA ).

The EBD <sup>\*</sup>automatically distributes the braking force between the front and rear wheels, so that the vehicle can have optimum braking performance under different load conditions.

The EBA increases the braking force applied on each wheel during emergency braking to assist the driver in quickly triggering ABS , thereby reducing the braking distance.

### Auto Hold\*



*The auto hold function cannot guarantee the stability of the vehicle when starting off or braking on hills especially on slippery or icy surfaces.*



*When auto hold stops the vehicle, for reasons such as engine shut-down, releasing the seat belt or pressing the auto hold switch, the electronic parking brake is applied. It cannot be guaranteed that the vehicle will be stabilised in all cases. For example, the rear wheels are on a slippery road surface, or the vehicle incline is too great (larger than 20%). Please make sure that the vehicle is safely stabilised prior to exiting.*



*DO NOT leave the vehicle when the engine is operating and the auto hold is active.*





*Auto hold cannot guarantee the electronic parking brake operation in all cases where the ignition system is shut down. Please ensure the electronic parking brake is applied and the vehicle is stabilised prior to exiting the vehicle.*



*The auto hold function should be switched off during the use of automatic car washes, the electronic parking brake may suddenly apply and cause vehicle damage.*

If the vehicle is required to stop frequently for long periods while driving (such as waiting at the traffic lights, stopping on a slope or in urban stop-and-go conditions), the Auto Hold function can assist you in stabilising the vehicle, allowing you to remove your foot from the brake pedal when the vehicle is stationary and the Auto Hold is active.

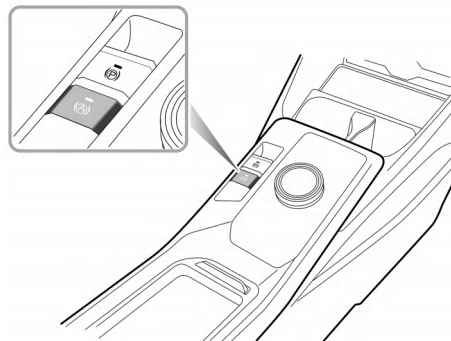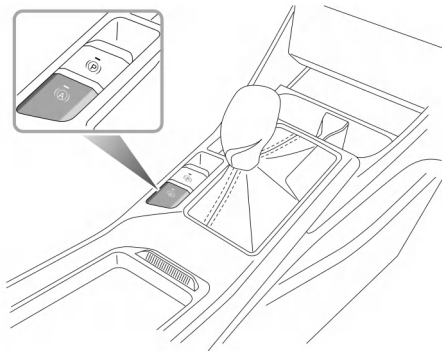

5

Auto Hold has 3 states as follows:

1 Standby:

With the driver's seat belt fastened, the door closed and the engine running, press the Auto Hold switch to switch the function from Off to Standby state. The indicator of Auto Hold Switch illuminates.

2 Operating:

When the vehicle is moving forward, press the brake pedal to a certain depth. After the vehicle has come

to a complete halt, the Auto Hold function is switched from Standby to Parking state. In this state, the green indicator 'A' on the instrument panel illuminates.

When the Auto Hold is in the Parking state, engaging D gear and pressing the accelerator pedal will automatically release the Auto Hold function taking into consideration the angle of the slope.

The Auto Hold will release from the Parking state if R gear is selected.

### 3 OFF:

Press Auto Hold switch again to disable the function.

The Auto Hold will automatically exit the parking state under some circumstances such as releasing the seat belt, turning off the engine, remaining static for a length of time or pressing the Auto Hold switch. In these cases, the EPB will be applied.

**Note:** *With the brake pedal pressed, operating the switch to turn the auto hold off, the system will NOT apply the parking brake.*

**Note:** *When the vehicle is in P gear, the auto hold function will not be engaged.*

## **Hill Hold Control (HHC)**



*HHC has limitations when subject to adverse conditions such as wet or icy surfaces and steep slopes.*



*HHC is not a substitute for parking brake application when carrying out a hill start. DO NOT exit the vehicle with only HHC applied, it may lead to a serious accident when HHC releases.*



*The car may roll if 'pull-away' is not achieved immediately after releasing the brake pedal.*



*Always ensure the brake pedal is pressed or electronic parking brake applied until drive is taken up.*



*Firm application of the brake pedal when stopping is required by HHC to generate sufficient brake pressure to maintain hold.*

HHC assists the driver by "holding" the vehicle during hill starts. If the driver releases the brake pedal, the HHC will hold the vehicle stationary for a short time.

The HHC will be activated when the following conditions are met simultaneously:

- The driver's seat belt has been fastened and the driver's door is closed.
- The vehicle is stopped on a slope longer than a preset period.
- SCS is fault free.
- EPB / manual parking brake is fault free and released.
- The engine is running.
- In D or R gear.
- Sufficient force has been applied on the brake pedal during braking.

**Note:** *The HHC can also work when the vehicle is reversing uphill.*

## Active Rollover Protection (ARP)

### Active Rollover Protection ( ARP )

The ARP system is a driver aid to assist the stability of the vehicle. It is not a guarantee that the vehicle will not roll over.

When the vehicle is at risk of rollover during dynamic driving (such as lane change) or steady driving (such as loop driving), the ARP will automatically brake the outside wheels to cause the vehicle to understeer and prevent rollover.

***Note: With ARP in use, the vehicle under-steers and it is normal if it fails to steer in accordance to driver expectations.***

***Note: The ARP system cannot overcome the laws of physics. It is a driver aid to assist the stability of the vehicle and under extreme conditions. It is not a guarantee that the car will not roll over.***

## Emergency Braking Hazard Warning Lights Control (HAZ)\*

If the driver makes an emergency braking manoeuvre and certain conditions are met while driving, the brake lamps will automatically flash to alert the drivers behind, thereby reducing the risk of rear-end collision accidents.

**Note:** *If the hazard warning lamps are being operated manually, this suspends the HAZ function.*

When the emergency braking manoeuvre is exited, the HAZ function will be switched off after a few seconds.

**Note:** *As the car speed drops to below 6 mph (10 km/h) and the system no longer flashes the brake lamps, the hazard warning lamps will illuminate automatically. Short press the hazard warning lamp switch or increase your speed to above 12 mph (20 km/h) for 5 s to switch off the hazard warning lamps.*

## **Pedestrian Alert System\***

In order to improve the safety, your car is fitted with a Pedestrian Alert System. When the vehicle is travelling at a low speed, speed, on electrical power, on electrical power,, the system controls a speaker that sounds to remind pedestrians in the vicinity of your presence.

### **Strategies of sounding warnings**

The speaker sounds when all of the following conditions are met:

- 1 The vehicle is Running/Ready;
- 2 The pedestrian alert system is fault free;
- 3 During acceleration, the vehicle speed is less than 18 mph (30 km/h); during deceleration, the vehicle speed is less than or equal to 15 mph (25 km/h).



## Tyre Pressure Monitoring System (TPMS)\*



***TPMS can not replace routine maintenance and checks of the tyre condition and pressure.***



***Using equipment that transmits on frequencies similar to that of the TPMS may interfere with the operation of the Tyre Pressure Monitoring System, this may illuminate a warning or register a temporary fault.***

TPMS uses pressure sensors built into tyre valves to continuously monitor pressure and transmit data to the ECU inside the vehicle using RF signals. If it deduces that the pressure of that tyre has fallen below the predefined limit of the system, the warning light in the instrument pack will illuminate (always yellow). For more information, please refer to 'Instrument Pack' in 'Instruments and Controls' section. TPMS can remind you of low tyre pressure, but it can not replace normal tyre

maintenance. For tyre maintenance, please refer to 'Tyres' in 'Maintenance' chapter.

***Note: TPMS only gives the driver a warning when the tyre pressure is low, and it will not inflate the tyre.***



If the TPMS malfunction indicator lamp illuminates, and the warning message such as "XX Tyre Pressure Insufficient" or "XX Tyre Pressure Low" is displayed, it is advised that you should stop the vehicle as soon as possible, check the tyre pressure and inflate the tyre to the standard pressure value. The tyre pressure label attached to the B pillar indicates the standard pressure value required by your vehicle tyres when they are cold.

Driving with under-inflated tyres may overheat the tyres and cause tyre faults. Over or under-inflated tyres wear out more rapidly and also have a detrimental effect on the car's handling characteristics. Under-inflated tyres increase the rolling resistance of the car which, in turn, increases power consumption.

## TPMS Self-learning

When replacing a TPMS sensor or receiver, or performing tyre rotation, TPMS self-learning is required, some vehicles can perform the following operations to complete self-learning:

- 1 Power off and lock the vehicle for 25 minutes.
- 2 Drive continuously at speeds in excess of 25mph (30 km/h) making numerous turns during the learning process.

**Note:** *Ensure that the TPMS sensor is an original factory component.*

**Note:** *If self-learning fails, the TPMS malfunction indicator lamp will illuminate, please try repeating the above operations.*

If you have any questions during the self-learning, please consult an MG Authorised Repairer for assistance.

## **Comfort Systems**

---


<i>Seat Adjustment</i>	<i>172</i>
<i>Ventilation System</i>	<i>175</i>
<i>A/C Control Panel</i>	<i>178</i>
<i>A/C Control Interface</i>	<i>180</i>
<i>Steering Wheel Entertainment Control Buttons</i>	<i>183</i>
<i>Intelligent Display interface</i>	<i>185</i>

### Seat Adjustment

#### Front Seats

**Note:** Due to different model configurations, the function of the front seats are not completely identical.

#### Manual Adjustment

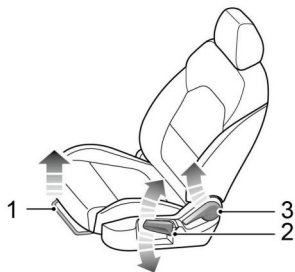

- Forward/Rearward Adjustment

Lift the lever (1) under the seat cushion, slide the seat into an appropriate position and release the lever. Make sure that the seat is locked in place.


- Cushion Height Adjustment\*

Lift the handle ( 2 ) repeatedly to raise the seat cushion; and press the handle ( 2 ) repeatedly downward to lower the seat cushion.

- Backrest Angle Adjustment

Lift the handle (3) to adjust the backrest to an appropriate angle; and release the handle ensuring that the backrest is locked in position.

### Rear Seats

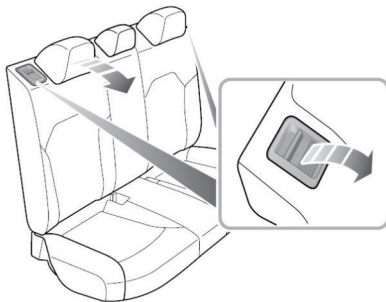

- Folding Rear Seats

If you want to increase the luggage space, first fully lower (or remove) all the rear seat headrests, pull up the control handle respectively on both sides and fold the seat backs forward.

**Note:** When the rear seat headrests are not fully lowered or the front seat backrest is inclined backward excessively, the folding of the rear seat is very likely to damage the back of the front seat or the rear seat headrest.

- Unfolding and Locking Rear Seat Backrests

When unfolding the rear seat back again, pull up the back control handle to release the seats back from the locked state, push the back until it reaches the locked position, the back is locked when you hear a click.

**Note:** When returning the rear seat backrest to the desired position, make sure that the rear seat belt is not trapped.

### Head Restraint Operation




**Adjust the height of the head restraint so that the top of it is in line with the top of the occupant's head. This location may reduce the risk of neck injuries in the event of a collision. Do not adjust or remove the head restraints while the car is moving.**



**Do not hang anything on any head restraint or head restraint rod.**


The head restraint is designed to prevent rearward movement of the head in the event of a collision or emergency braking, thereby reducing the risk of head and neck injuries. The height of split type head restraint can be manually adjusted.

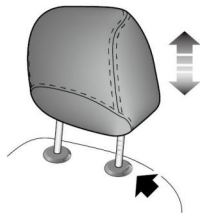

When adjusting a head restraint from a low to high position, pull the head restraint directly upward, and gently press it downward after it reaches the desired height to make sure that it is locked in position. To remove the head restraint, press and hold the guide sleeve button (as indicated by the arrow) on the left of the head restraint, then pull the head restraint upward to remove it.

When adjusting a head restraint from a high to low position, press the guide sleeve button (as indicated by the arrow) on the left of the head restraint, and press the head restraint downward; release the button after it reaches the desired height, and gently press the head restraint downward to make sure that it is locked in position.

## Ventilation System

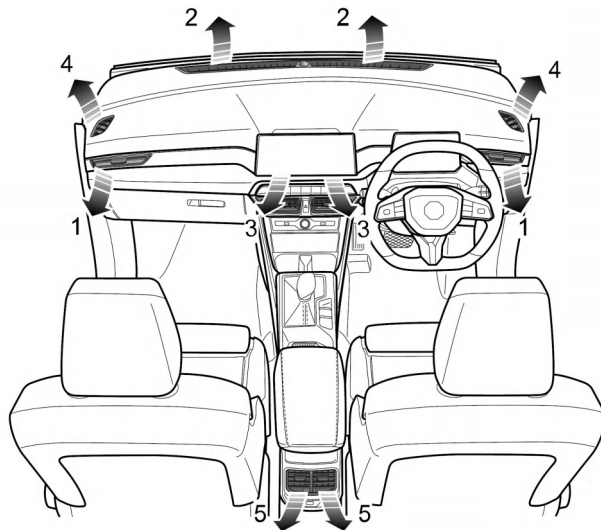

- 1 Side Vents
- 2 Windscreen Vents
- 3 Centre Vents
- 4 Front Side Window Vents
- 5 Rear Vents\*


The A/C system is used to adjust the temperature, speed, humidity and cleanness of the air inside the vehicle. Fresh air is drawn in through the air intake grille under the windscreen and the A/C filter element. Always keep the air intake grille clear of obstructions such as leaves, snow or ice.

### A/C Filter Element

An A/C filter element is used to filter the air. To remain fully effective, the filter element should be replaced at the recommended service interval.

### Vents


#### Regulation of Centre Vents

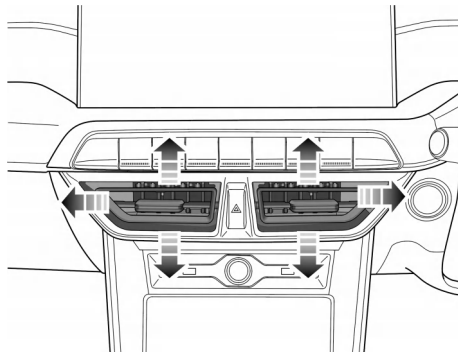

Move the knob in the centre of the louvres from side to side to open or close the vent. Direct the air flow by moving the knob up and down, or from side to side.




### Regulation of Side Vents

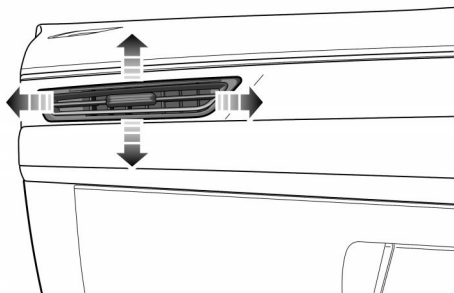

Move the knob in the centre of the louvres from side to side to open or close the vent. Direct the air flow by moving the knob up and down, or from side to side.


### Regulation of Rear Vents\*

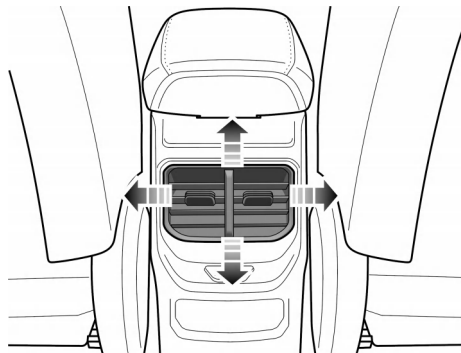

Move the knob in the centre of the louvres from side to side to open or close the vent. Direct the air flow by moving the knob up and down, or from side to side.

### A/C Control Panel

#### Control Panel

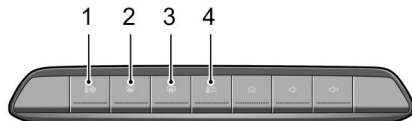

- 1 Shortcut Key to A/C interface
- 2 Defrost/Demist Button
- 3 Heated Rear Window Button
- 4 Shortcut Key to A/C On/Off

#### Shortcut Key of A/C On/Off



Touch the A/C On/Off shortcut key to turn the A/C system on/off.

**Note:** All functions will revert to the state prior to switching off if you operate the A/C system using the A/C Control Shortcut.

#### Defrost/Demist Button



Touch the Defrost/Demist button, the button indicator lamp will illuminate, and the system will enable Defrost/Demist function to clear the mist or frost on the windscreen and front windows.

Touch the Defrost/Demist button again to exit the defrost/demist function, and the system will return to the previous state.

In the defrost/demist mode, turning the cooling function on/off and switching the air circulation mode will not exit the defrost/demist mode; operating the air distribution mode will exit the defrost/demist mode.

#### Heated Rear Window Button



**The heating elements on the inside of the rear window are easily damaged. DO NOT scrape or scratch the inside of the glass. DO NOT stick labels over the heating elements.**




Enable/disable the heated rear window function by touching the Heated Rear Window button. The function is enabled when the indicator illuminates and

is disabled when the indicator goes out. The heated rear window function will be automatically disabled after it has been enabled and working for a certain period.

**Note:** *The heated rear window function will only operate when the vehicle is in the READY/RUNNING state.*

## A/C Control Interface

### A/C Control Interface

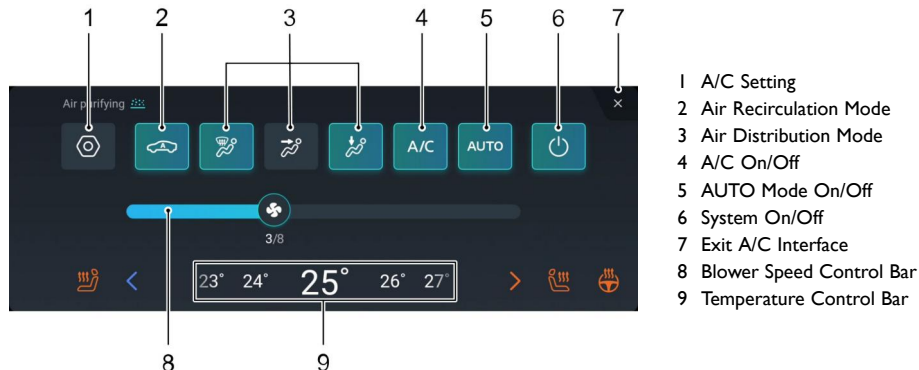

### System On/Off

Touch the System On/Off Button on the control interface to switch the system ON/OFF.

### A/C On/Off

Touch the A/C On/Off Touch Button to turn the A/C ON/OFF.

### Air Distribution Mode

Select the corresponding Air Distribution Mode Touch Button as required to regulate the air distribution mode.

There are three different air distribution modes and multiple combinations can be selected according to driver requirements.

Windscreen Mode: Directs air to the windscreen/defrost and front side window vents.

**Note:** *In this mode, a small amount of airflow will be directed to the side vents.*

Face Mode: Directs air to the side and centre vents.

Feet Mode: Directs air to the footwell vents.

**Note:** *In this mode, a small amount of airflow will be directed to the side, windscreen/defrost and front side window vents.*

Windscreen and Face Mode: Directs air to the windscreen/defrost, front side window, side and centre vents.

Windscreen and Feet Mode: Directs air to the windscreen/defrost, front side window and footwell vents.

**Note:** *In this mode, a small amount of airflow will be directed to the side vents.*

Face and Feet Mode: Directs air to the side, centre and footwell vents.

Windscreen, Face and Feet Mode: Directs airflow to the windscreen/defrost, front side window, side, centre and feet vents.

### Air Recirculation Mode

Touch the air recirculation mode button as needed to adjust the air recirculation mode.

During internal recirculation mode, the A/C system circulates the air inside the vehicle to meet the requirements of rapid cooling or heating, and at the same time, it can prevent fumes and dirty air from entering the vehicle.

During the external circulation, the A/C system draws air from outside the vehicle to ensure fresh air enters the vehicle.

**Note:** *Leaving the system in internal recirculation mode can cause the windscreen to mist. If this happens, turn on the defrost/demist mode.*


### Temperature Control

Touch and Slide the temperature control bar to regulate the temperature of the air supplied by the vents.

### **Blower Speed Control**

Touch and Slide the blower speed control bar to regulate the blower speed.

## Steering Wheel Entertainment Control Buttons

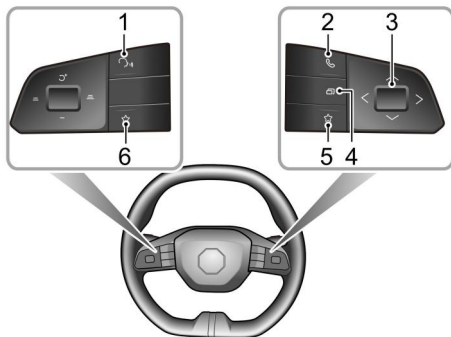

- 1 **Speech Recognition Function Button**  
Short press to turn on the phone's connected voice recognition function; short press again to exit the speech recognition function.
- 2 **BT Phone Button**

Short press to answer an incoming call, long press to end the call.

- 3 **Function Adjustment Button (OK Button)**  
Whilst in the infotainment mode, move up to increase volume, move down to decrease volume, move to the right to select next track and move to the left to select the previous track. Short press to mute or cancel mute.
- 4 **Infotainment/Instrument Display Button**  
The function adjustment button is a dual-purpose button, which when pressed will switch control between the Instrument display and the Infotainmentsystem.
- 5 **Right Shortcut Button**  
This function button can be customized in the vehicle settings on the homepage.
- 6 **Left Shortcut Button**  
For vehicles equipped with panoramic imaging, this key defaults to 360 on/off; For vehicles without panoramic imaging, this key is ★ and defaults to on/Close the vehicle settings interface; Other functions can be

customized in the vehicle settings on the infotainment screen.




## Intelligent Display interface

### Basic Operations

#### Control Panel



- 1  ( HOME Button )  
Short press to return to the main interface; long press to restart the system.
- 2 Volume Down Button
- 3 Volume Up Button

## Main System Interface

Swipe left and right to display all system function icons, such as music, radio, video, Bluetooth phone, A/C, etc.



- 1 Audio Source Information  
Displays music/radio status information, including song name, play/pause, etc.
- 2 Status Bar  
Displays Bluetooth, Weather, Time, etc.
- 3 Menu Bar  
Displays shortcut function icons: HOME, Navigation, Music, Phone, My Car. Long press on the menu bar
- 4

icons (except for the HOME icon) to edit the menu bar.

#### 4 Homepage Card


Including Music, Climate, Mobile Internet, etc.

Click to enter the relevant function interface.

**Note:** *The pictures in this chapter are for reference only. The content displayed on the interface may vary depending on different vehicle configurations, software versions, and market regions, etc. Please refer to the actual vehicle interface diagram for accuracy.*

### Bluetooth Pairing and Connection

The steps required to pair a Bluetooth device and connection are as follows:

- 1 Touch [Bluetooth] in the Settings interface to enter the Bluetooth Connection interface, and turn on the Bluetooth switch.
- 2 Open the Bluetooth function on your phone and search for this entertainment console to pair
- 3 Your phone will receive a Bluetooth pairing request, confirm and click 'Pair'.
- 4 After successful pairing, the status bar of the vehicle will display . If pairing fails, please try repeating the above steps.

Successfully paired phones will be stored in the 'pairing history' list. Touch the phone name list to connect to the Bluetooth of the phone, and touch [Disconnect] to disconnect the Bluetooth connection. Touch [Remove the device] to remove the phone from the pairing history device list.

## Vehicle-Mobile Phone Connection

**Note:** Due to the differences of mobile phone models and system versions, some mobile phones may not be able to use the vehicle-mobile phone interconnection function normally.

### General functions

Long press the floating ball on the interconnection projection screen interface, which can be dragged as needed. After release, the edge of the hovering ball will be displayed.


Click on the floating ball on intelligent display interface to exit the screen, return to the homepage.

When the Vehicle-Mobile Phone Interconnection is interconnected, enter interface again and display the face before exiting the screen.

### Apple CarPlay

Apple CarPlay enables information interaction between an Apple mobile phone and the on-board infotainment system, including map, music, telephone, voice recognition and more.


### Connection Method

- 1 Confirm that your iPhone has the Carplay function and that it is turned on.
- 2 Connect the mobile phone to the infotainment system main frame using an approved USB cable.
- 3 In the main interface, touch [Apple CarPlay] area to enter the Apple CarPlay interface.
- 4 After the vehicle and mobile phone are successfully connected, you can operate the iPhone using the infotainment system screen.
- 5 Press the HOME button on the control panel to return to the main system interface. Or click on the icon  on the screen homepage to return to the car homepage.

### Android Auto

Android Auto enables information interaction between the android mobile phone and the on-board infotainment system, including map, music, telephone, voice commands and so on.

### Connection Method

- 1 Connect the mobile phone to the infotainment system using an approved USB cable.
- 2 In the main interface, touch the [Android Auto] area to enter the Android Auto interface.
- 3 After the vehicle and mobile phone are successfully connected, you can operate the Android Auto system using the infotainment system screen.
- 4 Press the HOME button on the control panel to return to the main system interface. Or click  on the screen homepage to return to the car homepage.

### Navigation

#### Warnings and safety information

The navigation system helps you find your way to your destination with the built-in GPS receiver. MG3 NAVIGATION does not transmit your GPS position, meaning you will not be tracked by external users.

It is important to look at the display only when it is safe to do so. If you are the driver of the vehicle, we recommend that you plan and review your route before you start your journey. Plan the route before your departure and stop if you need to change the route.

You must follow the traffic rules. If you deviate from the planned route, the navigation system changes the instructions accordingly.

#### Activation

When you start your navigation system for the first time, a few steps are necessary to set it up.

A GPS signal is required to activate the navigation system. Please launch the system in an area with strong GPS signal.

You will receive a warning if a GPS signal is not available. In this case, please drive to a more suitable location, and start the system again.

Please follow these steps to activate your navigation system:

- 1 Read and accept the end-user license agreement. This is necessary to use the product.
- 2 Read and accept a reminder that while using navigation, you must always follow actual traffic rules and pay full attention to driving.

## Navigation view


The navigation system works with digital maps which are not simply the computerised versions of traditional paper maps. Similarly to paper road maps, the 2D mode of digital maps shows you streets and roads. Elevation is also illustrated in colour.

Tap the map anywhere if you want to browse your surroundings. Buttons appear to change between a 3D/2D view, and to rotate or zoom the map. You can also swipe your fingers to move the map in any direction.

The features available in this view are different when you are driving without a destination and when you are navigating on a planned route.

## Driving without a destination

The navigation view displays the following screen buttons and information on the map when you do not have a planned route:

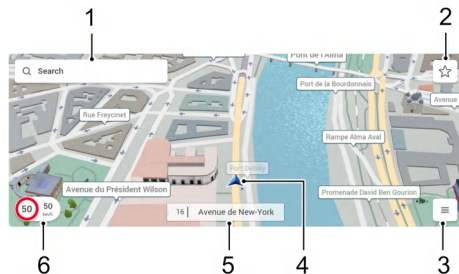

- 1 Searching for a destination

Tap to set a destination for your route. See chapters on "Selecting a destination" below for detailed instructions.

## 2 Saved locations

Tap to navigate to a previously saved location. This includes your Home / Work address. Tap 'Home' or 'Work' to define their locations, then use the same buttons to find your way.

## 3 Navigation menu

By tapping it, you can open the Navigation menu, where you can reach other parts of the navigation system.

## 4 Current position marker

The current position is displayed as a blue arrow by default. When there is no GPS position, the current position marker is transparent and it shows your last known position

## 5 Street name


It shows the current street name. By tapping it, you can open the 'Where Am I' screen with information on your current location.


## 6 Speed limit warning

It shows the current speed when driving.

## Driving with a destination

The navigation view displays the following screen buttons, data fields, and route information on the map during navigation:

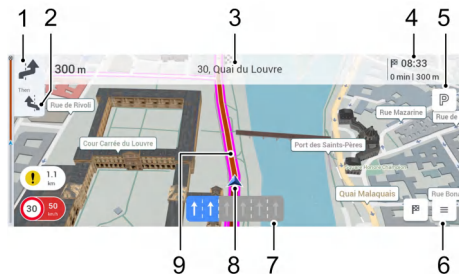

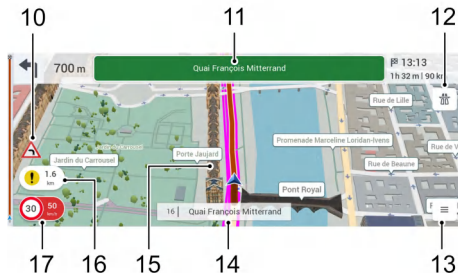

- 1 Following manoeuvre  
if another manoeuvre is close to the first, this will then be displayed.
- 2 Next turn preview  
It shows the type of the next manoeuvre and its distance.
- 3 Next street  
It displays the name of the next street.
- 4 Data fields  
Three data fields show the following information: the estimated time of the arrival at the destination, the

remaining time of the trip and the remaining distance to the destination.

You can change the default values by tapping the area where the data fields appear.

- 5 Parking around destination  
It appears near the destination. By tapping it, you can check the available parking facilities around your destination.
- 6 Destination menu  
It appears near the destination. By tapping it, you can check the trip summary, the menu also allows you to view places around the desired destination. You are also able to save the current location.
- 7 Lane information  
On multi-lane roads, it shows the lanes ahead and their directions. The highlighted arrows represent the lanes and direction you need to take.
- 8 Current position marker  
The current position is displayed as a blue arrow by default. When there is no GPS position, the current

position marker is transparent and it shows your last known position.

### 9 Planned route

The planned route is displayed as a green line.

### 10 Warning road sign

It shows any warnings for the current road (for example, dangers, sharp corners).

### 11 Signpost

It shows the available destinations and the road details, similar to how they appear in real life.

### 12 Motorway services

By tapping it, you can check the details of the next few service stations (petrol stations, restaurants) when travelling on a motorway.

### 13 Navigation menu

By tapping it, you can open the Navigation menu, where you can reach other parts of the navigation system.

### 14 Street name

It shows the current street name. By tapping it, you can open the 'Where Am I' screen with information on your current location.

### 15 3D objects

It will display hills, mountains, roads, landmarks, and buildings in 3D.

### 16 Alert point warning

This feature notifies the user when approaching speed cameras, school zones and railroad crossings etc. Ensure this feature is legal in the country you intend to drive in.

### 17 Speed limit warning


It shows the current speed limit of the road you are driving on.

If you are approaching a motorway exit or a complex intersection (and the needed information exists), the map is replaced with a 3D view of the junction. You can turn this off in Settings/Navigation View.

When entering a tunnel, the map is replaced with a generic tunnel image. You can turn this off in Settings/Navigation View.



## Navigation menu

Tap  to open the Navigation menu:

Tap "Multipoint Route" to build your route by adding several route points in a customised order. See "Creating a multi-point route".


Tap "Setting" to customise the way the navigation software works. See "Settings".

In the navigation menu, you also have the following additional controls:

- 3D View mode  
Indicates the map view mode (it is a 3-dimensional view by default). Tap it to change the view to '2D' mode or '2D, North up' mode.
- Unmute  
Mute voice guidance or mute all all sounds of the navigation system.

When you are navigating with a planned route, the following menu options are also available:

- Tap "Add stopover" to add an intermediate destination to your route.

- Tap "Delete Route" to delete the next waypoint or the whole route.
- Tap "Route Summary" to view the route in its full length on the map and make changes to it.
- On the Route Summary screen, you can tap "Alternatives" to check alternative routes to your destination, and select another one if needed.
- On the Route Summary screen, you can also tap  to access the following additional options: Route Preferences, Avoid and Itinerary.

## Selecting a destination with quick search options

You can search for addresses, places of interest, saved locations, or recent destinations using the same search screen. This section shows how you can navigate to pre-defined locations such as:

- parking, fuel stations and restaurants as common places of interest.
- your recent destinations
- your saved locations

- a location defined by its geographical coordinates

### **Operation**

Tap "Search" and the combined search screen appears.

Choose your destination from the following:

- 1 Select a place of interest: parking places, fuel stations, restaurants.


In all cases, the search is carried out near your current location.

- 2 Tap "Around Here" on the next screen if you wish to change the search area to another city.

- 3 Select a previous destination: Unless this is the first time that your navigation system is used, you will also have a list of previous destinations on the screen. Tap any of them to use it again as your destination, or scroll the pages with your fingers if what you need is further down the list.

- 4 Select a saved location: Tap ☆ to access your previously saved locations. If you have not set your home or work address yet, you can do so on the next

screen. Later, these two will be quickly accessible from the main navigation view.

The map appears with the selected destination in the middle. If necessary, tap the map somewhere else to modify the destination. The Cursor  appears at the new location.

Tap "Select" to confirm the destination.

Shortly, your route is calculated and shown on the map in full.

To start navigation right away, just wait for a few seconds, or tap "Start".

On this screen, you can check and adjust the planned route in several ways: Tap "Alternatives" to compare this route to other possible routes. Tap ^ to change route preferences (such as route planning method and road types), set up an avoidance, display an itinerary.

### **Selecting a destination by name or address**

You can search for addresses, places of interest, saved locations, or recent destinations using the same search

screen. This section shows how you can navigate to an address or location by entering its name:


- 1 Tap "Search" and the combined search screen appears.
- 2 Tap "Name or address", then start typing either an address (street name and house number), or the name of a location that can be a place of interest, a previous destination, or one of your saved locations.  
Under the text input field, you can see the search area. This is Global by default, which means that the search will be carried out in a very wide area around your current location. Tap this button to change the search area to another city.
- 3 Type a few characters, and the search will start in the background. In most cases, you do not have to type the entire name or address of the destination. Pause typing for a few seconds to display the matching search results above the keyboard.

- 4 Tap the search result you were looking for.  
If it is not yet displayed, keep typing, or scroll the search results with your finger to hide the keyboard and browse the list in full-screen. (You can enable the

keyboard again by tapping the input field at the top of the screen.)

Tap ^ to sort the list of search results by relevance, name or distance.

- 5 The map appears with the selected destination in the middle.

If necessary, tap the map somewhere else to modify the destination. The Cursor  appears at the new location.


You can tap ^ to store the selected location in Saved Locations.

- 6 Tap "Select" to confirm the destination.
- 7 Shortly, your route is calculated and shown on the map in full.

To start navigation right away, just wait for a few seconds, or tap "Start".

On this screen, you can check and adjust the planned route in several ways:

- 1 Tap "Alternatives" to compare this route to other possible routes.


- 2 Tap  to change route preferences (such as route planning method and road types), set up an avoidance, display an itinerary.

### **Creating a multi-point route**

The planned route can have several intermediate destinations (stopovers, waypoints) before its final destination. You can create a multi-point route in the following ways:


#### ***Adding a stopover to an existing route***


Select a destination as described in the previous chapters.

On the Map screen, tap  to open the Navigation menu.


Tap "Add Stopover" to add an intermediate waypoint. The steps are the same as for the first destination.

#### ***Creating a new multi-point route***

- 1 On the Map screen, tap  to open the Navigation menu.
- 2 Tap "Multipoint Route"

- 3 Tap "Destination" to add any of your intended destinations. The steps are the same as described in the previous chapters.
- 4 Now you have several options to add a new route point:
  - Tap "Final Destination +" to add a new destination to the end of your route. This changes your previous destination into a waypoint on the route.
  - Tap "Insert Waypoint +" between any of your route points to add a stopover to your route.
  - Tap "..." next to any route point to access further options, such as changing their order on the route, deleting or saving a route point, or checking its location on the map. The  icon gives you further options: you can delete the entire route, or you can optimise the order of the waypoints or the order of all route points, including the destination.
- 5 When finished, tap "Calculate Route" to start navigation.

## Settings menu

To adjust navigation-related Settings, tap , and "Setting".

The Settings menu provides the following options:

### Route Preferences

Route Planning Method: tap ">" to change your preference between fast, easy and green (fuel-saving) route types.

Road Types: choose what kind of roads to include or exclude when planning a route. For example, disable 'Road With Period Charge' if you do not want to buy a motorway vignette.

### Sound

Adjust the different sound volumes and fine-tune the behaviour of voice guidance.

### Warnings

Speed Limit: Set up whether you want to be warned when speeding. You can define a tolerance level, meaning that you will be warned a little below or above the legal limit.

Alert Types: Use the main switch to control all alerts (such as speed cameras or dangerous locations), or fine-tune warnings by individual alert types.

The warning for speed cameras is usually disabled when you are in a country where speed camera warnings are prohibited. However, please always make sure that using this feature is legal in the country where you intend to operate it. Use it on your own responsibility.

### Navigation View

Fine-tune the appearance of the map screen.

Select between different map color schemes for daytime and night driving

Use the switch next to each item to enable or disable certain map and navigation features, such as:

- 3D landmarks and buildings
- a route progress bar showing your advance on the planned route
- the motorway services icon
- an automatic overview that zooms out the map when driving on longer roads

- lifelike signpost display above the road
- a 3D static junction view in complicated intersections
- a tunnel view when the GPS signal is lost in long tunnels

### ***Regional***

Change the voice guidance language and speaker, or adjust the time and date formats and the measurement units.

### ***GPS Information***

Shows the accuracy of the current GPS signal and the number of satellites in view.

### ***About***

Check legal and statistical information about your navigation software.

### ***Start Configuration Wizard***

Run a setup wizard to modify the basic navigation-related settings.

## ***Intelligent Driver Assistance***

---

<i>Instructions for Intelligent Driver Assistance</i>	200	<i>360 Around View Monitor System*</i>	239
<i>Camera and Radar</i>	202	<i>Drive Fatigue Monitoring System*</i>	240
<i>Constant Speed Cruise Control*</i>	206		
<i>Adaptive Cruise Control (ACC ) *</i>	209		
<i>Intelligent Cruise Assist (ICA ) *</i>	217		
<i>Intelligent Overspeed Warning*</i>	220		
<i>Speed Limit Assistance System*</i>	222		
<i>Lane Departure Assist*</i>	226		
<i>Front Collision Assist ( FCA ) *</i>	229		
<i>Rear Driving Assistance System(BSD , LCA、 RCTA)*</i>	232		
<i>Ultrasonic Sensor Parking Aid</i>	236		
<i>Parking Camera*</i>	238		

## Instructions for Intelligent Driver Assistance

### Disclaimers for Intelligent Driver Assistance Function

**Before using the Driver Assistance functions, the user should read, accept, understand and pay particular attention to the following:**

- I At present, all available Intelligent Driver Assistance functions require the driver to maintain full control during the entire driving process, the vehicle is NOT to be considered as full autonomous driving. The safety and reliability of such functions will require more mileage to demonstrate in order to achieve a driving level that far exceed those of human drivers. The implementation of autonomous driving also depends on legal regulations and administrative approval (some jurisdictions may take longer). With the evolution and improvement of such functions, your vehicle will be updated and upgraded in feasible ways (subject to that the software and hardware on the vehicle are available at that time).

- 2 The user and driver should carefully read, learn, understand and implement the relevant content in the Owner's Handbook of this vehicle, and use these functions (and any related functions) in accordance with the requirements herein (in particular, the functional module instructions and use restrictions for intelligent driver assistance and intelligent cockpit). The user and the driver must always ensure they maintain full control and responsibility, observing all local Road Traffic Safety Laws and Regulations, and always be in a state of readiness to resume control of the steering wheel and braking of the vehicle. In the event of any personal or property damage caused by the user or the driver (for example, failure to use the vehicle in accordance with the requirements set out in the Owner's Handbook, or failure to retake control of the steering wheel and/or brakes at any time as required by the Road Traffic Safety Law), the user or the driver shall bear all responsibilities and consequences.
- 3 The Intelligent Driver Assistance function can only play an auxiliary role under certain conditions, and CANNOT replace the driver's observation of the



road environment. The driver should drive cautiously and **MUST NOT** rely on the function. The Owner's Handbook has stated clearly in its obligation the various restrictions on the use of auxiliary functions (i.e. the circumstances under which certain functions may not be enabled, become impaired or may stop working).

- 4 The Intelligent Driver Assistance function has requirements for complete and successful operation, these include conditions such as weather, road surfaces and driver operations, operation may become impaired, fail or become limited due to several factors, which are not related to the design and application defects of the product. If the user and the driver cannot understand or accept the above disclaimers, do not use the Intelligent Driver Assistance functions. If the functions are enabled, please exit immediately.



*Camera and radar operation may be impaired in certain driving situations, weather and road conditions. In areas where there are complex traffic conditions such as intersections road junctions with congestion, or poor general conditions, the driver **MUST** take full control of the vehicle.*

The Intelligent Driver Assistance system can detect the road and environmental information ahead of the vehicle using the camera. It can provide warning messages or intervene when certain conditions are met in order to assist the driver in controlling the vehicle in a more safe and reliable manner.

**Note: DO NOT operate any infotainment switches whilst driving. If you wish to make any settings changes, please pull over when it is safe and legal to do so.**

# INTELLIGENT DRIVER ASSISTANCE


## Camera and Radar

### Driver Assistance Camera

The following cameras are installed on the vehicle: 360° surround view cameras, front view camera module, parking camera (subject to the specification of the vehicle purchased).

The camera carries out target identification in the form of vision, and provides identification information for related functions after identifying the target in the surrounding area of the vehicle.

### Camera Installation Position

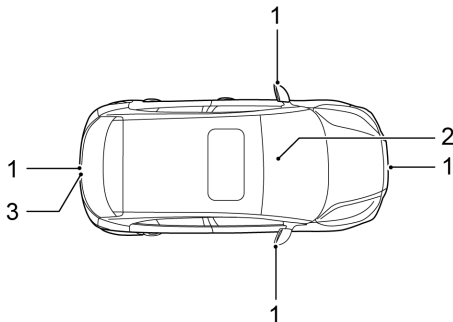

- 1 360° Surround View Camera
- 2 Front View Camera Module
- 3 Parking Camera

**Note:** The configuration of cameras are subject to the specification of the vehicle purchased.

**Note:** To ensure that the front view camera works properly, always keep it clean and free of ice, snow, water, dust, etc.

**Note:** To ensure the camera works properly, always keep the windshield in front of the camera clean with no objects blocking the view between the camera and the windshield.

**Note:** Please wipe camera lenses with a soft cloth or wash with water (of low pressure) when foreign objects are found on the camera surface. Do not use a high pressure water jet to flush the camera, and do not use abrasive or sharp objects to clean the camera.

## Camera Calibration

The calibration of front view camera requires professional knowledge and tools. If calibration is required, please seek an MG Authorised Repairer. Recalibration of the front view camera module is necessary in the following situations:

- The module has a maladjustment failure, for example the position of the camera has changed;
- Remove/refit the camera or its bracket;
- Remove/refit the windscreen;
- The four-wheel alignment parameters have changed.

**Note:** If the front detection radar is subject to strong vibration or slight impact, the mounting position of the front detection radar needs to be checked and re-calibrated as necessary.

**Note:** Please consult an MG Authorised Repairer for more details about camera calibration.

In the following situations, the detection performance of front view camera will be affected:

- Driving in poor weather conditions where visibility is reduced or impaired due to thick fog, heavy rain, snow, dust etc.
- Affected by ambient light, for example low light levels at night, poor auxiliary lighting, excessive light from the rear lights of the vehicle ahead, light from oncoming vehicles, abrupt changes in brightness with a quick bright/dark change (tunnel entrance/exit), driving on surfaces with strong reflective properties (road surface covered with water or snow), tunnels, inside a building etc.
- The front view camera view is partially or fully blocked by obstacles, e.g. dust, foreign objects, dirt/mud, snow, excessive water (rain), frost or water spray from the road on the windscreen.
- The windscreen viewing area is damaged.

## INTELLIGENT DRIVER ASSISTANCE


- Not calibrated after removing/refitting the front view camera or the windscreen.
- The front view camera is not secured in place.

### Driver Assistance Radar

Depending upon specification, the vehicle may feature ultrasonic radars.

These are only used to provide identification information for related functions after identifying the target in the surrounding area of the vehicle.

### Radar Installation Position

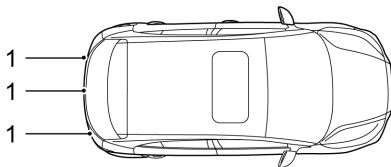

I Ultrasonic Radar

## INTELLIGENT DRIVER ASSISTANCE

**Note:** *The configuration of the radars is subject to the vehicle purchased.*

**Note:** *To ensure that the radars work correctly, always keep them clean and free of ice, snow, water, dust, etc.*

**Note:** *Please wipe with soft cloth or wash with water (of low pressure) when foreign objects are found on the radar surface. Do not use a high pressure water jet to flush the radar, and do not use abrasive or sharp objects to clean the radar.*


- The radar may not work correctly due to limited detection performance in an open field (such as an open parking lot) or on an open road.

**Note:** *Any snow on the radar should be removed with a brush, while any ice is preferably removed with a deicing spray.*

**In the following situations, the detection performance of the radars will be affected:**

- The radar or bumper is covered by foreign objects such as ice, snow, mud, stickers, tape or trims, etc.
- Unauthorised paint and spray processes are used for the bumper.
- The radar or bumper is damaged or their installation positions changed.
- The radar is affected by electromagnetic interference from other equipment.
- Small and enclosed environments such as small garages etc.
- The vehicle is towing a trailer.

## Constant Speed Cruise Control\*

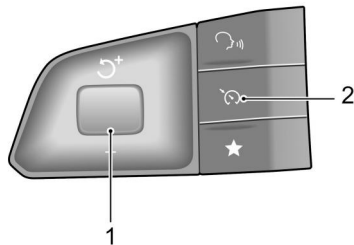

1 Speed Adjustment Knob

2 Pilot Switch

Cruise control enables the driver to maintain a constant road speed without using the accelerator pedal. This is particularly useful for motorway cruising, or for any journey where a constant speed can be maintained for a lengthy period.

## Cruise Control System Activation

The cruise control system is operated using the cruise switch located on the left side of the steering wheel.

- 1 When the ignition/Start/Stop switch is in the ON/READY/RUNNING position and the speed is greater than 25 mph ( 40 km/h), short press the Pilot switch ( 2 ) to activate the Cruise Control system. The constant speed cruise indicator lamp in the instrument pack illuminates green. The target speed of the cruise system will be set at the actual speed the vehicle is traveling when it is activated, and the target speed is displayed below constant speed cruise control indicator lamp. After activation, the cruise control system will maintain the target speed without pressing the accelerator pedal.
- 2 If the cruise control system is in the Standby state and the current speed is greater than 25 mph ( 40 km/h ) , the cruise control system can also be activated by pressing the speed adjustment knob ( 1 ). The target speed of the cruise system will be set at the actual speed the vehicle is traveling when it is activated, the

target speed is displayed below constant speed cruise control indicator lamp.

**Note:** *The adjustment knob can be operated in various ways such as being moved up/down, or being pressed. Pressing the adjustment knob when the constant speed cruise control system is activated will update the vehicle speed to the current speed.*

### Target Cruise Speed Adjustment

When the cruise control is active:

The vehicle can still be accelerated by pressing the accelerator pedal (such as overtaking). When the new desired speed is achieved, press the speed adjustment knob ( 1 ) to update the target cruise speed to the current speed.

Push the knob ( 1 ) upwards/downwards and hold to accelerate or decelerate automatically, then release the switch when the desired speed is reached.

In addition, pushing the knob upwards/downwards and releasing immediately can adjust the speed. Each push will increase or decrease the speed approx. 1 mph ( 1 km/h ) .

When the cruise control system is in operation, the vehicle can still be accelerated by pressing the accelerator pedal (such as overtaking). Releasing the accelerator pedal will return the vehicle to the set cruise speed.

### Pause

Cruise control will drop from active to Standby, and the constant cruise control indicator lamp in the instrument panel will illuminate white if:

- Short press Pilot Switch ( 2 ).
- Brake pedal is applied.
- The shift control knob is moved to N position.
- Poor road conditions may lead to the activation of the Stability Control System ( SCS ). For safety reasons, the cruise control system will automatically exit to Standby state.
- Undulating roads or hills may cause the vehicle's speed to drop or rise excessively, and the cruise control system will automatically exit to the Standby state.
- The electronic parking brake ( EPB ) is activated.

# INTELLIGENT DRIVER ASSISTANCE

## Resume

When the cruise control remains in Standby after the disengagement, move the speed adjustment knob ( 1 ) upwards once to activate it again. The target cruise speed will return to the target speed before exiting the cruise control system.

## OFF

Long press the Pilot switch ( 2 ) to turn off the cruise control system.

### Note:

- *Do not use the constant speed cruise control system in unsuitable conditions, such as in rainy days, on slippery surfaces, or in traffic conditions that do not allow to maintain a constant speed.*
- *ALWAYS turn off the constant speed cruise control system when it is not in use.*
- *When the vehicle is in "Sport" mode, it is not recommended to use the constant speed cruise control system.*
- *During the operation of cruise control system, the actual speed may deviate from the target speed*

*to some extent due to control precision or road conditions.*

- *Excessive deviation of the actual vehicle speed from the target speed due to a slope or road surface, etc., or triggering the SCS to operate may cause the constant speed cruise control system to automatically exit to the "Standby" mode.*
- *Do not press a switch for excessively long periods, or press multiple switches simultaneously, this may cause the constant speed cruise control system to fail. If this situation occurs, when it is safe to do so, please restart the vehicle.*



### Adaptive Cruise Control ( ACC )\*



*The adaptive cruise control system is designed as a comfort system. It provides assistance to the driver, but DOES NOT replace any of the driver's responsibilities. When using the adaptive cruise control system, it is important that the driver maintains concentration at ALL times and is prepared to take action. Otherwise, accidents or personal injuries may occur.*

Depending on whether there is vehicle ahead, the adaptive cruise control system can also conduct automatic switching between constant speed cruise and car-following cruise. With the adaptive cruise control system, the vehicle is allowed to conduct constant speed cruise within a certain speed range, or conduct car-following cruise by setting the distance between the vehicle and vehicles ahead. If a vehicle is detected in your driving path, the ACC system may apply moderate brakes or acceleration to maintain the selected following distance.

*Note: The adaptive cruise control system is designed for highways and roads in good condition. It is recommended that it is NOT used on urban roads and mountain roads.*

### Adaptive Cruise Activation



*After following the vehicle ahead to a stop, the driver must ensure that there are no obstacles or other traffic participants, such as pedestrians, directly in front of the vehicle before starting off to follow the vehicle ahead again.*



*Whilst using the car following cruise function, it is strongly recommended that the driver does not touch the accelerator pedal. Any activation of the accelerator will not allow the adaptive cruise control system to automatically apply the brakes, and the vehicle is only controlled by the driver's manipulation of the accelerator pedal.*

## INTELLIGENT DRIVER ASSISTANCE




**DO NOT** exit the vehicle when the adaptive cruise control system is keeping the car stationary. Before exiting the car, the shift control knob should be in the P position and the ignition/Start/Stop switch should be OFF.



If the adaptive cruise control system is keeping the car stationary, the driver still needs to pay full attention and be ready to apply the brakes manually. Note that if the system is disabled, turned off or cancelled, the vehicle will no longer stay still, it may move forward or slip backward.



When driving on a bend, the adaptive cruise control may actively reduce the vehicle speed to maintain vehicle stability and safety.

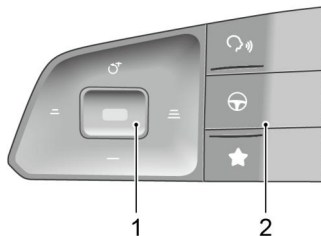

1 Adjustment Knob

2 Pilot Switch

The adaptive cruise control system can be set using a combination of switches in the entertainment display and the left side of steering wheel.

- 1 If the switch in the entertainment display is in the OFF state, the adaptive cruise control system is in the OFF state.
- 2 Move the switch in the entertainment display to the ON state, and short press the Pilot switch ( 2 ), the indicator light for the adaptive cruise control system in

the instrument pack will illuminate blue, the adaptive cruise control system is in Activated state , The speed must be above 3 mph ( 5 km/h ) for first activation, its target speed is the actual speed at activation , If your vehicle speed is less than 20 mph ( 30 km/h ) , then the target speed of the system is set at 20 mph ( 30 km/h ) . If the speed of the vehicle ahead is greater than the target cruise speed of your vehicle, your vehicle will maintain the target speed and conduct constant speed cruise; if the speed of the vehicle ahead is lower than the target cruise speed of your vehicle, it will enter the car-following cruise, a tail schematic of the vehicle ahead is displayed in instrument pack. In the car-following cruise, you can follow the vehicle ahead to a stop. If the stop time is below a certain time, your vehicle may automatically start off to follow the vehicle ahead, if this is not the case, then the driver will need to re-activate the adaptive cruise control system according to the instrument prompt.

**Note: Manual deactivation of the Electronic Stability Control ( ESC ) will inhibit the operation of the adaptive cruise control system.**

### Adaptive Cruise Target Following Distance Adjustment

When the adaptive cruise control system is activated, move the adjustment knob to the right (to increase the following distance) or left (to decrease the following distance) ,there are 3 distance settings, the distance setting will be displayed on the instrument pack.

Select an appropriate following distance according to the difference in relative speed with the vehicle ahead, the higher the relative speed, the longer the following distance that should be selected. Always consider the traffic and weather conditions, the optional following distance range may not be suitable for all drivers and driving conditions.

### Adaptive Cruise Control Target Speed Adjustment

When the adaptive cruise control system is active:

- Use the accelerator pedal to reach the desired speed, press the adjustment knob ( I ), then release the adjustment knob and accelerator pedal. The vehicle will cruise at the desired speed.
- Move the adjustment knob upward or hold, the target speed will increase until the desired set speed appears

the instrument pack, then release the knob. When it is confirmed that there is no vehicle ahead or the vehicle ahead is beyond the pre-selected following distance, the vehicle speed can be increased to the set speed.

- Move the adjustment knob downward or hold, the target speed will decrease until the desired set speed appears in the instrument pack, then release the knob, and the speed will be decreased to the set speed.

**Note:** *If the vehicle ahead continually makes hard acceleration or deceleration manoeuvres the adaptive cruise control may not be able accurately maintain the required distance between vehicles. It is important that the driver always concentrates and pays attention to the current vehicle position and situation in case they need to make a braking or avoidance manoeuvre.*

### **Adaptive Cruise Control Pause**

When the adaptive cruise control system is activated, short press the Pilot switch to cancel the function, the system will exit to the Standby state.

### **Automatic Deactivation of Adaptive Cruise Control**

In the following situations, the adaptive cruise control system may be automatically suspended transferring full control of the vehicle to the driver:

- Operating the switch to turn off the ACC;
- Pressing the brake pedal whilst the vehicle is in motion;
- Moving the shift control knob to either R or N position;
- The driver unfastens his/her seat belt;
- Pressing and holding the accelerator pedal beyond a preset time period;
- Opening any door, bonnet or tailgate;
- Pulling the EPB switch up to apply the parking brake;
- Following the vehicle ahead to a stop and the stop time exceeds a certain period of time.
- The camera or radar view is blocked, the surrounding environment triggers the preset safe exit mechanism of the sensors, or the system fails.

**Note:** *If following the vehicle ahead to a stop with the adaptive cruise control system enabled, if any of the following conditions occur whilst the vehicle is in a stopped state, the EPB will automatically be applied:*

- *The driver unfastens the seat belt;*
- *The driver door is opened;*
- *The stationary time exceeds the preset time period.*

### **Adaptive Cruise Override**

If the driver has cause to use the accelerator pedal when the adaptive cruise control system is activated, the

vehicle will remain in Cruise mode while the vehicle speed increases. When the accelerator pedal is released, the adaptive cruise control system will resume to operate at previously set cruise speed.

## **Adaptive Cruise Resume**

If the adaptive cruise control system has reverted to, or been switched to, the Standby mode it can be reactivated by moving the adjustment knob upwards. The target cruise speed will automatically be set to the target speed before exiting the adaptive cruise control system.

## **Clearing Target Speed Memory**

Switching the adaptive cruise control off in the entertainment display will turn off the adaptive cruise control system, synchronously clearing the system's set speed in the memory. Switching the ignition off will also clear the set speed stored.

## **Adaptive Cruise Control System**

### **Impairment and Ineffectiveness:**

- Your vehicle encounters a vehicle or object which is stationary or traversing the lanes;

- Approaching the vehicle ahead too fast, and the system cannot apply sufficient braking force;
- The vehicle ahead is an oncoming vehicle, or it is making an emergency braking manoeuvre;
- The vehicle ahead is reversing;
- A vehicle suddenly cuts into the lane in front;
- Your vehicle encounters a vehicle driving at a low speed;
- Your vehicle encounters a vehicle with loaded items protruding from the body profile of the vehicle;
- Encounters a vehicle with a higher chassis (e.g., a truck);
- Your vehicle encounters pedestrians, non-motor vehicles or animals;
- The vehicle is driving on an uneven road or a complex traffic road section;
- The vehicle makes a sharp turn;
- Entering, leaving or driving in a tunnel;
- Driving in the shadow of mottled trees;
- Excessive weight being carried in the boot space or cargo area causing the front of the car to point upwards.

## **Special Driving Environments**



The adaptive cruise control system has its limitations. Listed below are some conditions that may be beyond the

## INTELLIGENT DRIVER ASSISTANCE

safe operating limits. The driver should maintain control of the vehicle and must remain alert at all times. They must pay special attention to the traffic conditions and surroundings, select the appropriate speed and be ready to take any required actions.


- 1 When turning at the intersection or driving into or out of the curve following the vehicle ahead, the adaptive cruise control system may be unable to detect the vehicle ahead on the same lane, or may respond to the vehicles in another lane.

**Note: DO NOT use the adaptive cruise control system on entrance/exit ramps or sharp curves.**

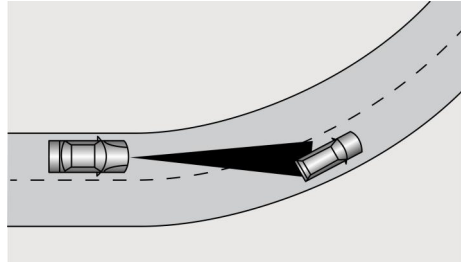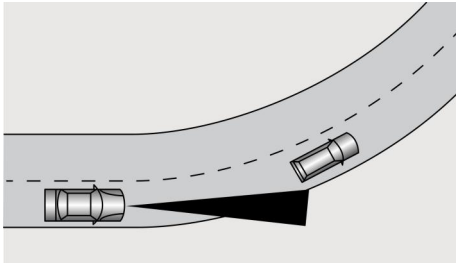


- 2 If the vehicle ahead changes the lane, but does not drive into the new lane completely, the adaptive cruise control system may be unable to detect the vehicle. If the vehicle ahead changes lanes, but does not exit the lane completely, the adaptive cruise control system may determine that the vehicle ahead has already left and accelerates.

## INTELLIGENT DRIVER ASSISTANCE

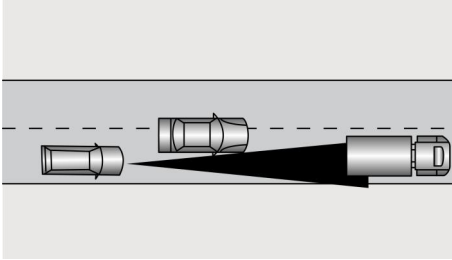


- 3 When driving on uneven roads that may include steep climbs or dips please **DO NOT** use the adaptive cruise control system..

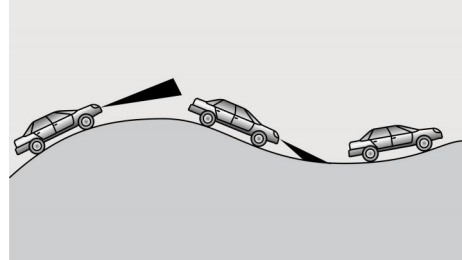

- 4 When driving behind a vehicle that is only partially overlapping your vehicle,( A ) in the graphic, the adaptive cruise control system may be unable to detect anything.

## INTELLIGENT DRIVER ASSISTANCE

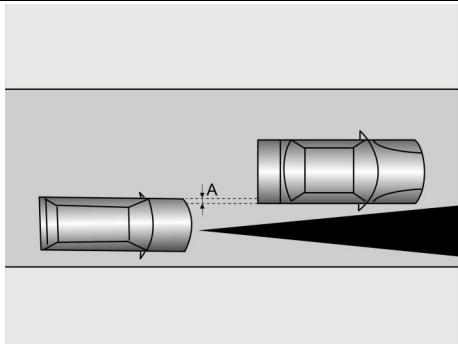


**Note:** Please **DO NOT** use the adaptive cruise control system in the following situations:

- *Driving in bad weather conditions;*
- *When the ambient light is insufficient, the light is too bright, or the forward lighting of the vehicle is poor;*
- *Driving on rough or poor road surfaces;*
- *Driving through roadworks or construction sites;*
- *Driving on low friction roads (the rapid change of the tyre traction may result in the excessive wheel slip).*



### Intelligent Cruise Assist ( ICA )\*

*Intelligent cruise assist is an auxiliary function that provides driver assistance. It provides assistance to the driver, it DOES NOT replace any of the drivers responsibilities. Due to the limitations of system detection and control when using the intelligent cruise assist, the driver must always hold the steering wheel, pay attention to the surrounding environment of the vehicle, and correct or take over the steering wheel control when necessary, otherwise accidents or personal injuries may be caused.*

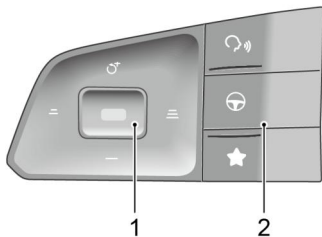

- Adjustment Knob ( 1 );
- MG Pilot ON/OFF Switch( 2 );

The system switch is located in the entertainment display, and the system can be turned on/off in the appropriate Driver Assistance interface.

When the following conditions are met:

- The Traffic Jam Assist system switch on the entertainment display is on;
- The system detects the lane lines on both sides of the vehicle;
- The vehicle is in Drive gear.

Short press the Pilot switch to activate the traffic jam assist system. The traffic jam assist system works on the same basis of the adaptive cruise control system. If the lane lines ahead on both sides are clear, the system will assist the vehicle in driving within the lane; if there is a vehicle ahead and the lane lines are not clear when driving at a low speed, the system can assist the vehicle in following the track of the vehicle ahead.

**Note:** With the ACC system activated, the traffic jam assist system can be activated without pressing the MG Pilot switch when the above conditions are met.

## INTELLIGENT DRIVER ASSISTANCE

---

In the absence of a steering input from the driver for a certain period of time, the system will provide warnings.

***Note: The driver should adjust the vehicle speed and the following distance according to the road visibility, weather and road conditions. The traffic jam assist system does not respond to pedestrians, animals, stationary vehicles and vehicles that drive across the lane or oncoming vehicles in the same lane. If the traffic jam assist system cannot reduce the vehicle speed timely and effectively, the driver MUST apply the brakes. In congested conditions, should another vehicle cut into the lane being used by the vehicle under traffic jam assist system control, the system may not detect the vehicle in adequate time to make a braking manoeuvre. In this case the brakes should be applied by the driver.***

**The Traffic Jam Assist system will be impaired or ineffective in the following conditions:**

- The hazard lamps are activated;
- The driver indicates in the direction of the lane line about to be crossed;
- The driver applies the accelerator rapidly, carries out an emergency manoeuvre or makes a hard brake pedal application;

- The system detects that the driver has not moved the steering wheel for a preset time period;
- During system intervention, the steering wheel is being manipulated by the driver;
- The lane line is too thin, damaged or fuzzy;
- The vehicle is being driven on a bend with a small curvature radius, the road is too narrow or too wide;
- The vehicle has just entered a road section with lane lines or is being driven on a road section without lane lines;
- The vehicle is not in D ;
- The vehicle changes lanes or sways laterally too fast;
- The turning radius of the car using the traffic jam assist system to track in front is too small;
- The anti-lock brake system ( ABS ) and the dynamic stability control system ( SCS ) are activated;
- Faults exist in the anti-lock brake system ( ABS ), dynamic stability control system ( SCS ), electric power steering system ( EPS ), etc.

It is recommended to turn off the traffic jam assist system in the following situations:

- Driving in a sports style or manner;

- Driving in bad weather conditions;
- Driving on rough or poor road surfaces;
- Driving through roadworks or construction sites;
- Driving on steep, winding or slippery roads (such as snow covered and icy roads, wet roads and roads covered with water);
- Driving on grass tracks or unpaved roads.

### IMPORTANT

- In cases where the number of lanes increase or lanes merge the driver **MUST** take full control of the vehicle.
- In areas where there are complex traffic conditions such as intersections or road junctions with congestion, the driver **MUST** take full control.
- The driver **MUST** be aware of the surroundings and be able to assume full control of the vehicle when using the traffic jam assist system to track the car in front should the need arise.

### Intelligent Overspeed Warning\*



*The intelligent speed assist system is an auxiliary function. It may display an incorrect speed limit value or no speed limit value in the instrument pack due to various factors. As a result, the vehicle speed is not restricted within the correct range. The driver still needs to observe the speed limit of the road traffic, and speeding is strictly prohibited.*



*The front view camera cannot recognise speed limit signs painted on the road surface. The driver **MUST** observe these speed limits and adjust the their speed accordingly.*

The setting interface for the intelligent overspeed warning is in the entertainment display. The driver can operate the intelligent overspeed warning system using the soft switch in this display. The vehicle detects the speed limit sign (such as <sup>(60)</sup>) at the roadside with the front view camera. When the vehicle speed exceeds the speed limit indicated by the speed limit sign speed indicator, the indicator flashes

accompanied by a warning sound to remind the driver to control the vehicle speed.

The speed limit sign speed indicator illuminates when the intelligent overspeed warning is active. When the vehicle passes the first speed limit sign identified, the speed sign speed indicator displays the real-time speed limit value. If a speed limit sign with the same limit value is detected, the limit value displayed in the speed sign speed indicator remains.

**Note:** *If the vehicle changes lane, makes a turn, turns around in the intersection, or identifies the speed limit cancellation, the original speed limit value on the instrument pack may be reset and displayed as “-” till a new speed limit sign is detected. If the conditions are not met, the original speed limit value will maintain and not be reset. The driver **MUST** observe the speed limits and adjust the their speed accordingly.*

### The intelligent overspeed warning system function may be impaired if:

- 1 The detection performance of front view camera is affected;
- 2 The vehicle is driven at a high speed;

# INTELLIGENT DRIVER ASSISTANCE

- 3 The speed limit signs are obscured by trees at the roadside, ice/frost, snow, dust, etc; or the speed limit signs are placed improperly or damaged;
- 4 When there are multiple speed limit signs set up over the road or at the roadside, the overspeed warning will be automatically set according to the maximum speed limit value.
- 5 Non standard speed limit signs or signs that contain additional information.
- 6 The speed limit signs set up at a fork in the road, on a bend or on-ramp/off-ramp.
- 7 During manoeuvres such as lane-changing.

## IMPORTANT

- The camera may not correctly recognise speed limit signs during poor lighting conditions, bad weather, non-standardized or sheltered speed limit signs or the camera's own restrictions which include the recognition of similar signs (e.g., recognise a weight limit sign as a speed limit sign, or recognise a minimum speed sign as the maximum speed sign).
- The camera cannot identify the text provided below the speed limit sign, such as Auxiliary Lane, 100 m Ahead, School Section, 7:00-10:00 , etc. The camera will identify the speed limit sign with text as a normal speed limit sign.
- Some drastic and rapid steering operations of the driver may be judged as changing lane or turning around in the intersection by the system, resulting in the identified speed limit signs being cleared.
- In cases where a speed limit sign contains multiple speed limits. The camera may not identify all the speed limits.

## Speed Limit Assistance System\*

### Speed Limit Assistance System




*The speed limit assistance system is only an auxiliary function. In cases where the speed limit sign is not standardized or the front view camera is blocked, the wrong speed limit value or no speed limit value may be displayed on the instrument pack, and the vehicle is not restricted in the correct speed range, so the driver still needs to be responsible for real-time evaluation of the speed limit on the road.*



*The front view camera cannot recognise speed limit signs painted on the road surface. The driver **MUST** observe these speed limits and adjust the their speed accordingly.*

The setting interface of the speed limit assistance system is located in the entertainment display. Enter the Vehicle Settings - Speed Limit Assistance System interface to select from the following modes: Smart, Manual and Off.

- 1 Smart: i.e. smart speed limit. The vehicle detects the speed limit sign (such as ) at the roadside with the front view camera, and intervenes using the speed control to keep the vehicle speed in the permitted maximum speed limit;
- 2 Manual : i.e. manual speed limit. The driver sets the maximum speed with the button on the left side of the steering wheel and uses the speed control system to keep the speed in the permitted maximum speed limit. Refer to “Speed Settings of Manual Speed Limit” for the description;
- 3 Off: Turn off the speed limit assistance system.

**Note:** *If the mode selection cannot be performed, please confirm that the cruise function in the entertainment display is OFF and try again.*

### Speed Settings of Manual Speed Limit


After the manual speed limit function is enabled, the speed limit can be set by using the button on the left side of the steering wheel, as follows:



- 1 The manual speed limit function enters Standby state after it is enabled, the indicator lamp of the speed limit assistance system in the instrument pack illuminates in white. Press the Pilot switch ( 2 ) to activate the manual speed limit function the indicator lamp of the speed limit assistance system illuminates green. After the first press of the Pilot switch, if the actual speed is below 20 mph( 30 km/h), the target speed limit value displayed on the speed limit assistance system indicator is 30 km/h; if the actual speed is above 20 mph( 30 km/h), the current speed is rounded up to the nearest multiple of 5 as the target speed limit value. Move the speed adjustment knob ( 1 ) upward/downward to change the target speed limit value of the manual speed limit. The target speed limit value will be increased/decreased by 5 mph( 5 km/h) every time the adjustment control is moved upwards/downwards. The speed limit value will change continuously by 5 mph( 5 km/h) when the adjustment control is moved upwards/downwards and held.

- 2 With the manual speed limit activated, the system will limit the vehicle speed within the target limit speed; if the vehicle speed is greater than the driver inputted target speed, the system will gradually slow the vehicle to below the inputted target limit value.
- 3 After the manual speed limit is activated, the driver can briefly press the Pilot switch ( 2 in the figure below) to reinstate the system to the Standby state. Press the Pilot switch ( 2 in the figure below) again to restore the manual speed limit function.
- 4 Fully apply the accelerator pedal to temporarily exceed the speed limit value when the manual speed limit is active. At this time, the indicator lamp of speed limit assistance system in the instrument illuminates in green and flashes accompanied by an audible alarm.

## INTELLIGENT DRIVER ASSISTANCE

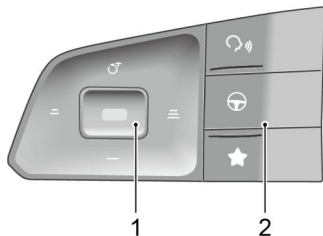

1 Adjustment Knob

2 Pilot Switch



The state indicator for the speed limit assistance system illuminates in green when the smart speed limit is enabled. When the vehicle passes the first speed limit sign identified, the speed sign speed indicator displays the real-time speed limit value. If a speed limit sign with the same limit value is detected, the limit value displayed in the speed sign speed indicator remains.

**Note:** If the vehicle changes lane, makes a turn, turns around in the intersection, or identifies the speed limit cancellation, the original speed limit value on the instrument pack may be reset and displayed as “-” till a new speed limit sign is detected. If the conditions are not met, the original speed limit value will remain and not be reset. The driver **MUST** observe the speed limits and adjust their speed accordingly.

The driver can temporarily exit the speed limit assistance system by the following operations:

- 1 Fully apply the accelerator pedal to temporarily exceed the speed limit value. At this time, the indicator lamp of speed limit assistance system in the instrument pack illuminates in green and flashes accompanied by an audible alarm;
- 2 Briefly pressing the Pilot switch ( 2 in the figure above) can temporarily exit the speed limit assistance system functions. In this case, the indicator lamp of the speed limit assistance system in the instrument changes into white (into dark colour in daylight mode); press the Pilot switch again to resume the speed limit assistance system functions.



## The smart speed limit may may be impaired if:

- 1 The detection performance of front view camera is affected;
- 2 The vehicle is driven at a high speed;
- 3 The speed limit signs are obscured by trees at the roadside, ice/frost, snows, dust, etc; or the speed limit signs are placed improperly or damaged;
- 4 There are multiple speed limit signs set up over the road or at the roadside; Currently, the front view camera can only identify the speed limit signs for the lane the vehicle is being driven in;
- 5 The speed limit signs set up at the forks in the road, the curves and the on-ramp/off-ramp;
- 6 Lane change, etc.

## IMPORTANT

- The camera may not correctly recognise speed limit signs during poor lighting conditions, bad weather, non-standardized or sheltered speed limit signs or the camera's own restrictions which include the recognition of similar signs (e.g., recognise a weight limit sign as a speed limit sign, or recognise a minimum speed sign as the maximum speed sign).
- The camera cannot identify the text provided below the speed limit sign, such as Auxiliary Lane, 100 m Ahead, School Section, 7:00-10:00 , etc. The camera will identify the speed limit sign with text as a normal speed limit sign.
- Some drastic and rapid steering operations of the driver may be judged as changing lane or turning around in the intersection by the system, resulting in the identified speed limit signs being cleared.
- In cases where a speed limit sign contains multiple speed limits. The camera may not identify all the speed limits.

### Lane Departure Assist\*



*The lane departure assist system is an auxiliary system, which can provide assistance to the driver. It does NOT remove the responsibility of safe driving from the driver. When choosing to use the lane keeping assist system, the driver MUST always pay attention to the surroundings, hold the steering wheel and be prepared to make manoeuvres at any time. Failure to maintain overall control of the vehicle may result in an accident or personal injury.*



*The lane departure assist system does not always recognise the lane lines or kerbs. Sometimes poor road surfaces, certain road structures or objects may be mistaken for lane lines or kerbs. When such situations occur, the lane departure assist system must be turned off immediately.*

The lane departure assist system switch is located on the entertainment display. The system can be turned on/off in

the appropriate Intelligent Driver Assistance interface, and the mode can be selected.

#### Alert

The system detects the lane lines ahead when the following detection conditions are met:

- The function is in ON state;
- The vehicle speed is above 37 mph ( 60 km/h);
- The lane lines are clear, and the system detects at least one lane line;

When the wheel is about to cross the lane line or has already crossed the lane line, the system will give warnings to remind the driver to take action and correct the direction in time to keep the vehicle running within the lane lines. The function will exit when the speed is less than 33 mph ( 55 km/h).

#### Assist

The system uses the front view camera to detect the lane lines ahead of the vehicle. The system will be activated when the following detection conditions are met:

- The function is switched ON.

# INTELLIGENT DRIVER ASSISTANCE

- Vehicle speed is above 37 mph ( 60 km/h).
- Lane line markings are clear and the system recognises at least one lane line.

When a wheel is about to cross the lane line, or has already crossed the line, the system will provide assistance to the driver by keeping the vehicle in between the lane lines by applying corrective steering intervention and simultaneously displaying a prompt. The function will automatically exit when the vehicle speed drops below 33 mph ( 55 km/h).

## Emergency Lane Keeping ( ELK )

The system uses the front view camera to detect lane lines, kerb and adjacent lanes of oncoming traffic ahead. The system will be activated when the following detection conditions are met:

- The function is switched ON.
- Vehicle speed is above 37 mph ( 60 km/h).
- Lane line markings are clear and the system recognises at least one lane line.

When a wheel is about to cross the lane line or kerb, or the vehicle is approaching oncoming traffic in the adjacent lane, and there is the possibility of a collision, the system will

provide assistance to the driver by keeping the vehicle in between the lane lines or kerbs, or applying a sharp steering intervention and simultaneously displaying a prompt. The function will automatically exit when the vehicle speed drops below 33 mph( 55 km/h).

In cases of several interventions within a certain period of time and in the absence of detecting any steering input by the driver during the interventions, the system will provide warnings.

### IMPORTANT

- In cases where the number of lanes increase or lanes merge, the driver **MUST** take full control of the vehicle.
- In areas where there are complex traffic conditions such as intersections or road junctions with congestion, the driver **MUST** take full control of the vehicle.

**The lane departure assist system will be impaired or ineffective in the following conditions:**

- The driver indicates in the direction of the lane line about to be crossed.
- The hazard lamps are activated.
- The driver applies the accelerator rapidly, carries out an emergency manoeuvre or makes a hard brake pedal application.
- The system detects that the driver has not moved the steering wheel for a preset time period (in the mode of assist or emergency lane keeping).
- During system intervention the steering wheel is operated (in the mode of assist or emergency lane keeping).
- The lane line is too thin, damaged, or unclear.
- Irregular or damaged kerbs.
- The vehicle is driven on the bend with a small curvature radius, the road is too narrow or too wide.
- The vehicle has just entered a road section with lane lines or is driven on a road section without lane lines.
- The vehicle changes lanes or sways laterally too fast.

- The vehicle is not in D.
- The vehicle speed is below 33 mph ( 55 km/h), or too high.
- The anti-lock brake system (ABS) and the dynamic stability control system (SCS) are activated.
- Faults exist in the anti-lock brake system (ABS), dynamic stability control system (SCS), electric power steering system (EPS), etc.

It is recommended to turn off the lane assist system in the following situations:

- Driving in a sports style or manner.
- Driving in bad weather conditions.
- Driving on a poor road surface.
- Driving through roadworks or construction sites.

### Front Collision Assist ( FCA ) \*



*The driver remains responsible for the safety of the entire driving process, even if the vehicle is equipped with a forward collision system. The driver **MUST** pay full attention and drive carefully. As with all the driver assist systems, the forward collision system cannot prevent accidents or avoid collisions in all situations. The driver **MUST** always remain in control to avoid accidents or emergency situations.*



***Emergency braking whilst under the control of forward collision system may cause injuries to the passengers. Therefore, drive carefully and all passengers **MUST** wear seat belts at all times.***



*Ensure that the forward collision system or ignition/vehicle power system is switched off when being towed. If the forward collision system is enabled when the vehicle is being towed, adverse effects may affect the safety of your vehicle, the towing vehicle and the people around.*



*To avoid the occurrence of accidents, never specially test the functions of forward collision system.*

The front collision assist switch is located on the infotainment display. Enter the corresponding interface for driving assistance to turn the system ON/OFF, and make mode selection.

### Alarm

When the system detects that there is a risk of collision between the vehicle and the vehicle in front in the same lane, warnings will be provided to prompt the driver to slow down in time and maintain a relatively safe distance from the vehicle ahead.

## Auto Emergency Braking

When the system detects that there is a risk of collision between the vehicle and the vehicle directly in front of the vehicle, the brake system will automatically intervene to decelerate the vehicle, so as to avoid collision accidents or mitigate damage from collision accidents. If the vehicle is braked and stopped under the system control, it will remain stationary for a short time. Full control of the vehicle will then be returned to the driver.

**The system will only slow the vehicle down automatically if the following conditions are met:**

- The dynamic stability control system (SCS) and traction control system (TCS) are fault-free and ON.
- The vehicle is in D or N.
- The airbags are not deployed.

**Note:** *In some cases, the driver may not have anticipated any braking intervention and does not want to apply the brakes whilst the front collision assist is braking heavily, the driver can temporarily cancel this operation by heavily pressing the accelerator pedal after ensuring that it is safe to do so.*

**The front collision assist system operation may be impaired if:**

- The vehicle ahead approaches head-on, crosses the intersection or jumps the queue rapidly in a short distance;
- The vehicle ahead does not follow the rules of driving and parking (such as drives on the lane lines);
- The vehicle ahead is not in the same lane as your vehicle or the vehicle ahead is partially obscured;
- The vehicle ahead is an abnormal vehicle (modified or abnormal shape);
- The vehicle ahead is a vehicle with higher chassis;
- The vehicle ahead is a large vehicle at close range (such as tractor, trailer, towing vehicle etc.);
- The vehicle ahead is unusual transportation (such as a horse, cart, carriages etc.);
- The system detects the side of a vehicle;
- The contour of the vehicle ahead is unclear (such as water being sprayed by the wheels of the front and surrounding vehicles);
- The vehicle ahead does not have or has obscured tail lamps when driving at night or in a tunnel;

- The tail lamps of the vehicle ahead are all LED strip lights or other homemade coloured lamps;
- The street lights are inconsistent or flickering when driving at night;
- The pedestrian is not directly in front of the vehicle, or the pedestrian is not fully visible;
- The pedestrian is not standing upright, or it is a child under a certain height;
- There is a group of pedestrians in front of the vehicle that is over-shadowed or in the dark;
- There are animals in front of the vehicle;
- Objects such as special-shaped ground obstacles (e.g. roadblocks, isolation piles, isolation strips, large stones, other scattered objects etc.) are detected in front of the vehicle;
- Objects such as signs, guardrails, bridges, buildings or other are detected in front of the vehicle;
- The vehicle is being driven on a hillside road, upper and lower bridge section or tight bends;
- The vehicle is in R;
- The vehicle is in a state of braking or rapid acceleration.

## INTELLIGENT DRIVER ASSISTANCE

### Rear Driving Assistance System(BSD、LCA、RCTA)\*

#### System Overview



*The rear driving assistance function is only an aid, it is NOT a substitute for the attention of the driver. The driver must always remain in control, observe the surroundings and drive safely.*



*The effective recognition capabilities of the rear sensors can be limited by objects such as roadside buildings, guardrails, changes in pitch angle of the car due to heavy loading, road conditions such as bends or bumps or weather conditions such as snow and ice etc. Any of the above may trigger a false alarm.*



*The rear driving assistance system may not provide adequate warning of very fast approaching vehicles or operate correctly on tight curves of radius.*



*The rear driving assistance system will not operate correctly whilst towing a trailer or caravan.*



*The correct operation of the radar sensors will be compromised if they are misaligned due to accident damage. This may cause the system to automatically shutdown.*



*To ensure that the radar sensors work correctly, the rear bumper should be kept free of snow and ice and must not be covered.*



*Any materials or paint used on the rear bumper must be approved by MG Motor, otherwise the system function may be limited or defective.*




# INTELLIGENT DRIVER ASSISTANCE

## Blind Zone Safety Assist

### Blind Spot Detection

Blind Zone Safety Assist consists of two active safety assist functions: Blind Spot Detection ( BSD ) and Lane Change Assist ( LCA ), these are designed to alert the driver to vehicles that may be hidden or obscured from their sight when carrying out a maneuver such as lane changing.


Blind Spot Detection ( BSD ) detects any vehicles in the vehicle's blind spot (1), Lane Change Assist ( LCA ) detects any rapidly approaching vehicles on the adjacent left or right lane (2).

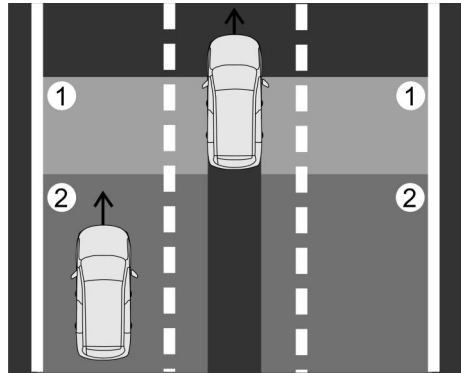

## INTELLIGENT DRIVER ASSISTANCE

### Blind Zone Safety Assist Alarm

*Note: The warning lamps will not illuminate whilst you are overtaking another vehicle and your speed is greater than that of the vehicle you are passing, even though it is in the blind zone.*

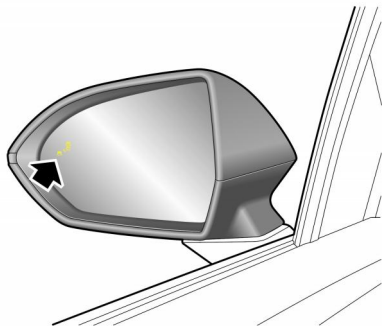


When the system detects that there is a vehicle in the blind zone of the exterior rearview mirror or a vehicle approaching behind in the adjacent lane while driving (the vehicle speed is above 10 mph ( 15 km/h), the warning lamp on the corresponding side will illuminate. If the corresponding indicator is selected at this time, the warning lamp will flash to remind the driver that it is dangerous to continue changing lanes.

# INTELLIGENT DRIVER ASSISTANCE


## Rear Cross Traffic Alert

### Rear Cross Traffic Alert Functions

When reversing, the Rear Cross Traffic Alert ( RCTA ) monitors any approaching vehicles from the left/right rear by using sensors and issues an alarm when the vehicle is at risk.

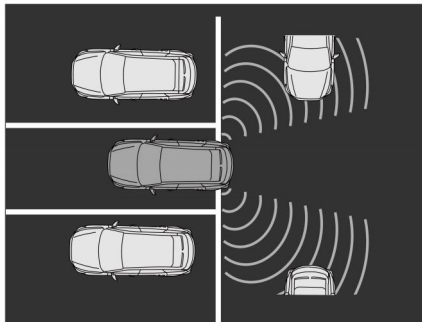

## Rear Cross Traffic Alert Alarm

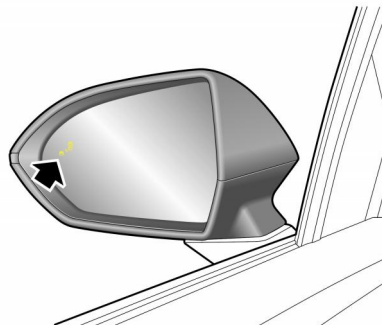

If there is a risk while reversing, the warning lamp on the corresponding side will illuminate, and a warning triangle is displayed in the infotainment display.

### Ultrasonic Sensor Parking Aid



*The purpose of the parking assist system is only to assist the driver during parking! The ultrasonic sensors may not be able to detect certain types of obstruction, e.g. narrow posts, small objects close to the ground, objects above the tailgate and some objects with nonreflective surfaces.*



*Keep the ultrasonic sensors free of dirt, ice and snow. If deposits build up on the surface of an ultrasonic sensor, its performance may be impaired. When washing the car, avoid aiming high pressure water jets directly at the ultrasonic sensors from close range.*

### Rear Parking Aid

The ultrasonic sensors on the rear bumper monitor the area behind the vehicle to search for obstacles. If an obstacle is detected, the system will calculate its distance from the rear of the vehicle and communicates the message to the driver by sounding warning chimes.

*Note: The PDC system and rearward driver assistance system are unavailable when the tow mode is enabled.*

### Parking Aid Operation


#### Rear Parking Aid

The rear parking aid is enabled automatically when the R gear is selected; and when it is moved out of the R gear, the system will be immediately shut off. A short beep is given by the parking aid after selecting R gear to indicate that the system is operating normally. If an obstacle is detected at the rear, the system will prompt the driver with warning alarms.

*Note: If a longer, higher pitched sound is emitted for 3 seconds when the R gear is selected, this indicates a fault in the system. In this case seek assistance from an MG Authorised Repairer.*

#### Rear Parking Aid

With the parking aid function enabled, if an obstacle is detected, the audible sounds in different frequencies are transmitted (there might be blind zones).

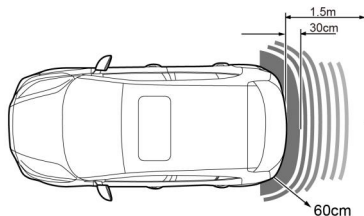


- If an obstacle is located within 1.5 m range of the rear or within 0.6 m range of the corner, the warning sound commences. As the car moves closer to the obstacle, the warning sounds are transmitted more rapidly.
- Once the obstacle is within 0.3 m range of the rear bumper, the warning sounds will merge into a continuous warning.

### Parking Camera\*



*The parking camera system only serves as an auxiliary function when parking the vehicle! The camera's field of view is limited and cannot detect obstacles outside the field of view.*

When R gear is selected, the camera will provide an image of what is immediately behind the vehicle. This image will be shown on the entertainment display.

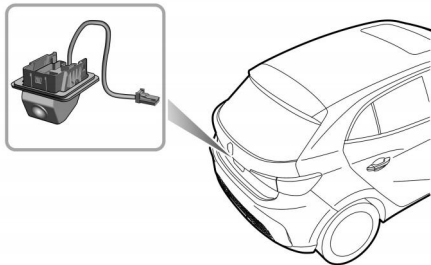

Some models feature a rear parking camera fitted between the rear license plate lamps.

### 360 Around View Monitor System\*



*The purpose of the 360 around view system is to assist the driver during parking! The cameras have a limited field of view and cannot detect obstructions outside the field of view.*



*Although the infotainment display can provide images around the vehicle, please still pay attention to the current actual road conditions for your driving safety.*

With the 360 around view system working, the entertainment display interface will show a 360 around view of the vehicle to facilitate the observation of surrounding environment and make the driving environment much safer. You can touch buttons on the display to view images from different perspectives around the vehicle.

You can enter the 360 around view system using the following operations:

- Select R gear.
- Click 360 icon.

- Using the 'Setting' interface to select low speed switching of corner lights/indicators, this will automatically open the 360 around view system when the indicators are used at low speeds and exit when the indicators are cancelled.
- After setting the shortcut button on the steering wheel to 360 function, press this button.

In the 360 around view system display interface, select the settings icon to enable personal settings for system functions.

**Note:** When the shift control knob is placed in D , the 360 around view system is inhibited at speeds above or equal to 20 mph ( 35 km/h)

## Drive Fatigue Monitoring System\*



***The driver should always ensure that their physical state is suitable for driving, even if the vehicle is equipped with an indirect driver fatigue reminder system. NEVER drive the vehicle when fatigued.***



***The indirect driver fatigue reminder system cannot always identify the driver's fatigue level accurately. It calculates the fatigue level through the driver's operational control status instead of monitoring the driver's actual physical characteristics such as distraction, it cannot provide an emergency reminder to the driver who has just become fatigued.***

The driver attention warning system calculates the driver's fatigue level by comparing information such as vehicle speed and steering wheel angle with basic data obtained based on mass data statistics. The system will constantly compare the calculated fatigue level with the current

operational state of the driver. If the system recognizes that the driver is becoming fatigued, a warning will be issued.

When the indirect driver fatigue reminder system is active, the vehicle speed is over 37 mph ( 60 km/h). When the driver performs any of the following operations, system operation will be suspended and it will stop monitoring the driver's fatigue level:

- 1 The driver removes the seat belt and opens the driver door;
- 2 The stop time exceeds 15 minutes;
- 3 The ignition or power system is turned off.

### System Settings

After the vehicle is started, the indirect driver fatigue reminder system is enabled by default, it can be turned off/on and the sensitivity set in the entertainment display screen.

***Note: The indirect driver fatigue reminder system is not easily triggered if the vehicle is passing through low-quality road sections, continuous bends, or sections with large amounts of traffic lights.***




## ***Emergency Information***

---

<i>Hazard Warning Devices</i>	242
<i>Emergency Starting</i>	243
<i>Emergency Call *</i>	246
<i>Vehicle Recovery</i>	248
<i>Tyre Repair and Tyre Replace</i>	252
<i>Towing *</i>	259

### Hazard Warning Devices

#### Warning Triangle

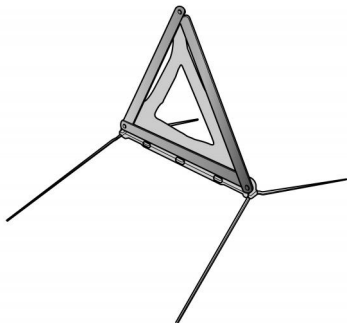

The warning triangle is stowed in the trunk.

If you have to stop your car on the road in an emergency, you must place a warning triangle approximately 50 ~ 150 metres behind the car, if possible, and press the hazard warning lamp button to warn other road users of your position.

### Emergency Starting



**NEVER** attempt to power the vehicle by pushing or towing.



Make sure that both batteries are of the same rated voltage (12 volts), and that the booster cables are approved for use with 12 volt car batteries.



Ensure sparks and open flames are kept well away from the front compartment.




Ensure that booster cables are firmly connected and do not touch each other or other moving parts, otherwise, sparks may be caused, resulting in fire or explosion.

In case of low battery, the vehicle can be started by using a booster cable to connect the battery of another vehicle or to connect the battery externally.





For models with batteries in the loadspace, where it is possible to open the tailgate of the disabled vehicle (B), please always give priority to the positive terminal as the positive connecting point. If the tailgate cannot be opened, please open the front compartment fuse-box. The terminal shown in figure below can be used as the positive connecting point.

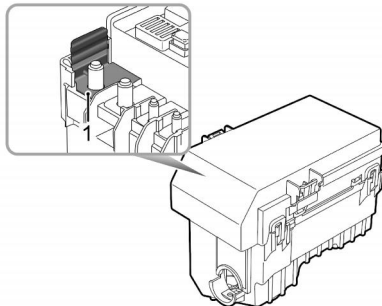

I Positive Connecting Point

## EMERGENCY INFORMATION

Turn off the vehicle power and all electrical appliances of the vehicle, then follow the instructions below:

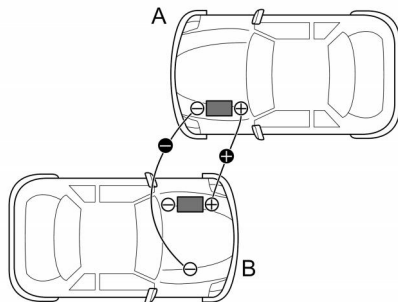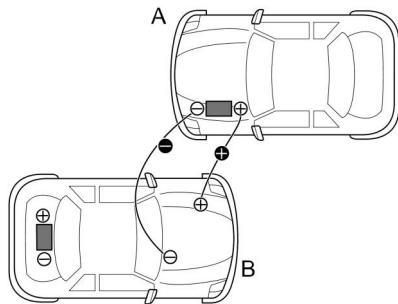

- 1 Connect the red booster cable from the positive ( + ) terminal of the donor battery ( A ) to positive connecting point on the disabled vehicle ( B ) . Connect the black booster cable from the negative ( - ) terminal of the donor battery ( A ) to a good earth point (The following figure) on the disabled vehicle ( B ), and try to keep it well away from the battery and bypass the fuel and brake lines.
- 2 Start the donor vehicle and allow it to idle for several minutes.

## EMERGENCY INFORMATION

- 3 Start the disabled vehicle. If the disabled vehicle will not start after several attempts, it may need to be repaired. Please contact an MG Authorised Repairer for assistance..
- 4 After both vehicles have started normally, turn off the donor vehicle power.
- 5 Disconnect the booster cables. Disconnecting the booster cables must be an exact reversal of the procedure used to connect them, i.e. disconnect the BLACK negative cable from the earth point on the disabled vehicle FIRST.

### IMPORTANT

DO NOT switch on any electrical appliance in the disabled vehicle until the booster cables have been disconnected.

**Note:** *It is recommended to turn off the lights, air conditioner and other comfort appliances after starting the vehicle with power loss, and keep the vehicle running for 1~2 hours to restore the battery power. If the battery is fully charged, the vehicle still cannot be normally started, please contact an MG Authorised Repairer for service.*

**Note:** *If the vehicle still cannot be started by connecting the booster cables, please consult an MG Authorised Repairer for service.*

### Emergency Call \*

In an accident, your vehicle's eCall – SOS Emergency Assistance can either be triggered manually or in severe cases automatically upon detection by vehicle's sensors. The eCall service is a public service of general interest and is accessible free of charge. The emergency call centre will establish verbal communication with the vehicle occupants in order to understand the extent of the emergency and the level of assistance required. Attempt to send the following vehicle information message to the emergency call centre. The appropriate emergency services will be deployed to the vehicle's current location if known.

- Current time, location and direction of travel
- Vehicle Type
- Vehicle Identification Number (VIN)
- Whether the call was automatically or manually initiated
- Vehicle Category

This system will ensure that your personal data is securely protected. It is designed to ensure that it is not traceable and other external systems are not able to gain access. When the eCall triggers, the system will only transmit the data information to the relevant public safety answering


points designated by the respective public authorities of the country on which territory they are located, which will receive and process your emergency call request. The system will retain data locally for 13 hours after triggering.

You have the right to access the data information stored in this system, and to request the rectification, erasure or blocking of data information that does not meet the requirements of the regulations. If you think your personal data is infringed, you have the right to complain to the competent data protection authority.

For manual activation, press and release the SOS button in the overhead console for about 1 second to activate an emergency services call. A single beep will be heard when the eCall is triggered and a message will be displayed on the vehicle's message centre and entertainment player. The entertainment player will be muted whilst the emergency services call is active. Manually triggered emergency services calls may be cancelled by pressing and releasing the SOS button again within about 5 seconds of the initial press, and the messages will be removed.

## EMERGENCY INFORMATION

**Note:** The operation of eCall - SOS Emergency Assistance relies on cellular coverage and may be affected by signal outages or low signal strength.

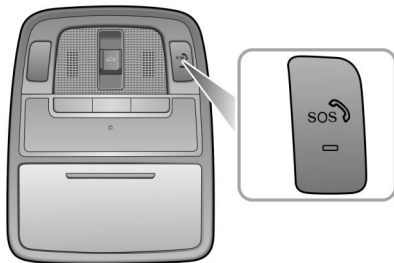

The emergency services call (eCall) system will perform a self-test when the vehicle is powered ON. During a Self-Test the emergency services call (eCall) LED status indicator on the SOS button will flash quickly until completion. The LED status indicator will illuminate permanently if no system faults are present. The LED status indicator will be extinguished or flash slowly if a fault is detected. Faults detected during the self-test will be displayed on the vehicles message centre.

### Vehicle Recovery

#### Towing Vehicle



*Do not tow the vehicle with any of the driven wheels in contact with the road surface, this will avoid electric drive transmission damage. When it is necessary to temporarily push or tow the vehicle from a dangerous situation or onto the transporter, the speed must remain below 3 mph (5 km/h) and be completed within 3 minutes.*



*When pushing or towing the vehicle for temporary situation, the driver's side seat belt should be inserted into the lock and maintained in the inserted state, the transmission placed in Neutral and the parking brake must be OFF, otherwise the vehicle may be damaged.*



#### Towing Hook



*Do not use a tow rope that is twisted, the towing eye may become unscrewed.*



## EMERGENCY INFORMATION

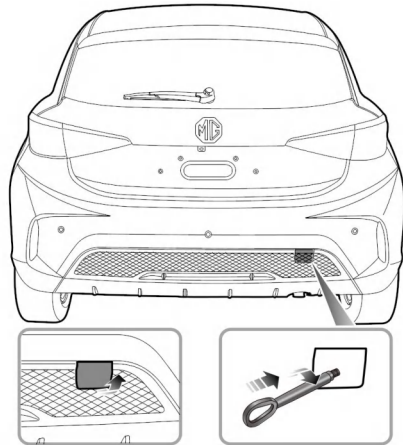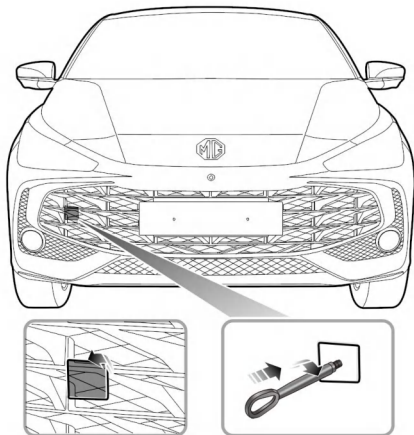

The towing hook is in the tool kit. The tool kit is placed beneath the loadspace carpet. To fit the towing hook, remove the small cover on bumper, first press one end of the small cover plate, then open the small cover plate after the other end is lifted, then screw in the towing hook via the small hole into the threaded hole in the bumper beam (see illustration). Ensure the towing hook is fully tightened!

## EMERGENCY INFORMATION

**Note:** *The removable cover is secured to the bumper by a plastic cord.*


The towing point is intended for use by qualified recovery specialists to assist in the recovery of your vehicle when a breakdown or accident occurs. But it is not designed for towing other vehicles. The vehicle can be towed using a tow rope but a towing bar is recommended.

### Towing for Recovery



**When towing, DO NOT accelerate or brake suddenly, this can cause accidents.**


### Suspended Towing



Suspended towing is the best method for recovering a vehicle that needs to be towed. The drive wheels should be suspended above the ground, or the transmission may be damaged. Release the parking brake, turn on the hazard warning lamps and ensure there are no passengers. If towing the vehicle with rear wheels on the ground, please release the parking brake.

### Transporting the Vehicle

If your vehicle needs to be transported, a special transporter is recommended. Secure the vehicle on the transporter as follows:

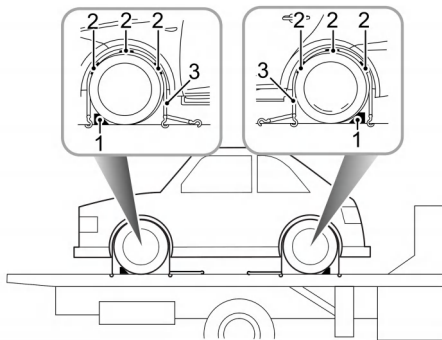


- 1 Apply the parking brake and engage in P gear.
- 2 Fit wheel chocks ( 1 ) as shown, then position the anti slip rubber blocks ( 2 ) around the circumference of the tyre.

- 3 Fit the lashing straps ( 3 ) around the wheels and secure to the trailer. Tighten the straps until the vehicle is securely held.

## EMERGENCY INFORMATION

### Tyre Repair and Tyre Replace


#### Tyre repair tool\*

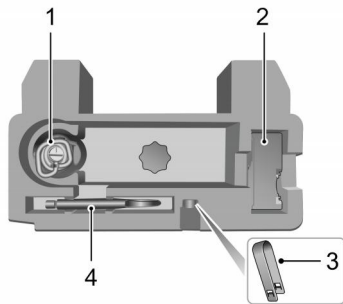

- 1 Tyre Sealant Bottle
- 2 Electric Air Pump
- 3 Wheel Bolt Cap Removal Tool
- 4 Towing Hook

#### Tyre Repair\*


- 1 Remove the label at the bottom of the repair fluid reservoir and attach it to the steering wheel to remind the driver not to exceed 50 mph ( 80 km/h).

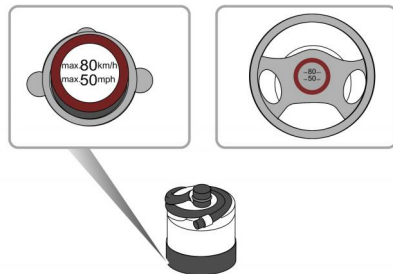

- 2 Connect the air hose of the electric air pump to the repair fluid reservoir. Invert the repair fluid reservoir into the slot of the electric air pump. Remove the valve dust cap of the damaged tyre, and connect the hose connector of the repair fluid reservoir to the tyre valve. Ensure that the power switch of the electric air

## EMERGENCY INFORMATION

pump is switched off (i.e., press " o "), then connect the electric air pump plug to 12 V power socket, and turn on the vehicle power system.

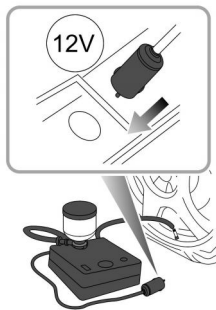

**Note:** To avoid battery overdischarge, please start the vehicle.

- 3 Switch on the power switch of the electric air pump (i.e., press " - "), to start pumping sealant into the tyre. The repair fluid reservoir will become empty after approximately 30 seconds. The tyre should reach the specified pressure within 5 or 10 minutes.

**Note:** When the pressure gauge of the air pump starts to work, it may briefly indicate up to 600 kPa (i.e. 6 bar), then the pressure returns to normal.

- 4 When the required pressure is reached, switch off the electric air pump (i.e., press " o ").

**Note:** If the required pressure cannot be reached within 10 minutes, please disconnect the compressor, drive the vehicle 10 metres approx forward or backward to allow the sealant to spread within the tyre. If the required pressure can still not be reached, the tyre is severely damaged and you should seek assistance from the Roadside Assistance company or an MG Authorised Repairer.


**Note:** Consecutive operation of electric air pump for more than 10 minutes may result in damage to the compressor.

- 5 Remove the tyre sealant bottle from the slot, and disconnect the hose of the tyre sealant bottle from the tyre valve. Then remove the plug of the electric air pump from the centre console power socket, return the tyre repair kit to its stowage tray.


## EMERGENCY INFORMATION

- 6 After successfully adding sealant to the tyre, drive immediately for a short time (around one minute). This will allow the sealant to distribute evenly inside the tyre. Continue driving and do not exceed 50 mph (80 km/h). After a further 10 minutes, find a safe place to stop and recheck the tyre pressure. Please follow different guidelines based on the tyre pressure measured: If the tyre pressure has dropped to less than 80 kPa (0.8 bar), do not continue driving, seek assistance instead. If the tyre pressure is between 80 kPa (0.8 bar) and the specified pressure, connect the hose of the electric air pump to the tyre valve, and inflate the tyre until it reaches the specified pressure. Repeat Step 6. If the tyre pressure has not dropped, you may continue driving, but the vehicle speed must not exceed 50 mph (80 km/h), and the driving mileage must not exceed 120 miles (200 km).

**Note:** *DO NOT remove foreign objects (eg. screws, nails etc) from the tyre. The tyre repair system must only be used when the foreign object is in the tread pattern ( A ), DO NOT attempt a repair when the damage is in the sidewall of the tyre ( B ).*



### Spare Wheel and Tools\*

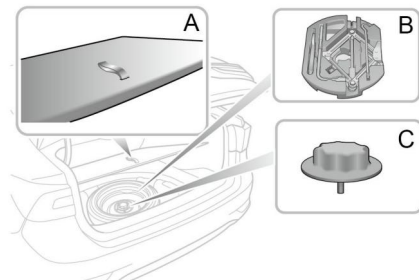


The spare wheel and tools can be removed as follows:

**Note:** *The vehicle is equipped with spacesaver spare wheel.*

## EMERGENCY INFORMATION

- 1 Lift the carpet in the loadspace with the lifting strap ( A ).
- 2 Take out jack etc. from the carpet support plate.
- 3 Unscrew the spare wheel retaining bolt ( B ), and remove the spare wheel from the loadspace.

### Spare Wheel Replacement Tool\*

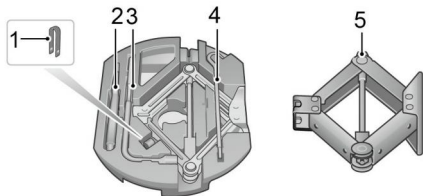

- 1 Wheel bolt cap removal tool
- 2 Towing hook
- 3 Wheel bolt spanner
- 4 Jack handle
- 5 Jack

### Wheel Replacement\*

If you need to change the wheel during the journey, choose a safe place to stop away from the main road if possible. Always ask your passengers to get out of the car and wait in a safe area away from other traffic.

Switch on hazard warning lamps. If available, position a warning triangle about 50 ~ 150 metres behind your vehicle to warn approaching traffic.

Before changing a wheel, ensure the front wheels are in the straight ahead position. Apply the parking brake and place the shift lever in N position (MT) or P position (AT). Place the Ignition/START/STOP switch in OFF position.

### Positioning the Jack




***DO NOT work underneath the car with a wheel changing jack as the only means of support. The jack is designed for wheel changing only!***



***NEVER jack the car using any positions other than the jacking points, otherwise serious damage may be caused.***

## EMERGENCY INFORMATION

Position the jack on firm level ground under the jacking point nearest the wheel to be removed. Turning the jack screw handle by hand, adjust the jack until the jack head fits snugly onto the flanging of the body.

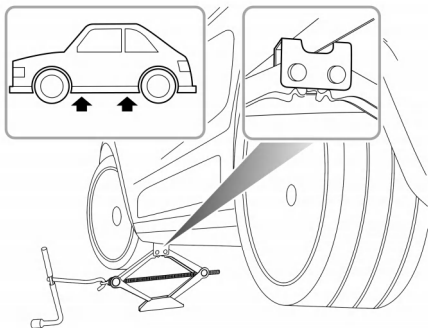

Ensure that the base of the jack is in full contact with the level ground.

### IMPORTANT

- Ensure the jack is positioned on firm, level ground.
- If the vehicle must be parked on the hill, place chocks in front of and behind other 3 wheels to prevent the vehicle moving.



### Fitting the Spare Wheel



*Regularly check the spare wheel tyre pressure, it may be under pressure due to being unused for long periods of time. Always check the tyre pressure after changing a wheel.*



*The wheel bolts must be tightened to the specified torque after changing a wheel (120 ~ 130 Nm).*

- 1 Before raising the car, use the special tool supplied to remove each wheel bolt cap. Use the wheel bolt spanner to slacken each bolt half a turn anti-clockwise.
- 2 With the jack correctly positioned, rotate the handle in a clockwise direction until the tyre is clear of the ground.

**Note:** *For your safety, place the spare tyre under the body flange near the jack, and avoid placing wheels face down on the ground - the surface may be scratched.*

- 3 Remove the wheel bolts and store to prevent them from being lost. Make sure the vehicle is steady and

there is no risk of slip or movement before removing wheel bolts.

- 4 Remove the wheel.

**Note:** *Place the removed wheel under the body flange near the jack, and avoid placing wheels face down on the ground - the surface may be scratched.*

- 5 Fit the spare wheel and tighten the wheel bolts until the wheel is seated firmly against the hub.
- 6 Lower the vehicle and remove the jack, then FULLY tighten the wheel bolts in a diagonal sequence.
- 7 Return the tools to the storage assembly and place the wheel in the loadspace.

**Note:** *DO NOT stand on the handle of the wheel bolt spanner or use extension tube on the handle of the spanner.*

**Note:** *When replacing the wheel, please fully tighten the bolts in the diagonal sequence twice.*

**Note:** *Consult an MG Authorised Repairer or tyre specialist for a replacement tyre as soon as possible.*

## EMERGENCY INFORMATION

---

### Spacesaver Spare Wheel



*Only one spacesaver spare wheel can be used at any one time, otherwise the operational performance and brake performance may be reduced, thereby leading to accident or injury to yourself and others.*



*When driving on snow covered or icy roads, it is advised to fit the spacesaver wheel to the rear wheels of the vehicle to maintain adequate stability. If the front wheel tyre is damaged, a rear wheel should be moved to the position of a front wheel, and then fit the spacesaver spare wheel in the position of the rear wheel.*



*Snow chains can not be used on the spacesaver spare wheel, this can cause damage to the car and snow chain.*

When the spacesaver spare wheel is fitted, drive the car with care, and the speed should not exceed 80 km/h. Please have the full-scale tyre repaired and replace the

spare wheel as soon as possible. This will extend the life span of the spare wheel for other emergencies.

**Note:** *DO NOT use an automatic car wash when the spacesaver wheel is fitted, the guide rails of the car wash may conflict with the wheel/tyre and cause damage.*

### Towing\*

#### General Towing Safety



***Exceeding any load limits advised by MG Motor is dangerous. Consult the recommended load limits and loading prior to any journey.***



***Excessive towing loads reduce front tyre traction and steering control, too little trailer nose load can make the trailer unstable and cause it to sway.***

Your vehicle can tow a trailer if you carefully observe load limits, use approved equipment, and follow the towing guidelines. Always check load limits before towing.

Towing loads in excess of the maximum towing weight can seriously affect vehicle handling and performance, this could damage your vehicle and drive-train.

#### **When adding a towing device to the vehicle**

When towing, all rear vehicle lights must remain visible to road users behind the vehicle and must not be obscured / partially obscured.

If towing light sources are obscured, a secondary lighting source shall be used such as a lighting board.

When not towing, the fitted towing device must not obscure any lighting source. If the towing device obscures or partially obscures a lighting source such as the fog lamp it must be removed or retracted when not towing.

#### **Tow bars**

Only genuine MG approved towbars should be fitted to your vehicle. Only use the attachment methods specified by the vehicle manufacturer for securing the towing hitch. Contact an MG Authorized Repairer for more information.

#### **Safety chains**

Safety chains must be used as a precautionary measure avoiding the trailer become unintentionally unhitched. Make sure the safety chain is securely attached to both the trailer and the vehicle prior to departure.

#### **Altitude**

## EMERGENCY INFORMATION

Your engine delivers less power at higher altitude. If you tow a trailer in a mountainous area you should reduce the combined vehicle and trailer weight by 10% for every 1000 m of elevation.

### Gradients

Where possible, when towing, you should plan your journey to avoid steep gradients. The advised brake towing mass stated assumes a maximum gradient capability of 12% . Where possible it is recommended you drive on gradients less than 12% . Follow the trailer associations recommendations for suitable roads.

### Running in period

Avoid towing a trailer during your vehicle's first 1000 km.

### Towing Mode

Your vehicle provides towing mode selection, it can be engaged or disengaged via:

- 1 Automatically: Connection or disconnection of the electrical connection with the trailer and the vehicle.

- 2 Manually: Enter the entertainment display to switch the function On/Off.

**Note: When towing mode is engaged automatically, manual adjustment via the entertainment display is not possible.**

When towing mode is activated, some vehicle functions will be limited or turned off, these include:

- Auto emergency brake\*;
- Adaptive cruise control system\*;
- Traffic jam assist system\*;
- Lane departure assist system\*;
- Rear driving assistance system\*;
- Rear parking aid system.

**Note: If the towed device is equipped with a tail light cluster, the vehicle also controls the trailer's lights after connecting the electrical connection.**

**Note: When operating the rear fog lamps, the trailer's rear fog lamps will also operate.**

## **Maintenance**

---

<i>Maintenance Instructions</i>	262	<i>Tyre</i>	306
<i>High Voltage Battery Pack*</i>	266	<i>Cleaning and Caring</i>	312
<i>Bonnet</i>	268		
<i>Engine Compartment</i>	270		
<i>Engine Oil</i>	272		
<i>Catalytic Converter</i>	275		
<i>Cooling System</i>	277		
<i>Brake</i>	279		
<i>Fuse Replacement</i>	281		
<i>12V Battery</i>	288		
<i>Bulb Replacement</i>	291		
<i>Washer</i>	301		
<i>Wipers</i>	303		

## Maintenance Instructions

### Regular Maintenance

The safety, reliability and performance of your vehicle will depend partly on how well it is maintained. You must ensure that maintenance is carried out when required and according to the information contained in the Warranty and Maintenance Handbook.

### Servicing

For next service information, please refer to "Instrument Pack" in "Brief Introduction to Vehicle Functions " section or information related to the entertainment system. After the completion of each service, the next service display will be reset by your MG Authorised Repairer.

**Note:** *If the maintenance is not carried out (or the display is not reset by an MG Authorised Repairer after maintenance), the maintenance display will not be able to provide correct information.*

### Maintenance History

After each maintenance, always ask your local Authorised Dealer to register the maintenance.

### Fluid

Please use the fluid recommended and certified by SAIC Motor. Refer to "Recommended Fluids and Capacities" in the "Technical Data" section.

#### IMPORTANT

Using fluids or additives inapplicable to this vehicle may damage the components or devices; please consult a local Authorised Repairer for details.

### Emission Control

Your car is fitted with exhaust emission and evaporative control equipment designed to meet specific territorial and legal requirements. Incorrect engine settings may adversely affect exhaust emissions, engine performance and fuel consumption, as well as cause high temperatures, which could result in damage to the catalytic converters and engine.

## IMPORTANT

You should be aware that unauthorized replacement, modification or tampering with this equipment by an owner or motor vehicle repairer could result in the manufacturer's warranty being deemed as invalid. In addition, no adjustment can be made to the engine settings. Otherwise, the vehicle emission indexes could be affected.

### Owner Maintenance



***Any significant or sudden drop in fluid levels, or uneven tyre wear, should be reported without delay to an MG Authorised Repairer.***

In addition to the maintenance referred to previously, some simple checks must be carried out more frequently.

#### Daily Check

- Operation of lights, horn, wipers, washers and warning lights.
- Operation of seat belts and brakes.

- Look for fluid deposits underneath the car that might indicate a leak.
- Check tyre appearance.

#### Weekly Check

- Engine oil level.
- Coolant level.
- Brake fluid level.
- Windscreen washer fluid level.
- Tyre pressure.
- Operate air conditioning.

***Note: The engine oil level should be checked more frequently if the car is driven for prolonged periods at high speeds.***

## Special Operating Conditions

If your vehicle is frequently used in dusty conditions, or operated in extreme climates where sub-zero or very high ambient temperatures are normal, more frequent attention may need to be paid to maintenance requirements. You need to carry out special maintenance operations (refer to Warranty and Maintenance Handbook) or contact the local Authorised Repairer.

## Safety in the Garage



***Cooling fans may commence operating after the engine is switched off, and continue operating for a number of minutes. Keep clear of all fans while working in the engine compartment.***

If you need to carry out maintenance, observe the following safety precautions at all times:

- Keep your hands and clothing away from drive belts and pulleys.
- If the car has been driven recently, **DO NOT TOUCH** exhaust and cooling system components until the engine has cooled.

- **DO NOT TOUCH** electrical leads or components while the engine is running, or with the Start switch on.
- **NEVER** leave the engine running in an unventilated area - poisonous exhaust gases are extremely dangerous.
- **DO NOT** work underneath the vehicle with a jack as the means of support.
- Ensure that sparks and naked lights are far away from the engine compartment.
- Wear protective clothing and work gloves.
- Remove watches and jewelry before working in the engine compartment.
- **DO NOT** allow tools or metal parts of the vehicle to make contact with the battery leads or terminals.

## Toxic Fluids

Fluids used in motor vehicles are poisonous and should not be consumed or brought into contact with open wounds. These include: battery acid, coolant, brake fluid, fuel, engine oil and windscreen washer fluid.

For your own safety, **ALWAYS** read and obey all instructions on labels and containers.



### **Used Engine Oil**

Prolonged contact with engine oil may cause serious skin disorders such as dermatitis and cancer of the skin. Wash thoroughly after contact. Used engine oil should be disposed of correctly. Incorrect disposal can cause a threat to the environment.

### High Voltage Battery Pack\*

#### Precautions and restricted conditions for use of battery



*If the vehicle is not going to be used, parked, or stored for a long time it is necessary to use the vehicle at least once every two months for more than 30 minutes each time (the power of high-voltage battery pack shall be maintained at 50% charge (or 4 gauge blocks) or more). It is strictly prohibited to park or store a vehicle fitted with a high-voltage battery pack for more than 7 days if the power of the high-voltage battery pack is low, failure to follow these guidelines may effect the high voltage battery warranty.*



**DO NOT attempt to dismantle the battery pack or any High Voltage components - THESE ARE DANGEROUS. Any signs of dismantling or damage caused by attempts to dismantle will invalidate the warranty.**

- 1 DO NOT park the vehicle in conditions where the ambient temperature exceeds 45°C for more than 15 days. This will effect the performance and service life of the high voltage battery.
- 2 In order to better extend the service life of the high-voltage battery pack, it is recommended to use the vehicle at least once a month for more than 30 minutes each time to facilitate the vehicle to charge and maintain the high-voltage battery pack.
- 3 When the vehicle is used for the first time or after a long period of storage, the SOC displayed in the instrument pack may not be accurate. It is recommended to drive at a low speed of 19~30 mph (30~50 km/h) for 20~30 minutes before normal use.
- 4 The cooling system of high-voltage battery pack is equipped with air filter element, please replace it as per manufacturers maintenance schedule.
- 5 In the event of an accident, damage to the high voltage battery or any of its related components, or any repairs made to the high voltage system the car must be inspected by qualified personel at an MG Authorised Repairer.

- 6 In the event of any accident or body repairs being required please consult the qualified personnel at an MG Authorised Repairer. The repair may require high voltage battery isolation or specialist HV component removal.



IMPORTANT
Only fully trained and qualified personnel are allowed to work on the high voltage systems and components of this vehicle. Any disassembly of such systems or components is strictly prohibited.

## Bonnet

### Opening the Bonnet



**DO NOT drive when the bonnet is not closed or retained only by the safety catch.**

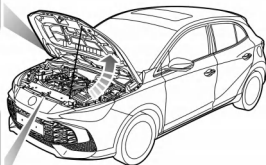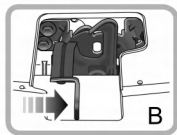

- I Pull the bonnet release handle ( B ) from the inside of the vehicle.

- 2 Move the safety catch release handle on the bonnet lock body in the direction of the arrow ( A ) to release the bonnet safety catch.
- 3 After unlocking the bonnet, go to the front of the vehicle to lift the bonnet and hold it up with the support rod..

### Closing the Bonnet

Support the bonnet using one hand, release the support rod using the other hand, and place it firmly into the support rod base. Hold the bonnet using both hands and lower it. When the bonnet drops for about the last 20 ~ 30 cm, apply a downward force to fully close the bonnet.

By attempting to lift the front edge of the bonnet, check if the lock is fully engaged after closing the bonnet. If it is not fully engaged, you must repeat the operation.

### Bonnet Open Alarm\*

If the bonnet is not fully locked, the corresponding alarm icon will be shown on the message centre display. If it is found that the bonnet is not fully locked while driving, an audible warning will sound.

### IMPORTANT


- For safety reasons, the bonnet should always be closed well when driving. Therefore you must check after closing the bonnet that the bonnet is securely latched, e.g. the bonnet edge is flush with the body of the vehicle.
- You should stop the vehicle immediately when safety permits and close the bonnet if it is not fully closed when driving.
- Beware of hands being pinched while fully closing the bonnet with a downward force.

## Engine Compartment




*While operating the components in the engine compartment, always observe the safety precautions listed under "Safety in the Garage". Refer to "Maintenance" of this section.*

### Gasoline only model

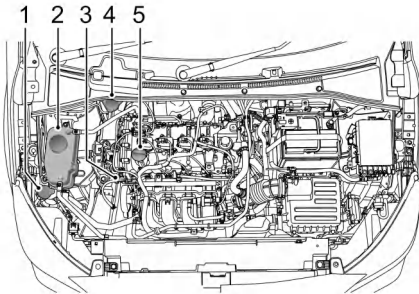

- 1 Washer Fluid Reservoir
- 2 Engine Coolant Expansion Tank
- 3 Oil Dipstick
- 4 Brake Fluid Reservoir
- 5 Oil Filler Cap

## HEV model

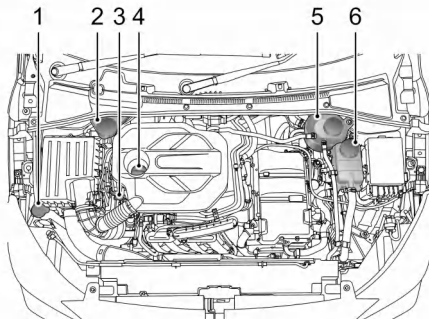

- 1 Washer Fluid Reservoir
- 2 Brake Fluid Reservoir
- 3 Oil Dipstick
- 4 Oil Filler Cap
- 5 Engine Coolant Reservoir
- 6 Hybrid Drive Coolant Reservoir

## Engine Oil


### Engine Oil

#### Engine Oil ACEA/API Category

European Automobile Manufacturers' Association ( ACEA ) and American Petroleum Institute ( API ) classify the engine oils based on performance and quality. To ensure the best performance of the vehicle, please use 0W-20 engine oil recommended by SAIC Motor that complies with ACEA C5 and API SP specifications. 0W-20 engine oil is suitable for low temperature and normal temperature environments, and is all-purpose engine oil for all seasons.

#### IMPORTANT

Do not allow the engine to run at low coolant temperature for a long time. If you have made several short drives and have not reached normal engine operating temperature each time, please extend the engine running time to bring the engine up to normal operating temperature.

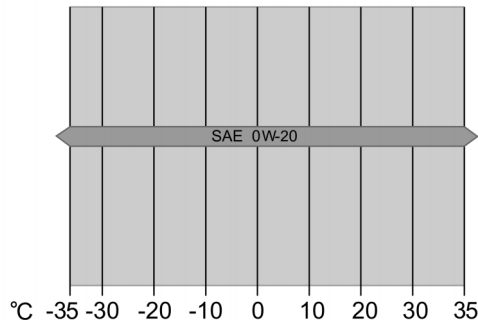




### Engine Oil Check and Refill



*Driving the vehicle with the engine oil level ABOVE the upper mark, or BELOW the lower mark on the dipstick, will damage the engine.*



*Do not spill engine oil onto a hot engine, otherwise it may cause fire.*

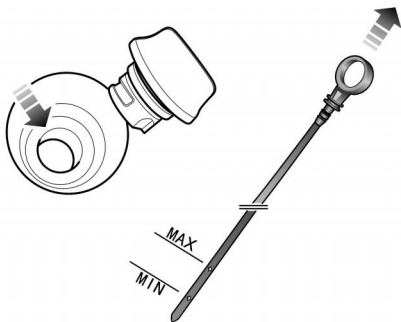

Check the oil level weekly and refill as necessary. Ideally, the oil level should be checked with the engine cold and the car resting on level ground. If the engine is running and already getting warm, wait for at least five minutes after switching off the Start switch before checking the oil level.

- 1 Withdraw the dipstick and wipe off the oil on it.
- 2 Slowly insert the oil dipstick and pull it out again to check the oil level; the oil level shall not be lower than the " MIN " mark on the oil dipstick.
- 3 Unscrew the engine oil filler cap and refill the oil to maintain the oil level between " MAX " mark and " MIN " mark on the oil dipstick.
- 4 Please wait for 5 minutes and then recheck the oil level; add an appropriate amount of oil if necessary - DO NOT OVERFILL!
- 5 Finally, ensure the dipstick is inserted and oil filler cap is fully secured.

### Engine Oil Specification

Use the engine oil recommended and certified by the SAIC Motor. Refer to "Recommended Fluids and Capacities" in the "Technical Data" section.

***Note: Any engine misfire, loss of engine performance or engine run-on, could seriously damage the catalytic converter and particulate filter. Regular maintenance must be carried out in accordance with the maintenance schedule specified by the manufacturer. Any modifications to the engine without manufacturer authorisation is prohibited.***

IMPORTANT
Check the engine oil level more frequently if the vehicle is driven at high speeds for prolonged periods.

## Catalytic Converter



***The temperatures of exhaust systems that contain particulate filters and catalytic converters can be extremely high, DO NOT park on ground where combustible materials such as dry grass or leaves could come into contact with the exhaust system - in dry weather a fire could result.***

The exhaust system incorporates a catalytic converter and particulate filter (model dependent), these process possible harmful exhaust emissions from the engine into more environmentally friendly gases. Exhaust system layouts differ between engine derivatives.

Catalytic converters and gasoline particulate filters are easily damaged through improper use, please observe the following precautions to minimise the chance of accidental damage.

### **Fuel**

- Use ONLY fuel recommended for your vehicle.
- Never allow the vehicle to run out of fuel – this could cause engine misfire and serious damage to the catalyst converter.

### **Engine Oil**

- Use ONLY engine oil recommended for your vehicle. If a non-recommended oil is used, the catalyst converter may be damaged.

***Note: Carry out scheduled servicing according to the maintenance schedule in the "Warranty & Maintenance Handbook".***

### **Starting**

Pay attention to the following when starting the engine:

- Do not continue to operate the starter after a few failed attempts; seek an Authorised Repairer.
- Do not operate the starter if an engine misfire is suspected and do not attempt to clear a misfire by pressing the accelerator pedal.
- Do not attempt to push or tow start the vehicle.

### **Driving**

Please pay attention to the following conditions:

- Do not overload or excessively 'rev' the engine.
- Do not stop the engine when the car is in motion with a gear selected.

- Consult an MG Authorised Repairer immediately if you think your vehicle's engine oil consumption is abnormal, or the engine performance will be reduced.
- If the engine is shaking abnormally, or the vehicle lacks power while driving, consult an Authorised Repairer immediately.
- Do not drive on terrain likely to subject the underside of the car to heavy impacts.

***Note: Any engine misfire, loss of engine performance or engine run-on, could seriously damage the catalytic converter and particulate filter. Regular maintenance must be carried out in accordance with the maintenance schedule specified by the manufacturer. Any modifications to the engine without manufacturer authorisation is prohibited.***

## Cooling System

### Coolant Check and Top Up




**DO NOT** remove the coolant pressure cap when the cooling system is hot - escaping steam or hot coolant could cause serious injury.

### Coolant expansion reservoir - Gasoline Only



### Coolant expansion reservoir - HEV

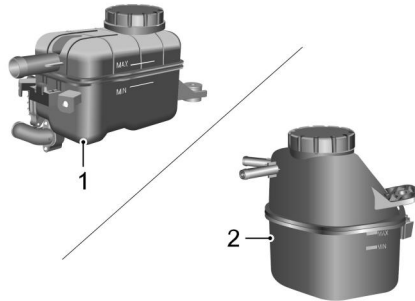

- 1 Transmission expansion reservoir
- 2 Engine expansion reservoir

It is recommended that the cooling system should be checked weekly when the cooling system is cold and with the vehicle resting on level ground. If the coolant level is below " MIN " mark, remove the coolant expansion tank

cap and add coolant, but the level shall not be higher than " MAX " mark.

Prevent coolant from coming into contact with the vehicle body when topping up. Coolant will damage paint.

If the coolant level falls appreciably during a short period, suspect leakage and arrange for an MG Authorised Repairer to examine the vehicle.

### Coolant Specification



*Coolant is poisonous and can be fatal if swallowed - keep coolant containers sealed and out of the reach of children. If accidental contact of coolant by children is suspected, seek medical assistance immediately.*



*Prevent the coolant from coming into contact with the skin or eyes. If this occurs, rinse immediately with plenty of water. If eyes are still red, painful or uncomfortable, seek medical attention immediately.*

Please use the coolant recommended and certified by the manufacturer. Refer to "Recommended Fluids and Capacities" in "Technical Data" section.

**Note:** *The addition of corrosion inhibitors or other additives to the cooling system of this car may severely disrupt the efficiency of the system and cause parts damage. For cooling system issues please consult an MG Authorised Repairer.*

## Brake



***DO NOT rest your foot on the brake pedal while driving; this may overheat the brakes, reduce their efficiency and cause excessive wear to the brake components.***

The free stroke of brake pedal is in the range of 0 ~ 30 mm.

Reasonable usage scope of brake friction pair: not less than 2 mm for thickness of brake pads, 20 ~ 22 mm for front brake disc, and 8 ~ 10 mm for rear brake disc\*.

For the first 900 miles ( 1500 km), you should avoid situations where heavy braking is required.

Note that regular maintenance is vital to ensure that all the brake components are examined for wear at the correct intervals, and replaced when necessary to ensure long-term safety during the interval prescribed in Warranty and Maintenance Handbook.

The vehicle needs to run in for 500 miles ( 800 km) after brake disc or pad replacement.

## Brake Fluid Check and Top Up



***Brake fluid is highly toxic, keep the brake fluid sealed and stored out of reach of children. If accidental contact of brake fluid is suspected, seek medical attention immediately.***



***Prevent brake fluid coming into contact with the skin or eyes. If this occurs, rinse immediately with plenty of water. If eyes are still red, painful or uncomfortable, seek medical attention immediately.***

The brake fluid level should be checked weekly when the system is cold and with the car on level ground. Clean the cover first before opening the brake fluid reservoir.

The brake fluid level can be seen through the reservoir and should be maintained between the " MAX " and " MIN " marks.

***Note: Do not allow the brake fluid level to drop below the "MIN" mark or rise above the " MAX " mark.***

## MAINTENANCE

### IMPORTANT

Replace brake fluid regularly according to service schedule.



**Note:** *Brake fluid will damage painted surfaces. If you accidentally spill the brake fluid on the painted surface, soak up any spillage with an absorbent cloth immediately and wash the area with water or car shampoo.*

### **Brake Fluid Specification**

Use the brake fluid recommended and approved by the manufacturer. Refer to "Recommended Fluids and Capacities" in the "Technical Data" section.



## Fuse Replacement

### Fuse

Fuses are simple circuit breakers which protect the car's electrical equipment by preventing the electrical circuits from being overloaded. A blown fuse may indicate that there is an issue with the circuit under its protection and it is likely that the system will stop working.

If you suspect a fuse is faulty, you can take it out of the fuse box and inspect it to see if the wire in the fuse is blown.


#### IMPORTANT

- NEVER attempt to repair a blown fuse. ALWAYS replace a fuse with one of the same rating, otherwise the fire may be caused due to electrical system damage or circuit overload.
- If a replaced fuse fails immediately, please contact an MG Authorised Repairer for service as soon as possible.

It is recommended to have spare fuses in the vehicle, which can be obtained from a local Authorised Repairer.


### Fuse Box

The vehicle is equipped with 2 fuse boxes:

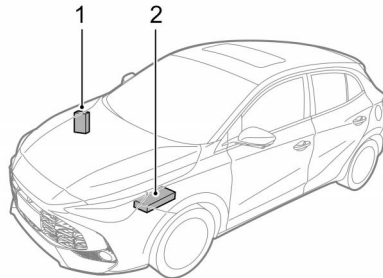

- 1 Passenger compartment fuse box (behind the driver side knee trim panel)
- 2 Front compartment fuse box (left of the front compartment)

## Passenger Compartment Fuse Box

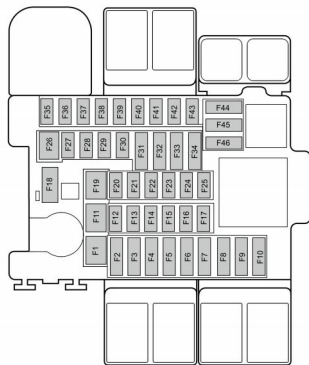

### Check or Replace a Fuse

- 1 Power the vehicle off and switch off all electrical appliances, and disconnect the negative battery cable.
- 2 Remove the driver side knee trim panel to access the fuse box.

- 3 Clamp the fuse head with a fuse extraction tool located in the cover of the front compartment fusebox, pull and remove the fuse, and check whether the fuse is blown.
- 4 If a fuse is blown, replace it with another fuse of the same type and same ampere value.

### Fuse Specification


Code	Spec	Function
F1	40A	Blower, Heating Ventilation And Air Conditioning
F2	5A	Heating Ventilation And Air Conditioning, Data Link Connector ( DLC )
F3	10A	Gateway
F4	5A	Ignition Switch, Front View Camera, Rain Light Sensor, Rear Driver Assistance Radars

## MAINTENANCE

Code	Spec	Function
F5	5A	Driver Door Combination Switch, PRND Gear Display, Master Light Switch, EPB Switch
F6	5A	Rotary Coupling, Infotainment Faceplate Module
F7	5A	Alcohol Interlock Control Module
F8-F12	-	-
F13	5A	Shifter Control Unit
F14	10A	Sensing and Diagnostic Module
F15-F19	-	-
F20	20A	Sunroof Motor
F21	20A	Entertainment Mainframe
F22	-	-
F23	5A	Heating Ventilation And Air Conditioning

Code	Spec	Function
F24	-	-
F25	5A	Communication Module
F26	-	-
F27	15A	Superlock Motor Relay
F28	-	-
F29	10A	Steering Column Lock
F30-F43	-	-
F44	15A	Front Power Socket
F45	5A	Pedestrian Alert Control Module, Master Light Switch , LHF Light, RHF Light
F46	5A	USB

## Front Compartment Fuse Box

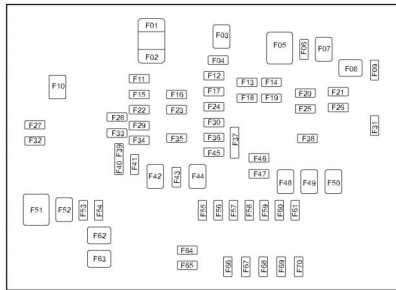

### Check or Replace a Fuse

- 1 Power the vehicle off and switch off and all electrical appliances, and disconnect the negative battery cable.
- 2 Press the lock catch to open the upper cover of front compartment fuse box.
- 3 Clamp the fuse head using the fuse extraction tool in the upper cover, pull and remove the fuse, and check whether the fuse is blown.

- 4 If a fuse is blown, replace it with another fuse of the same type and same ampere value.

### Fuse Specification

Code	Spec	Function
F1-F2	-	-
F3	40A	Rear Windscreen Heater Relay
F4	10A	Exterior Door Mirror Heating
F5	60A	Integrated Brake System
	40A	Stability Control System
F6	30A	Body Control Module
F7	60A	Integrated Brake System
	40A	Stability Control System
F8	30A	EVP Relay
F9	-	-
F10	30A	Starter Realy

## MAINTENANCE

Code	Spec	Function
F11	30A	Body Control Module
F12	30A	Body Control Module
F13	5A	Instrument Cluster, Gateway, Body Control Module
F14	5A	Alcohol Interlock Interface Device
	10A	Reverse Gear Switch
F15	20A	Engine Control Module
F16	20A	Transmission Control Unit
F17	5A	Battery Current Sensor
F18	5A	PDC Sensor

Code	Spec	Function
F19	10A	Stability Control System , Integrated Brake System, Transmission Control Unit, Engine Control Module, Auto Gear Shift Mechanism, Hybrid Electric Vehicle Battery Management System, Power Electric Unit
F20-F21	-	-
F22	15A	Clutch Master Cylinder Sensor, Air Conditioning Three Status Pressure Switch , Rear Oxygen Sensor , EVP Relay , Two Stage Resistive Cooling Fan Relay Box
F23-F24	-	-
F25	10A	Hybrid Electric Vehicle Energy Storage System , Hybrid Electric Vehicle Energy Storage System Coolant Fan

## MAINTENANCE

Code	Spec	Function
F26-F27	-	-
F28	15A	Ignition Coil
F29	15A	Transmission Control Unit
F30	10A	Engine Control Module
F31	15A	Rear Wiper
F32	10A	Compressor Relay
F33	15A	Fuel Injector
F34	5A	Brake Switch
F35	-	-
F36	30A	Body Control Module
F37	15A	Horn Relay, Windscreen Washer Relay , Heated Rear Window Relay
F38	5A	PEU Coolant Pump Relay , HRV Relay

Code	Spec	Function
F39	-	-
F40	20A	Constant Supply Fuel Pump
F41	5A	Starter Motor
	15A	PEU Coolant Pump Relay
F42	30A	Driver Door Switch Pack, Rear Left Door Window Switch Pack
F43	30A	Body Control Module
F44	30A	Driver Door Switch Pack, Rear Left Door Window Switch Pack
F45	30A	Body Control Module
F46	20A	Trailer Device Module
F47	15A	Trailer Device Module
F48	30A	Power Electric Unit
F49	25A	Stability Control System

Code	Spec	Function
F50	25A	Front Wiper
F51-F93	-	-

## 12V Battery

### Battery Maintenance




***DO NOT use on-board electrical appliances for an extended period of time when the vehicle is not started, otherwise the battery may become flat, resulting in the failure to start the vehicle and the reduction of battery life.***




***Always store batteries upright, and never attempt to dismantle a battery.***

The battery is designed to be maintenance free, so topping-up is unnecessary.

According to the current load condition and the status of the battery, the system may limit the power of some electrical appliances, please start the vehicle as soon as possible to charge the battery.

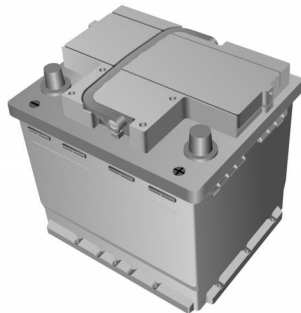



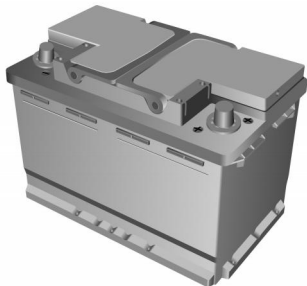

**Note:**

*When the vehicle will not be used for an extended period, it is recommended that the battery negative terminal clamping pile head should be disconnected.*

*Make sure that the vehicle is powered off before connecting or disconnecting the negative battery cable.*

*When reconnecting the negative battery cable, ensure that the clamping pile head and the negative battery cable are securely secured.*

*When the vehicle will not be used for a long period of time without disconnecting the negative battery cable, it is recommended that the vehicle be driven or idled for more than half an hour per week to help prolong the life of the battery.*

### **Battery Replacement**



**The battery contains sulphuric acid, which is corrosive.**

Please contact an MG Authorised Repairer to remove and install the battery. Only fit a replacement battery of the

same type and specification as the original to maintain the correct vehicle functionality.



Used batteries can be harmful to the environment, so they must be disposed of using an approved method and be recycled by a professional company. Please consult a local Authorised Repairer for more details.

## Bulb Replacement

### Bulb Specification

Bulb	Specification
Front Reading Lamp	W5W 5W
Rear Interior Lighting*	C10W 10W
High and low beams*	HB3 55/60W 55/60W
Front Turn Signal Bulb	PY21W 21W
Rear position light/Brake Light Bulb	W21W/5W 21W/5W
Rear Turn Signal Bulb	WY16W 16W
Reverse Lamp	W16W 16W
Rear Fog Lamp	W21W 21W
License Plate Lamp	W5W 5W

**Note:** Other light sources not listed are LED , which cannot be replaced separately.

## Bulb Replacement


Before replacing any bulb, turn off the vehicle's power supply to avoid any possibility of a short circuit.

**Note:** *The replacement bulb must be identical to the original one in type and specification.*

If the bulb glass is scratched or contaminated, it may cause the bulb to not concentrate the light. Take care NOT to touch the glass with your fingers; If necessary, clean the glass with methylated spirits to remove fingerprints.

For other bulbs not listed and to be replaced, ask an MG Authorised Repairer for guidance.

### Front Reading Lamp

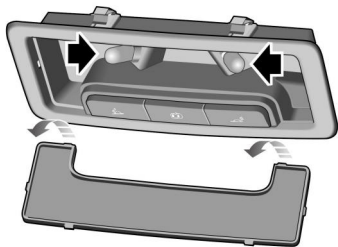


- 1 Disconnect the negative terminal of the battery.
- 2 Use a small flat-bladed screwdriver to gently prise the lens from the light unit.
- 3 Pull the bulb from its mounting to remove.
- 4 Install the new bulb to the lamp holder.
- 5 Install the lens, locate the two prongs at the front of the lens and then carefully flex the lens to locate the two prongs at the rear of the lens into the lamp

assembly. Push the lens upwards until it 'clicks' into position

- 6 Connect the negative terminal of the battery.
- 7 Check front reading lamp operation.

### Rear Interior Lighting\*

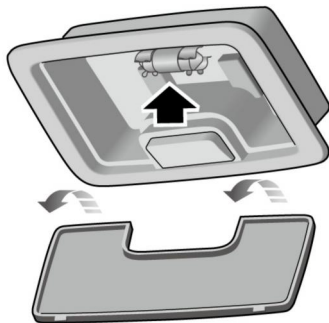


- 1 Disconnect the negative terminal of the battery.
- 2 Gently pry the lampshade off the lamp assembly using a "one" screwdriver and remove the damaged bulb.
- 3 Install the new bulb into the lamp holder.
- 4 Install the lens, locate the two prongs at the front of the lens and then carefully flex the lens to locate the two prongs at the rear of the lens into the lamp

assembly. Push the lens upwards until it 'clicks' into position.

- 5 Connect the negative terminal of the battery.
- 6 Check if the rear reading light is working properly.

### High and Low Beam\*

- 1 Open the bonnet, refer to "Bonnet" in the "Maintenance" section.
- 2 Disconnect the negative terminal of the battery.
- 3 Rotate the high and low beam bulb cover counterclockwise to the appropriate position and remove the bulb cover.

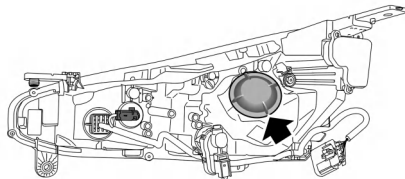


- 4 Rotate the bulb assembly counterclockwise, disconnect the wiring harness connector, and remove the damaged high and low beam bulb.

- 5 Connect the wiring harness connector, position the new bulb assembly at the installation location, and rotate clockwise until it is fully secured.
- 6 Install the high and low beam bulb cover and rotate it clockwise to install it in place.
- 7 Connect the negative terminal of the battery and check if the high and low beam lights are working properly.
- 8 Close the bonnet, refer to "Bonnet" in the "Maintenance" section.

### Front Indicator Bulb

- 1 Open the bonnet, refer to "Bonnet" in the "Maintenance" section.
- 2 Disconnect the negative terminal of the battery.
- 3 Rotate the bulb holder counterclockwise to remove the front indicator bulb holder.

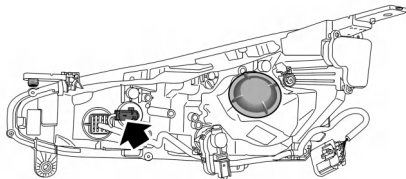


- 4 Press down and rotate counterclockwise to the appropriate position to remove the damaged front indicator bulb.
- 5 Install the new bulb into the socket, press the bulb down and rotate clockwise until it is fully secured.

- 6 Position the front indicator lamp socket at the installation position and rotate it clockwise until it is fully secured.
- 7 Connect the negative terminal of the battery and check if the front indicator lights are working properly.
- 8 Close the bonnet, refer to "Bonnet" in the "Maintenance" section.


### Rear Position Light & Rear Indicator Stop/Tail

#### Light Bulb

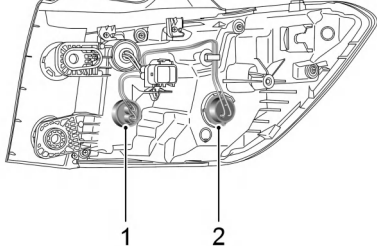- 1 Open the tailgate.
  - 2 Disconnect the negative terminal of the battery.
  - 3 Remove the two plugs on the side tail light trim panel.
  - 4 Remove the bolts that secure the tail lamp assembly to the vehicle body.
  - 5 Disconnect the wiring harness connector and remove the tail lamp assembly.
  - 6 Rotate the rear indicator lamp socket counterclockwise 1 or position/brake light 2 , remove the lamp holder and remove the rear indicator bulb or position/brake light bulb.
- 
- The diagram shows a rear tail lamp assembly with two callout lines. Line 1 points to a bulb in a socket on the left side of the assembly. Line 2 points to a bulb in a socket on the right side of the assembly.
- 7 Install the new rear indicator bulb or position/brake light bulb onto the lamp holder.
  - 8 Rotate the rear indicator lamp holder or position/brake lamp holder clockwise and install it onto the lamp assembly.
  - 9 Ensure that the tail lamp assembly sealing gasket is installed in place.



- 10 Connect the wiring harness connector and secure the tail lamp assembly to the body, then install 2 Bolts , tighten to 3 - 5 Nm.
- 11 Install the two plugs on the tail lamp trim panel.
- 12 Connect the negative terminal of the battery.
- 13 Check if the rear indicator or position/brake light is working correctly.
- 14 Close the tailgate.

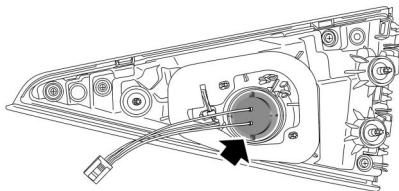

### Rear Fog Lamp


- 1 Open the tailgate, refer to "Tailgate" in the "Preparations for trip" section.
- 2 Disconnect the negative terminal of the battery and keep the vehicle stationary for at least 1 minute.
- 3 Using a "one" screwdriver, pry open the left maintenance access cover of the tailgate interior panel to expose the rear fog lamp socket.
- 4 Rotate the rear fog lamp socket counterclockwise, remove the socket, and remove the damaged rear fog lamp bulb.
- 5 Install the new rear fog lamp bulb onto the socket and position the rear fog lamp socket onto the rear combination lamp. Tighten clockwise to ensure proper installation.
- 6 Install the left maintenance access cover of the tailgate interior panel.
- 7 Connect the negative terminal of the battery.
- 8 Check if the rear fog lamp are working correctly.

- 9 Close the tailgate.

### **Reverse Lamp**

- 1 Open the tailgate, refer to "Tailgate" in the "Preparations for trip" section.
- 2 Disconnect the negative terminal of the battery and keep the vehicle stationary for at least 1 minute.
- 3 Using a "one" screwdriver, pry open the right maintenance access cover of the tailgate interior panel to expose the reverse lamp socket.
- 4 Rotate the reverse lamp socket counterclockwise, remove the socket, and remove the damaged reverse lamp bulb.

9 Close the tailgate.

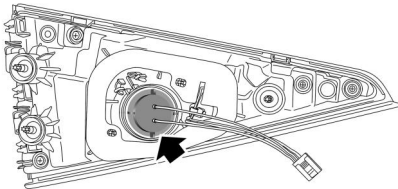

- 5 Install the new reverse lamp bulb onto the bulb holder and position the reverse lamp holder onto the rear combination lamp. Tighten clockwise to ensure proper installation.
- 6 Install the right maintenance access cover of the tailgate interior panel.
- 7 Connect the negative terminal of the battery.
- 8 Check if the reverse lamp is working correctly.

### License Plate Lamp

- 1 Disconnect the negative terminal of the battery.
- 2 Gently push the license plate light from the left to the right using a pry tool.
- 3 Carefully pry down the license plate light using the pry tool.
- 4 Remove the damaged bulb and install a new one to the bulb holder.
- 5 When installing the license plate light, first fit the left side of the license plate light into the groove.
- 6 Push the right side of the license plate lamp upwards with your fingers and hear a "click" sound.
- 7 Connect the negative terminal of the battery.
- 8 Check if the rear license plate light is working correctly.

IMPORTANT
Take extra care so as not to damage the paint surface and clips around the license plate light.

### Washer

#### Washer Fluid Check and Top Up




*Windscreen washer fluid is flammable. DO NOT allow windscreen washer fluid to come into contact with naked flames or sources of ignition.*



*When filling the washer fluid, do not let the washer fluid spill around the powertrain or on the paint surface of vehicle body. In case the washer fluid is spilled on hands or other parts of the body, please immediately wash with clean water.*

Check the washer fluid level regularly. When the level of washer fluid is low, please top up the washer fluid as instructed. Use the washer fluid recommended and certified by the manufacturer. Refer to "Recommended Fluids and Capacities" in the "Technical Data" section.

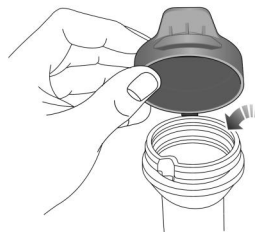


**Note:** *DO NOT use an anti-freeze or vinegar/water solution in the washer reservoir-anti-freeze will damage paintwork while vinegar will damage the washer pump.*

### IMPORTANT

- Use the washer fluid recommended and certified by the manufacturer. Misuse of washer fluid in winter may cause damage to the washer motor due to freezing.
- Operating on the washer switch when there is no washer fluid may cause damage to the washer motor.
- Operating the wipers when the windscreen is dry and there is no washer fluid may cause damage to the windscreen and wiper blades. Please spray the washer fluid and start the wipers when there is adequate washer fluid.

### Washer Nozzles

The windscreen washer nozzles are located on the A/C air intake grille panel in the front compartment, and is configured during the factory settings, so generally there are no need for adjustments. To adjust a washer nozzle, you can insert a small flat-bladed screwdriver in the gap (the black area indicated by the arrow) between the housing ( 1 ) and the nozzle ( 2 ) and turn the nozzle downward or upward slightly to obtain an appropriate ejection angle.

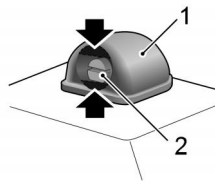

Operate the washer to spray water periodically to check if the washer nozzles are clean and in the correct direction. If the nozzle is obstructed, insert a needle or thin metal wire into the hole to remove the obstruction.


## Wipers

### Wiper Blades

#### IMPORTANT

- Grease, silicon and petroleum products impair the blade's wiping capability. Clean the wiper blades in warm soap water, and check their status periodically.
- Clean the windscreen frequently. DO NOT use wiper blades to remove stubborn or ingrained dirt, it will reduce their effect and their life span.
- If signs of hardness or cracking in the rubber are found, or if the wipers leave streaks or unwiped areas on the windscreen, then the wiper blades should be replaced.
- Clean the windscreen regularly with an approved glass cleaner and ensure the windscreen is thoroughly cleaned before the replacement of wiper blades.
- Only fit the wiper blades that are identical to the original specification.
- Clean ice and snow from the wipers and ensure they are not frozen or otherwise, sticking to the windscreen before attempting to operate them.


### Windscreen Wiper Blade Replacement

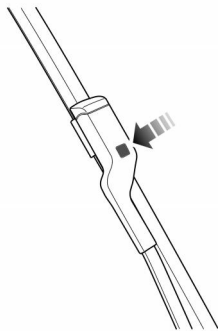

- 1 With the bonnet closed, and within 20 seconds of switching the ignition/vehicle power system to the OFF position, operate the wiper stalk switch by pressing down and releasing, the wipers will sweep and stop in the 'service position' on the windscreen.
- 2 Lift the wiper arm away from the windscreen.
- 3 Press the button on the wiper arm (as illustrated), and pull the upper end of the wiper blade outward to disengage from the wiper arm.
- 4 Unhook the blade from the wiper arm and discard.
- 5 Locate the new wiper into the slot of the wiper arm.
- 6 Push the wiper blade towards the wiper arm until the wiper blade is fully embedded.
- 7 Put the wiper assembly back onto the windscreen, and check whether the wiper blade is fixed correctly onto the wiper arm.
- 8 To exit the service mode and return the wipers to the park position, operate the wiper stalk switch again by pressing down and releasing, alternatively, switch the vehicle power system to the ON position.



## Rear Window Wiper Blade Replacement

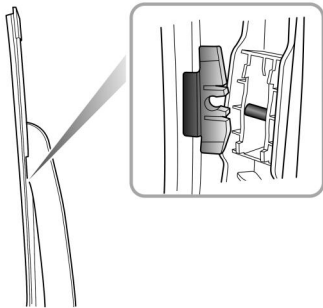

- 1 Lift the wiper arm away from the rear window.
- 2 Pull the wiper blade connector outward with moderate force to separate it from the wiper arm and discard the wiper blade.
- 3 Put the fitting of the new wiper blade into the slot of the wiper arm. Ensure the wiper blade is properly secured on the wiper arm.
- 4 Place the wiper assembly back on the rear window.

### Tyre

tyres/wheels must always be fitted with indication arrow showing the correct "DOR".

#### Overview

- Take extra care when using new tyres for the first 300 300 miles ( 500 km)
- Avoid excessive cornering at speed.
- Where possible, do not allow wheels to bump on/off kerbs, always take extra care when crossing kerbs/driveways.
- Regularly check tyres for damage (cuts, scratches, cracks and pits) and remove any foreign objects from the tread.
- Prevent the tyre from contacting oil, grease and fuel.
- Ensure valve caps are always fitted.
- If the tyre is to be removed always mark the tyre/wheel orientation to ensure correct re-installation.
- Wheels or tyres that have been disassembled should be kept in a cool, dry and light-free place.

#### Directional Tyres

Directional tyres are marked with "direction of rotation" (DOR). To maintain handling characteristics, tyre performance, low road noise and extend tyre life,

## **Service Life of Tyres**

Correct tyre pressure and moderate driving styles can extend tyre life.. Recommendations:

- Check the tyre pressures at least once a month when the tyre is cold;
- Avoid cornering at excessive speeds;
- Regularly check tyres for abnormal wear patterns.
- When the vehicle is to be parked for a long time, the vehicle should be moved at least once every two weeks to prevent permanent deformation of the tyres due to long-term stress.

The following factors affect the tyre life:

### ***Tyre Pressure***

Over or under-inflated tyres will cause the abnormal wear of the tyre, greatly shorten the service life, and have an adverse effect on the driving characteristics of the vehicle.

### ***Driving Style***

Excessively harsh acceleration and braking whilst cornering will reduce tyre life.

### ***Wheel Balance***

The wheels of a new vehicle are subject to dynamic balance testing, but out-of-balance wheels may still be caused due to the effects of various factors in operation.

If wheels are out of balance, shaking or vibration of the steering mechanism may occur and the tyres may start to wear excessively. It is important to restore wheel balance as quick as possible. Each wheel should be rebalanced after installing a new tyre or having a tyre repair.

### ***Wheel Alignment Defect***

Incorrect wheel alignment can cause excessive tyre wear and affect vehicle safety. If the tyres show signs of abnormal wear, check the wheel alignment and seek advice from an MG Authorised repairer.

## Caring for Your Tyres



**USE OF DEFECTIVE TYRES ARE DANGEROUS! DO NOT** drive if any tyre is damaged, excessively worn, or inflated to an incorrect pressure.



**When replacing tyres it is strongly recommended that the new tyres are of the same specification as the original tyres. DO NOT** replace the tyres with tyres of any other type. Alternative tyres, of a different specification, may adversely affect the vehicle's driving characteristics and safety. In order to maintain driving characteristics and safety, it is suggested that you consult an MG Authorised Repairer.

Always drive with consideration for the condition of the tyres, and regularly inspect the tread and side walls for any sign of distortion (bulges), cuts or wear.

**Note: Prevent tyres from coming into contact with oil, grease and fuel.**

## Tyre Pressure



**Before a long distance journey, the tyre pressure must be checked.**

Check the pressures at least every month, when the tyres are cold.

If it is necessary to check the tyres when they are warm, you should expect the pressures to have increased by 30 ~ 40 kPa (i.e. 0.3 ~ 0.4 bar). In this circumstance, NEVER let air out of the tyres in order to match the recommended pressures (cold) in the technical data.

## Valves

Keep the valve caps firmly secured to prevent dirt from entering the valve. Check the valve for leaks (listen for a tell-tale hissing) when you check the tyre pressure.


## Punctured Tyres

Your vehicle is fitted with tyres which may not leak if penetrated by a sharp object, provided the object remains in the tyre. If you are aware of this occurring, reduce speed immediately and drive with caution until the spare wheel can be fitted, or repairs undertaken.

**Note:** *If the sidewall of the tyre is damaged or distorted, replace the tyre immediately, do not attempt to repair it.*

### **Tyre Wear Indicators**

The tyres fitted as original equipment have about 2.0 mm-high wear indicators at their tread pattern bottom, vertical with the wheel rolling direction and evenly distributed around the circumference. The mark on the tyre side such as capital letters TWI or triangular symbol shows the location of wear indicator.

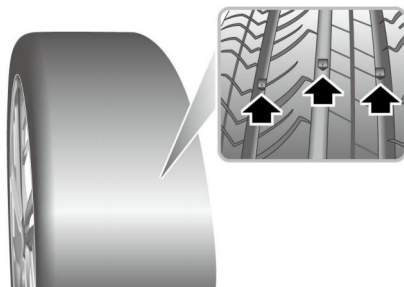

When the tread has worn down to 2.0 mm or below, the indicators will come to the surface of the tread pattern, producing the effect of a continuous band of rubber across the width of the tyre.

#### **IMPORTANT**


A tyre **MUST** be replaced as soon as a wear mark becomes visible. Otherwise there may be a risk of accidents.

### Wheel Fitment Rotation

It is recommended that you swap wheels at irregular intervals in order to equalise tyre wear.

When the tyres are worn seriously, it is recommended to swap the front and rear wheels as shown in illustration. This can prevent tyres from uneven wear, prolong the life span and balance tyre fatigue.

It is favorable to swap the driving wheels from front to rear and exchange non-driving wheels across.

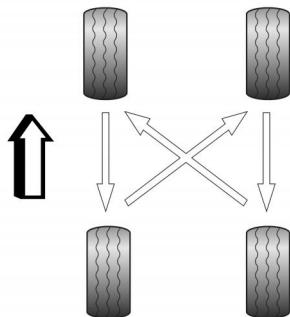

**Note:** *Directional tyres (identified from the arrow on the tyre side) CANNOT be swapped from side to side.*

**Note:** *TPMS self-learning is required after the wheel fitment rotation. Please consult an MG Authorised Repairer for details.*

## Tyre/Snow Chains

Unsuitable tyre/snow chains may damage the tyres, wheels, suspension, brakes or bodywork of your vehicle.

Please pay attention to the following requirements in the usage:

- The tyre/snow chains can only be fitted on the front wheels;
- The thickness of tyre/snow chains must not exceed 15 mm;
- Please always observe the installation and tension instructions for the tyre/snow chains, as well as the speed limitations of different roads;
- Please avoid driving styles where heavy braking, sharp turns, etc are required with tyre/snow chains installed.
- If there are abnormal sounds during the use of tyre/snow chains, please park the vehicle in a safe area as soon as possible to check the chassis.
- Do not drive faster than 25 mph ( 40 km/h);
- To avoid the tyre damage and excessive wear of the tyre/snow chains, the tyre/snow chains must be removed while driving on the road without snow.

### Size and Specifications of Wheels and Tyres Supporting Tyre/Snow Chains for This Vehicle

Wheel Rim Size	5.5J×15
Tyre Size	185/65 R15 88H

**Note:** Please ensure the specifications of tyres and rims of the vehicle are the same as those listed in the above table prior to purchasing tyre/snow chains, otherwise tyre/snow chains cannot be fitted.

**Note:** If you often drive on snow covered and icy roads, it is recommended to use winter tyres. Please consult an MG Authorised Repairer for details.

### Cleaning and Caring



***Observe all safety precautions on cleaning products; Do Not drink fluids and keep them away from the eyes.***

### Exterior

#### Washing Your Car



***In order to prevent accidents you should only clean your car when the power system is OFF.***



***Do not clean the front compartment with high pressure water since it may damage the electrical system of the vehicle.***

In order to preserve the paint finish on your car, please observe the following care points:

- DO NOT use hot water to wash the car.
- DO NOT use detergents or washing up liquid.
- In hot weather, DO NOT wash the car in direct sunlight.
- When using a hose, DO NOT aim the water directly at window, door or sunroof seals, or through wheel apertures onto the brake components.

If the car is particularly dirty, use a hose to flush grime and grit from the bodywork, prior to washing. Then, wash the car using cold or lukewarm water containing a good quality wash and wax shampoo. Always use plenty of water to ensure that grit is flushed from the surface and not ground into the paintwork. After washing, rinse the bodywork with clean water and dry off with a chamois leather.

#### Cleaning the underside



***Do not clean the front compartment with high pressure water since it may damage the electrical system of the vehicle.***

From time to time, but particularly during winter months when salt has been used on the roads, use a hose to wash the underside of the car. Flush away accumulations of mud and thoroughly clean those areas where debris can easily collect (wheel arches and panel seams, for example).



## IMPORTANT

- Avoid cleaning the vehicle in direct sunlight.
- When cleaning the vehicle in winter avoid spraying water directly onto door locks and panel gaps due to risk of icing.
- Do not use rough sponges or cloth to clean the car, this will damage the paintwork finish.
- When cleaning the headlamps do not use a dry cloth or sponge, use only warm soapy water.

### ***Cleaning with High Pressure Cleaner***

Always read the manufacturers operating instructions.

When using high pressure washers, always ensure there is adequate distance between the spray nozzle and any soft materials, decals or rubber seals.

**Note:** *DO NOT direct the pressure washer nozzle directly toward the high voltage components or high voltage connections.*

## IMPORTANT

- Please pay attention to the operating instructions of high pressure cleaner.
- Soft parts on the vehicle should be kept in a large enough distance from the high pressure cleaner.

### **Polishing the Paintwork**

Occasionally treat the paint surface with an approved polish containing the following properties:

- Very mild abrasives to remove surface contamination without removing or damaging the paint.
- Filling compounds that will fill scratches and reduce their visibility.
- Wax to provide a protective coating between the paint and the elements.

**Note:** *If possible, avoid applying polish or wax products to window glass and rubber seals.*

### **Matte paint**

Matte paint is a special kind of coating, and special care should be taken when washing cars and caring for them.

It is recommended to wash the car by hand and do not use a rough sponge or car wash cloth. When cleaning and wiping, do not use excessive force. Avoid washing your car in direct sunlight.

- Do not use a high pressure water jet or steam to clean the vehicle. If the vehicle is quite dirty, it is necessary to pre-clean the car before washing it. Clean the body dust and other particles that may damage the paint surface first.
- Spray the body with plenty of clean water and dry the body after washing it from the roof downwards using a soft sponge and neutral wax-free car wash solution.

During the daily care of your car, attention shall also be paid to:

- If the paint film comes into contact with resin or grease, as well as insect residue or bird excrement, remove it immediately to avoid irreversible damage to the matte paint surface.
- If there are oil stains or fingerprints on the matte paint surface, remove them immediately with a clean cloth, do not use excessive force to avoid irreversible damage to the matte paint surface.

- In order to maintain the matte effect of the paint surface, abrasives, polishes and polishing waxes cannot be used, and the body cannot be polished.
- Do not use any stickers, patches, magnets or similar to prevent damage to the paint surface.
- Be sure to repair the paint film in a qualified professional repair workshop.

### Wiper Blades

Wash in warm soapy water. DO NOT use spirit or solvent based cleaners.

### Windows and Mirrors

Regularly clean all windows, inside and out, using an approved glass cleaner.

**Windscreen:** In particular, clean the outside of the screen with glass cleaner after washing the car with wash and wax products, and before fitting new wiper blades.

**Rear screen:** Clean the inside with a soft cloth, using a side to side motion to avoid damaging the heating elements.

**Mirrors:** Wash with soapy water. Use a plastic scraper to remove ice. DO NOT use abrasive cleaning compounds or metal scraper.

### Plastic Components

Any plastic components should be cleaned using conventional cleaning methods and not be treated with abrasive materials.

### Paint Damage

Any paint damage or stonechips should be treated with suitable paint/lacquer materials immediately to avoid invalidating the Anti Corrosion Warranty.

### Weather Strips

Any weather strips or rubber aperture seals should be treated with suitable materials (silica gel) if they are cleaned using strong detergents, this should avoid any sticking and maintain the service life of the seal.

### Wheels



***When cleaning the wheels any materials or water that contact the brake.***

In order to ensure the wheels are kept in optimum condition they should be cleaned regularly.

Only use a recommended non-acidic propriety wheel cleaner. Always read the instructions on the product.

## Cleaning the Interior

### Plastic materials

Clean plastic-faced materials with diluted upholstery cleaner, then wipe with a damp cloth.

**Note:** *DO NOT polish dashboard components – these should remain non-reflective.*

### Carpet and fabrics

Clean with diluted upholstery cleaner - test a concealed area first.

### Leather

Clean leather trim with warm water and a non-detergent soap. Dry and polish the leather with a dry, clean, lint-free cloth.

**Note:** *DO NOT use petrol, detergents, furniture creams or polishes as cleaning agents.*

### Instrument Pack, Infotainment Display

Clean with a dry cloth only. DO NOT use cleaning fluids or sprays.

## Airbag Module Covers



**DO NOT allow these areas to be flooded with liquid and DO NOT use petrol, detergent, furniture cream or polishes.**

To protect damage to the airbag SRS, the following areas should be cleaned sparingly with a damp cloth and upholstery cleaner ONLY:

- Steering wheel centre pad.
- Area of dashboard containing the passenger airbag.
- Area of roof lining and front pillar finishers which enclose the side head impact protection modules.

## Seat Belts



**DO NOT use bleaches, dyes or cleaning solvents on seat belts.**



Extend the belts, then use warm water and a non-detergent soap to clean. Allow the belts to dry naturally; DO NOT retract them or use the car until they are completely dry.

## ***Technical Data***

---

<i>Technical Data Dimensions</i>	318
<i>Vehicle Weights</i>	320
<i>Main Engine Parameters</i>	324
<i>Dynamic Performance Parameters</i>	326
<i>Parameters of Drive Motor*</i>	327
<i>Recommended Fluids and Capacities</i>	328
<i>Wheel Alignment (Unladen Condition)</i>	329
<i>Wheels and Tyres</i>	330
<i>Tyre Pressure (Cold)</i>	331

## Technical Data Dimensions

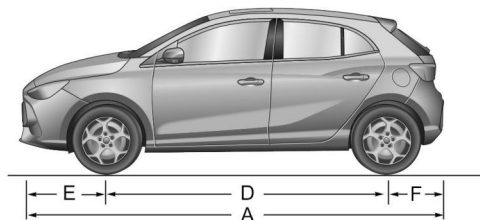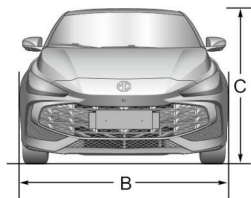

Item, unit	Parameter	
	GS62H 1.5L HT II	GS64 1.5L CVT/GS64 1.5L MT
Overall length A , mm	4113	
Overall width B , mm	1797	
Overall height C (unladen), mm	1502	
Wheelbase D , mm	2570	
Front overhang E , mm	892	

## TECHNICAL DATA

Item, unit	Parameter	
	GS62H 1.5L HT11	GS64 1.5L CVT/GS64 1.5L MT
Rear overhang F , mm	651	
Front wheel track, mm	1524/1514 ( 15 " / 16 " tyres)	
Rear wheel track, mm	1545/1535 ( 15 " / 16 " tyres)	
Minimum ground clearance(laden),mm	116.8	120
Minimum turning circle diameter, m	10.5	
Fuel tank capacity, L	36	45

**Note:** Vehicle length not including the license plate.

**Note:** Rearview mirrors and the deformed portion of tyre wall directly above the touchdown point are not included in the total width.

## Vehicle Weights



Item, unit	Parameter						
	GS62H 1.5L HT11 TL1	GS62H 1.5L HT11 TL2	GS62H 1.5L HT11 TL3	GS64 1.5L CVT TL2/GS64 1.5L CVT TL3	GS64 1.5L MT TL0/GS64 1.5L MT TL1	GS64 1.5L CVT TL0/GS64 1.5L CVT TL1	GS64 1.5L CVT TL2
Person in cab, person	5						
Unladen vehicle weight (kerb), kg	1285	1298	1308	1199	1130	1170	1188
Gross vehicle weight, kg	1733	1746	1766	1657	1543	1594	1611
Unladen front axle weight, kg	816	824	831	824	707	743	754



## TECHNICAL DATA

Item, unit	Parameter						
	GS62H 1.5L HT11 TL1	GS62H 1.5L HT11 TL2	GS62H 1.5L HT11 TL3	GS64 1.5L CVT TL2/GS64 1.5L CVT TL3	GS64 1.5L MT TL0/GS64 1.5L MT TL1	GS64 1.5L CVT TL0/GS64 1.5L CVT TL1	GS64 1.5L CVT TL2
Unladen rear axle weight, kg	469	474	477	474	423	427	434
Laden front axle weight, kg	926	935	946	935	818	859	870
Laden rear axle weight, kg	807	811	820	811	725	735	741

## Towing Weights

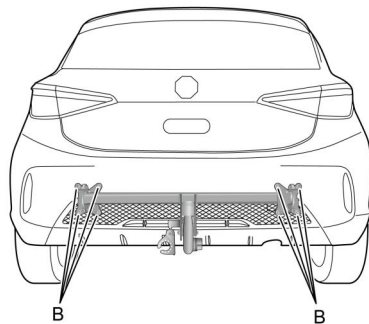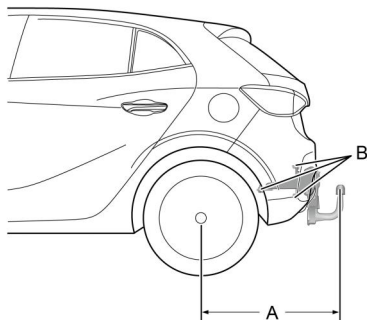

Item, Units	Parameters
Towing limit unbraked, kg	500
Towing limit braked, kg	500
Towing hitch load, kg	75

## TECHNICAL DATA

Item, Units	Parameters
Wheel centre to centre of tow ball A , mm	1067
Towing device mounting points	B

**Note:** When towing a trailer, the vehicle speed **MUST** not exceed 62 mph (100km/h).

**Note:** Prior to towing a trailer, please check the rear tyre pressures, inflate to at least 20 kPa ( 0.2 bar) above the recommended pressure - **DO NOT** allow the tyre pressure to exceed 300 kPa ( 3.0 bar), this can be dangerous.

## Main Engine Parameters

Item, unit	Parameter	
	GS64	GS62H
Bore × Stroke, mm × mm	73.5×88.1	72×92
Total displacement, L	1.495	1.498
Compression ratio	11.6±0.4	16.0±0.5
Maximum net power, kw	81	75
Engine speed at maximum power, rev/min	6000	6000
Maximum torque, Nm(Australia & New Zealand)	140	-
Maximum torque, Nm(South Africa)	142	-
Maximum torque, Nm(UK)	-	128
Engine speed at maximum torque, rev/min	4500	4500
Fuel grade, RON(Australia & New Zealand)	RON 91 unleaded petrol and above	-

## TECHNICAL DATA

Item, unit	Parameter	
	GS64	GS62H
Fuel grade, RON(South Africa)	RON 92 unleaded petrol and above	-
Fuel grade, RON(UK)	-	RON 95 unleaded petrol and above

### Dynamic Performance Parameters

Item, unit	Parameter		
	GS62H 1.5L HT II	GS64 1.5L CVT	GS64 1.5L MT
Maximum speed, km/h	170	179	185
Gradeability, %	30	30	30

**Note:** *The dynamic performance parameters are test data under specific conditions.*

**Note:** *Gradeability is affected by different road surfaces, tyre pressures, tyre tread depth and vehicle load.*

## Parameters of Drive Motor\*

Item	Front drive motor
Motor type	Permanent magnet synchronous motor
Rated Power/Peak Power, kW	TM:50/100 GM:45/60
Rated Torque/Peak Torque, Nm	TM:250 GM:140
Rated Speed/Maximum Speed, rpm	TM:5026/13000 GM:7162/13000
Protection Grade	IP67

**Recommended Fluids and Capacities**

Name	Grade	Capacity
Engine oil (after-sales replacement), L	C5&SP 0W-20	4
Engine coolant, L	Glycol (OAT)	6.4(GS62H) 6.2(GS64)
Drive motor coolant, L		3.4
Hybrid transmission oil, L	Castrol BOT794	1.5
Manual transmission oil (MT), L	Castrol BOT503	1.8
Auto transmission oil (CVT) , L	Shell SL-2100	6.86
Brake fluid, L	DOT 4	0.8
Washer fluid, L	Original MG Motor windscreen washer fluid	2.5
Air conditioning refrigerant, g	R-1234yf/R134a	520



## Wheel Alignment (Unladen Condition)

Item, unit		Parameters
Front Wheels	Camber Angle	$-27 \pm 45$
	Castor Angle	$5^{\circ} 52 \pm 45$
	Toe-in Angle (total toe-in)	$6 \pm 12$
	King Pin Inclination	$13^{\circ} 21 \pm 45$
Rear Wheels	Camber Angle	$-1^{\circ} 25 \pm 45$
	Toe-in Angle (total toe-in)	$12 \pm 15$

## TECHNICAL DATA

### Wheels and Tyres

Wheel Rim Size	5.5J×15	6.0J×16
Tyre Size	185/65 R15 88H	195/55 R16 87H
Spare Wheel*	Wheel Rim Size	4B×16
	Tyre Size	T115/70R16 92M

**Tyre Pressure (Cold)**

Wheels	All Conditions
Front Wheels	250kPa/2.5bar/37psi
Rear Wheels	250kPa/2.5bar/37psi
Spare Wheel*	420kPa/4.2bar/60psi